## **Smart Radiator Thermostat**

User Manual

# Smart Radiator Thermostat

## Preparation

#### System Requirements

For controlling Smart Radiator Thermostats a Central Control Unit is needed. For instructions on installing these products please see the Technical Handbook at www.wavin.com/Sentio.

Limitations	Мах		
Rooms available on the Central Control unit			
<ul> <li>Rooms total</li> </ul>	24		
(with extension module or via commissioning tool)			
<ul> <li>Number of thermostats and sensors</li> </ul>	24		
<ul> <li>Smart Radiator Thermostats</li> </ul>	16		
Compatibility			
M28 and M30 valves	Art. 4063805		
RA valves	Art. 4063804		

#### **Technical Information**

Radio frequency	868.5 MHz
Power supply	3 x AA Alkaline 1.5V Battery
Battery life	Up to 3 years
Dimensions	L = 85 mm, ø = 50 mm
IP protection	IP30
Operation environment	0°C - 40°C
Ambient humidity	Humidity 5 - 95%
Storage temperature	-10°C - 40°C
Valve stroke	Max. 4.5 mm

#### Compliance

Installation must comply to (local) guidance and regulation. The Smart Radiator Thermostat is developed in Europe and is CE approved according to following EU directives:

2014/53/EU, 2014/35/EU, 2014/30/EU and 2011/65/EU


Safety: ETSI EN 300 220-1 V3.1.1:2017; ETSI EN 300 220-2 V3.2.1:2018 EN 60730-1:2011; EN 60730-2-8 ed 2:2002/A1; EN 55016-2-3 ed.4:2017; EN 55032 ed 2:2016; EN 61000-4-2 3d 2:2008; EN 61000-4-3 ed 3:2006/A1/A2; EN 61000-4-8 ed 2:2010; EN 61000-6-1 ed 3:2019; EN61000-6-3 ed 2: 2007/A1.



Dispose of the device and batteries according to local regulations.

# Connect


Situations in which the Smart Radiator Thermostat can be used:

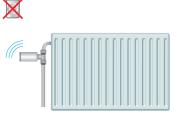

1. Stand alone.



2. Dependent on room thermostat to compensate for reduced temperature measurement accuracy.

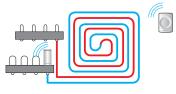


3. Wireless actuator function on a manifold.

For more detailed instructions follow the Technical Handbook at www.wavin.com/Sentio.

#### Adapter M28 / M30

#### Adapter RA

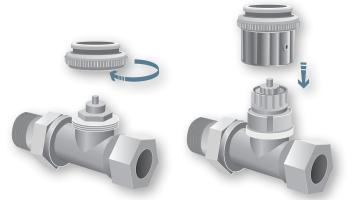

Check the valve compatibility list at www.wavin.com/Sentio.



O Mounted in

 horizontal position
 Radiator Thermostat is not covered

Add room thermostat

Mounted verticalCovered by objects

To use the Smart Radiator Thermostat as an underfloor heating actuator, set the output to "Underfloor" in the commissioning tool.

Hidden behind curtainsIn direct sunlight

in case:

## User Manual


With the correct adapter connected, click the Smart Radiator Thermostat on the radiator.



### Set

To enroll the Smart Radiator Thermostat to the Central Control unit, select one of the 8 channel outputs on the unit and insert the batteries in the device. Or enroll via the Commissioning tool as instructed in the Technical Handbook.

When the Smart Radiator Thermostat is installed and enrolled the battery cover can be closed, this will start the automatic calibration sequence where the Smart Radiator thermostat adapts to the thermostatic valve.

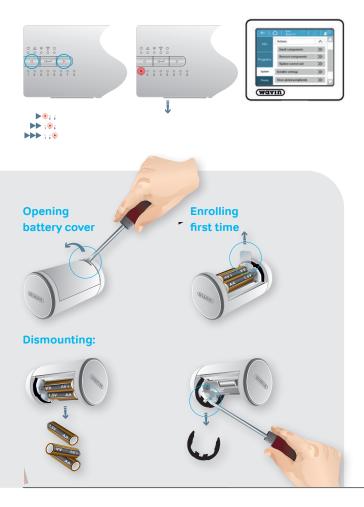

## Go!



#### Warnings

5		eled meaning →	
Signals		Meaning	(Wavin)
Yellow	۲	Battery almost empty	
Green	٢	Enrolling successful*	
Red	٢	Lost signal	
		Battery cover open	
		Valve detection not yet finisl	hed

\* Only available with Smart Radiator Thermostat firmware version 4.0 or higher





Wavin is part of Orbia, a community of companies working together to tackle some of the world's most complex challenges. We are bound by a common purpose: To Advance Life Around the World. **Wavin B.V.** World Trade Center (WTC) | Wavin Tower F9 Schiphol Boulevard 425 | 1118 BK Schiphol The Netherlands | Internet www.wavin.com | E-mail info@wavin.com

© 2023 Wavin Wavin reserves the right to make alterations without prior notice. Due to continuous product development, changes in technical spefications may change. Installation must comply with the installation instructions.