




EasyGuard™ Clean & Care.

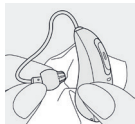


Clean daily with a lint-free cloth. Remove any earwax accumulated at the tip.

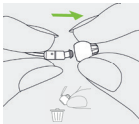

Replace EasyGuard™ every 3 months or when it becomes stiff or brittle.

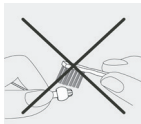

Do not use any sharp objects or brush for cleaning, as they may damage EasyGuard™.

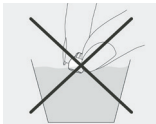

Do not put EasyGuard™ in water. Water caught inside the earpiece may damage the receiver.



phonak.com/support-easyguard