



SAFE ACTION® PISTOLS



EN
10-25

⚠ WARNING Read this manual carefully before handling, loading, or using your GLOCK pistol.

⚠ WARNING Like most modern handguns your GLOCK pistol is designed without a conventional manual safety. Therefore you must consider it to be loaded and ready to fire until you have removed the magazine and visually and physically (with your finger) confirmed that the chamber is empty. Even after you have confirmed that the pistol is unloaded, you should continue to handle it as if it were loaded at all times, never pointing it at yourself or anyone else, or in any other unsafe direction.

51959

Firearms safety rules

Read this manual and the warnings contained in it before handling, loading, or using your GLOCK pistol. This manual explains the function and the handling of your GLOCK pistol and warns of the potential dangers, including death and serious personal injury, that can result from the unsafe use of your GLOCK pistol. This manual should always accompany your GLOCK pistol and be transferred with your GLOCK pistol if it is sold, given, or loaned to another person.

We want you to enjoy shooting your GLOCK pistol, but we want you to enjoy it safely. Whether you are an experienced shooter or have never handled a firearm before, you must READ THIS ENTIRE MANUAL CAREFULLY before handling, loading, or firing your GLOCK pistol. This manual gives basic instructions on the proper handling and functioning of your GLOCK pistol. Your safety and the safety of others depends on you following the instructions and warnings in this manual and constant use of safe firearms practices. If you are unfamiliar with firearms, take a course in the safe handling of firearms run by a qualified firearms instructor, your local gun club, or a similar qualified organization.

This manual contains several safety warnings and instructions preceded with **⚠ WARNING**, **⚠ CAUTION** or **NOTICE**. These signal words are designed to draw your attention to important safety information. **⚠ WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious personal injury. **⚠ CAUTION** indicates a hazardous situation, which, if not avoided, could result in moderate or minor personal injury. **NOTICE** addresses safety practices not related to personal injury.

The higher level of preparedness required of law enforcement, security, and military personnel may override several of the following safety instructions. To provide safety while operating at a higher level of preparedness, proper initial combat oriented training and a reasonable amount of periodic training, which stresses safe tactical procedures are recommended.

⚠ WARNING Failure to follow the safety information and safety instructions in this manual could result in death, serious personal injury and/or property damage.

⚠ WARNING Always seek a doctor's advice if you are taking medication to be sure that you are able to shoot and handle a firearm safely. Never drink alcoholic beverages or take drugs before or while shooting. Your vision, balance, coordination and judgement could be seriously impaired, making your firearm handling unsafe.

⚠ WARNING If your GLOCK pistol or any other firearm is carelessly or improperly handled, you could cause a unintentional discharge, which could result in death, serious personal injury and/or property damage.

⚠ WARNING Always handle your GLOCK pistol as if it is loaded so that you never fire unintentionally.

⚠ WARNING Always keep your firearm pointed in a safe direction.

⚠ WARNING Never pull the trigger or put your finger on the trigger or in the trigger guard until you have made the decision to fire.

⚠ WARNING Never take anyone's word that a firearm is unloaded; always check for yourself, with the firearm pointed in a safe direction and your finger off of the trigger and outside of the trigger guard. See chapter 6 (pages 15 – 16) for the proper procedure to do this.

⚠ WARNING Always make sure your GLOCK pistol is unloaded and that the slide is locked open in the rearward position with the magazine taken out before handing it to another person. See chapter 6 (pages 15 – 16) for the proper procedure to do this.

⚠ WARNING Never alter or modify your GLOCK pistol because this could cause it to malfunction and create a dangerous condition.

⚠ WARNING Never carry your GLOCK pistol out of a suitable holster with a cartridge loaded in the chamber.

⚠ WARNING To store your GLOCK pistol, first unload it as described in Chapter 6. Then, after checking to make sure it is unloaded (magazine removed and chamber empty), use the cable lock provided to secure your pistol, and place it in the included pistol case or a suitable locked container.

⚠ WARNING Always store and transport your GLOCK pistol unloaded, secured with the cable lock provided, and locked in a suitable container, out of the reach and sight of children or other unauthorized persons.

⚠ WARNING Never store or transport ammunition in the same container as your GLOCK pistol.

⚠ WARNING

Most ammunition contains lead in the projectile and/or primer. Lead is a toxic (poisonous) substance that can cause serious injury, death, birth defects in infants, and other ailments. Firing your GLOCK pistol in a poorly ventilated area can lead to exposure to lead. Always wash your hands after handling ammunition, firing your GLOCK pistol, and/or performing preventive maintenance on your GLOCK pistol to minimize your exposure to lead.

⚠ WARNING

The manufacture, possession, sale or transfer of Machine Gun Conversion devices (MCDs) are prohibited by U.S. federal law as well as many state laws. Violations of these laws are subject to criminal penalties.

Before it left the factory, your GLOCK pistol was tested, carefully inspected, and packaged. GLOCK, cannot control what happens to the pistol after it leaves the factory, therefore, carefully examine your GLOCK pistol when you acquire it to ensure that it is unloaded and undamaged.

If you need another copy of this manual, do not understand any of the warnings and instructions in this manual, or if you have any problems operating your GLOCK pistol, contact the GLOCK entity for your region.

INTERNATIONAL

GLOCK Ges.m.b.H.
Gaston Glock-Platz 1, 2232 Deutsch-Wagram,
Austria
Tel.: +43(0)2247 90 300-0
E-Mail: sales@glock.at

US AND CANADA

GLOCK Inc.
6000 Highlands Parkway, Smyrna, GA 30082,
U.S.A.
Tel.: +1 770-432-1202
E-Mail: glockcustomerservice@glock.us

Table of contents

06	I.	Pistol Nomenclature
07	II.	GLOCK Pistol Set
08	III.	Loading
10	IV.	Firing
13	V.	Clearing Malfunctions (Jams)
15	VI.	Unloading Procedure and Safety Check
17	VII.	Field Stripping
21	VIII.	Preventive Maintenance and Inspection
29	IX.	Reassembly and Inspection
32	X.	Component Parts
33		Exploded Drawing GLOCK 17 Gen6
34	XI.	Pistol Customizing
36	XII.	Cable Lock and Storage (USA and Canada only)
37		Youth Handgun Safety Act Notice (only USA)
40		State Required Safety Warnings (only USA)

Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33.

I. Pistol Nomenclature



Pistol Model Specifications

US AND CANADA



us.glock.com/en/products/commercial-firearms

INTERNATIONAL



eu.glock.com/en/Products/Pistols

II. GLOCK Pistol Set

- ❑ GLOCK Safe Action® pistol including 1 magazine
- ❑ Magazine speed loader
- ❑ Spare magazine(s) (US and Canada include 2 spare magazines)
- ❑ Cleaning set (rod with patch holder and brush)
- ❑ Instructions for use manual
- ❑ Adapter plate(s), if applicable
- ❑ Pistol case (for storage and transport)
- ❑ Beavertail or backstrap set, if applicable
- ❑ Cable lock (USA and Canada only)
- ❑ The Basic Rules of Firearm Safety brochure (USA and Canada only)



III. Loading



⚠ WARNING Your GLOCK pistol does not have a conventional manual safety and it will fire if the trigger is pulled when there is a round in the chamber, even with the magazine removed.

⚠ WARNING Do not use reloaded, remanufactured, or handloaded ammunition because it may not meet applicable SAAMI, CIP or NATO standards and could cause death, serious personal injury, and/or damage to the pistol. Only use high quality commercially manufactured ammunition in the same caliber as your GLOCK pistol. (Note: Use of reloaded, remanufactured, or handloaded ammunition will void the warranty). The caliber of your GLOCK pistol is marked on the pistol's barrel.

⚠ WARNING Before firing your GLOCK pistol, run a clean patch through the barrel, from the chamber end, using the cleaning rod. Repeat this procedure until the patch comes out of the barrel with no gun oil or lubricant on it because any obstruction in the barrel could prevent the pistol from firing properly and result in death or serious personal injury and/or damage to the pistol.

To load the magazine, press each cartridge into the magazine from the front with the cartridge bottom first – against the force of the magazine spring (Pictures 1-2).

Insert the magazine into the magazine well until the magazine catch (19) locks into place (Picture 3). (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).

If the slide (1) is in the forward position, hold your GLOCK pistol with your firing hand and, while keeping your finger off of the trigger and outside of the trigger guard, grasp the rear of the slide at the serrations with your other hand and pull the slide fully back (Picture 4) and then release it, allowing it to return to the fully forward position (Picture 5).

or

If the slide is locked in the rearward position, either press the slide stop lever (27) down to release the slide and return it to the fully forward position or grasp the rear of the slide at the serrations with your other hand and pull the slide fully back and then release it, allowing it to return to the fully forward position.

The pistol is now loaded and ready to be fired by pulling the trigger.



IV. Firing

⚠ WARNING Always be sure that the barrel of your GLOCK pistol is clear of obstructions before firing it. Keeping the weapon pointed in a safe direction, remove any obstruction, including any excess lubricants, before firing your GLOCK pistol so that it will function safely and correctly. Any obstruction in the barrel could prevent the pistol from firing properly and result in death or serious personal injury and/or damage to the pistol.

⚠ WARNING In case of a failure to fire, continue to hold your GLOCK pistol pointed towards the target for at least 30 seconds. If a hangfire (slow ignition) has occurred, the cartridge should fire within approximately 30 seconds. If the cartridge has not fired, remove the magazine, eject the cartridge from the chamber and examine its primer. If the firing pin indentation is light, off-center, or non-existent, stop using your GLOCK pistol and have it examined by the GLOCK entity for your region or a GLOCK-Certified Armorer. If the firing pin indentation on the primer appears normal (compared to similar previously fired cartridges) the cartridge may be defective. Separate the cartridge from other live ammunition and empty cases, reload your GLOCK pistol and resume firing. (Note: Dispose of misfired cartridges in accordance with the ammunition manufacturer's instructions).

⚠ WARNING Never use your GLOCK pistol if it fails to function properly, and never force the slide closed on a jammed cartridge because it could cause the cartridge to explode.

⚠ WARNING Always wear adequate safety glasses when firing your GLOCK pistol to protect your eyes. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Unprotected eyes can be injured by fragments expelled from the pistol, ejected cartridge cases, ruptured cartridge cases, splash back from targets, target frames or backstops.

⚠ WARNING Always wear adequate ear protection when firing your GLOCK pistol to protect your hearing. Ear protection should, at a minimum, provide a noise reduction rating (NRR) of 24 Db (24 decibels). Unprotected exposure to gunshot noise can cause permanent hearing loss or tinnitus (ringing in the ears).

⚠ WARNING Always be sure that your backstop is adequate to stop and contain bullets before firing so that you do not hit anything outside of the shooting range area. A bullet could travel through or past your target as far as 2 miles (approximately 3km). If in doubt, do not shoot.

⚠ WARNING Never shoot at a hard surface, such as a rock, or a liquid surface, such as water, because a bullet may ricochet and travel in any direction, striking you or someone else.

⚠ WARNING Your GLOCK pistol does not have a conventional manual safety and it will fire if the trigger is pulled when there is a round in the chamber, even with the magazine removed.

⚠ WARNING Hot gasses and powder are forcefully expelled from the ports on top of the slide of GLOCK C (Compensated) model pistols when they are fired. Never place your hand on top of the slide and make certain that no part of your body is near or above the ports on the barrel when firing.

⚠ WARNING Always put a responsible and competent person in charge to maintain safety, discipline and control when a group is firing at a range, to reduce the likelihood of a unintentional discharge.

⚠ WARNING Always carry your GLOCK pistol unloaded with the slide locked open in the rearward position while on a range until preparing to fire. Always keep the pistol pointed towards the backstop when loading, firing and unloading it.

⚠ CAUTION When ready to fire, be sure that the area behind the slide is clear (check your thumb) and do not hold the pistol near your body, because the slide will move forcefully rearward when the pistol is fired. (Note: When firing with a two-hand grip, the thumb of the weak hand should be on the weak hand side of the pistol, never behind the slide).

⚠ CAUTION Always keep yourself and others clear of the ejection port because spent cartridges are hot and are ejected with enough force to cause injury. Never touch the slide or barrel immediately after firing because they may be hot and could cause burns.

⚠ CAUTION Except when the slide is locked in the fully rearward position and you are checking to ensure that the chamber is empty, never place your fingers in the ejection port because they could be injured by the movement of the slide.

⚠ CAUTION Never fire your GLOCK pistol near an animal unless it is trained to accept that noise. An animal's startled reaction could injure it, or cause it to injure you or someone else.



When the pistol is loaded with a cartridge in the chamber, it can be fired by simply pulling the trigger (26) fully to the rear. (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).

After firing the last cartridge in the magazine, the slide (1) will remain locked open in the rearward position (Picture 6). (Note: If you are firing your GLOCK pistol without a magazine inserted, the slide will not remain locked open in the rearward position after firing).

V. Clearing Malfunctions (jams)

⚠ WARNING In case of a failure to fire, continue to hold your GLOCK pistol pointed towards the target for at least 30 seconds. If a hangfire (slow ignition) has occurred, the cartridge should fire within approximately 30 seconds. If the cartridge has not fired, keep the weapon pointed in a safe direction, remove the magazine, eject the cartridge from the chamber and examine its primer. If the firing pin indentation is light, off-center, or non-existent, stop using your GLOCK pistol and have it examined by the GLOCK entity for your region or a GLOCK-Certified Armorer. If the firing pin indentation on the primer appears normal (compared to similar previously fired cartridges) the cartridge may be defective. Separate the cartridge from other live ammunition and empty cases, reload your GLOCK pistol and resume firing. (Note: Dispose of misfired cartridges in accordance with the ammunition manufacturer's instructions).

⚠ WARNING If an unfired cartridge hangs up, jams or binds while being chambered, do not attempt to force it into the chamber by pushing or striking the slide to attempt to close it because this could cause the cartridge to burst, resulting in fragments of the cartridge flying out of the ejection port with sufficient force to cause death, serious personal injury and/or property damage.

⚠ WARNING Always wear safety glasses when attempting to remove a jammed cartridge to protect your eyes, and turn the pistol's ejection port away from you keeping the muzzle pointed in a safe direction.

All auto-loading pistols may occasionally experience a malfunction (jam) related to the feeding of ammunition. Most malfunctions are caused by improper ammunition, an improper grip on the pistol when shooting (limp wristing), improper cleaning or lubrication, or a damaged magazine. To minimize the chance of malfunctions (jams), regularly perform preventive maintenance on your GLOCK pistol pursuant to the instructions in Chapter 8 of this manual. If you experience a malfunction (jam) while using a new brand, type, or lot of ammunition, try firing another type of ammunition to determine whether the ammunition was the source of the malfunction (jam).

⚠ WARNING Do not use reloaded, remanufactured, or handloaded ammunition because it may not meet applicable SAAMI, CIP or NATO standards and could cause death, serious personal injury, and/or damage to your pistol. Only use high quality commercially manufactured ammunition in the same caliber as your GLOCK pistol. The caliber of your GLOCK pistol is marked on the pistol's barrel. (Note: Use of reloaded, remanufactured, or handloaded ammunition will void the warranty).

If a cartridge becomes jammed while being chambered or extracted, follow the steps below to remove it.

While keeping the muzzle of your GLOCK pistol pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge), remove the magazine if possible by pressing the magazine catch (19). (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).

While holding the grip with your firing hand, with your finger off of the trigger (26) and outside of the trigger guard, grasp the rear of the slide (1) at the serrations with your other hand and pull the slide fully back.

Lock the slide in the rearward (open) position by pushing up on the slide stop lever (27) and slowly releasing the slide from the fully rearward position until it locks in the open position.

If the above steps have not removed the jammed cartridge, carefully remove the jammed cartridge from the chamber using your fingers or a pointed wooden dowel.

⚠ WARNING

Always wear proper eye protection while attempting to remove a jammed cartridge from the pistol. Do not use a metal tool to attempt to remove an unfired cartridge because it could ignite the primer and cause the cartridge to rupture, resulting in fragments of the cartridge flying out of the ejection port with sufficient force to cause death, serious personal injury and/or property damage.

If you are unable to remove the jammed cartridge using the above steps, leave the slide locked in the rearward (open) position and contact the GLOCK entity for your region or a GLOCK-Certified Armorer or licensed gunsmith.

VI. Unloading Procedure and Safety Check

⚠ WARNING If the trigger is in the forward position, your GLOCK pistol may be loaded.

⚠ WARNING Although your GLOCK pistol has a loaded chamber indicator, the indicator is a mechanical device, which could fail. Never rely solely on a loaded chamber indicator or your memory to determine whether your GLOCK pistol is loaded or unloaded. Always remove the magazine, retract and lock the slide by pulling it fully to the rear and pushing up on the slide stop lever to lock the slide open, and then visually and physically (with your finger) check to make sure there is not a cartridge in the chamber.

⚠ WARNING It is possible that a cartridge may be in the chamber when a magazine is being removed from or inserted into your GLOCK pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your GLOCK pistol. Never leave your GLOCK pistol unattended, even when the magazine is removed. You must always verify that the chamber is empty before field stripping (disassembling into its major components) your GLOCK pistol for cleaning or any other reason.

To unload your GLOCK pistol, follow the instructions below. To ensure that your GLOCK pistol is unloaded, you **MUST** proceed in this order.

1. Keeping the weapon pointed in a safe direction, remove the magazine by pressing the magazine catch (19) (Picture 7). (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).
2. While holding the grip with your firing hand, with your finger off of the trigger (26) and outside of the trigger guard, grasp the rear of the slide (1) at the serrations with your other hand and pull the slide fully back to eject any cartridge that may be in the chamber (Picture 8).





3. Lock the slide in the rearward (open) position by pushing up on the slide stop lever (27) and slowly releasing the slide from the fully rearward position until it locks in the open position.
4. Once the slide is locked to the rear, both visually (Picture 9) and physically (with your finger) (Picture 10-11) inspect both the chamber and the magazine well of the pistol to be sure that no ammunition remains in either place.
5. Release the slide to return it to the forward (closed) position by either pressing the slide stop lever (27) down or grasping the rear of the slide at the serrations with your other hand and pulling the slide fully back and then releasing it.
6. With the muzzle of your GLOCK pistol pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge), pull the trigger (Picture 12). You will hear a click.

VII. Field Stripping

⚠ WARNING If the trigger is in the forward position, your GLOCK pistol may be loaded.

⚠ WARNING Unload all magazines and remove all live ammunition from the area before disassembling your GLOCK pistol to reduce the chance of a unintentional discharge.

⚠ WARNING Although your GLOCK pistol has a loaded chamber indicator, the indicator is a mechanical device, which could fail. Never rely solely on a loaded chamber indicator or your memory to determine whether your GLOCK pistol is loaded or unloaded. Always retract the slide by grasping it at the serrations at the rear of the slide and pulling it fully to the rear and pushing up on the slide stop lever to lock the slide open, and then visually and physically (with your finger) check to make sure there is not a cartridge in the chamber.

⚠ WARNING It is possible that a cartridge may be in the chamber when a loaded magazine is being removed from or inserted into your GLOCK pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your GLOCK pistol. Therefore, never leave your GLOCK pistol unattended, even when the magazine is removed. You must always verify that the chamber is empty before field stripping (disassembling into its major components) your GLOCK pistol for cleaning or any other reason.

⚠ WARNING Never alter or modify your GLOCK pistol because this could cause it to malfunction and create a dangerous condition.


⚠ WARNING Always wear safety glasses when disassembling your GLOCK pistol to protect your eyes from serious injury that could be caused by components that are under pressure, such as springs.




To field strip (disassemble) your GLOCK pistol for cleaning, follow the instructions below. To ensure that your GLOCK pistol is unloaded, disassembly **MUST** be performed in this order.

1. Remove the magazine by pressing the magazine catch (19) (Picture 13). (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).
2. While holding the grip with your firing hand, with your finger off of the trigger (26) and outside of the trigger guard, grasp the rear of the slide (1) at the serrations with your other hand and pull the slide fully back to eject any cartridge that may be in the chamber (Picture 14).
3. Lock the slide in the rearward (open) position by pushing up on the slide stop lever (27) and slowly releasing the slide from the fully rearward position until it locks in the open position (Picture 15).
4. Once the slide is locked to the rear, both visually and physically (with your finger) inspect both the chamber and the magazine well of the pistol to be sure that no ammunition remains in either place (Picture 16).
5. Release the slide to return it to the forward (closed) position by either pressing the slide stop lever down or grasping the rear of the slide at the serrations with your other hand and pulling the slide fully back and then releasing it.
6. With the muzzle of your GLOCK pistol pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge), pull the trigger. (Note: The trigger must be in the rearmost position to remove the slide) (Picture 17). You will hear a click.

7. Hold your GLOCK pistol with your firing hand with your fingers across the top of the rear of the slide in front of the rear sight and your thumb on the rear of the frame (Picture 18).
8. Using your fingers, retract the slide (1) about 1/8 in. / 3mm and hold it in this position (Picture 19). (Note: If you pull the slide too far to the rear, it will reset the pistol's trigger to the forward position. If this happens, while keeping the muzzle of your GLOCK pistol pointed in a safe direction, pull the trigger again).
9. Using the thumb and index finger of your non-firing hand, pull the slide lock (21) down evenly on both sides (Picture 20).
10. While holding the slide lock down, push the slide forward and off of the frame.
11. Press the recoil spring assembly (3) toward the front (muzzle end) of the slide while pulling it up to remove it from the slide (Picture 21-22).

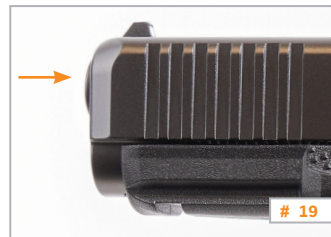

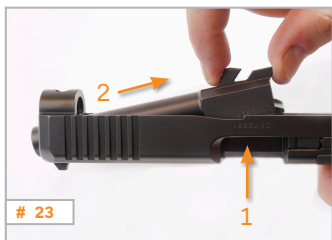

12. Holding the barrel by the barrel locking lugs, lift it and push it toward the front of the slide and then pull it up and toward the rear to remove it from the slide (Picture 23).



⚠ WARNING

Never further disassemble your GLOCK pistol (Picture 24). Any further disassembly must be performed by a GLOCK-Certified Armorer. (Note: Any further disassembly will void warranty unless performed by a GLOCK-Certified Armorer).

NOTICE

When your GLOCK pistol is disassembled, never manually reset the trigger to its forward position and then pull it to the rear because this could damage the trigger safety.

NOTICE

When your GLOCK pistol is disassembled, do not manually pull the firing pin (4) to the rear of the slide and allow it to snap forward because this could damage the firing pin and the firing pin safety (8).

VIII. Preventive Maintenance and Inspection

⚠ WARNING Always be sure that the barrel of your GLOCK pistol is clear of obstructions (including grease or excess lubricants) before firing it. Remove any obstructions before firing your GLOCK pistol so that it will function safely and correctly. Any obstruction in the barrel could prevent the pistol from firing properly or could cause the barrel to burst, resulting in death or serious personal injury and/or damage to the pistol.

⚠ WARNING It is possible that a cartridge may be in the chamber when a loaded magazine is being removed from or inserted into your GLOCK pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your GLOCK pistol. Never leave your GLOCK pistol unattended, even when the magazine is removed. You must always verify that the chamber is empty before field stripping (disassembling into its major components) your GLOCK pistol for cleaning or any other reason.

⚠ WARNING Always wear safety glasses when cleaning your GLOCK pistol to protect your eyes from cleaning materials, and from injury caused by springs and other parts that are under pressure.

⚠ WARNING Always make sure that no ammunition is located in the area where you clean your GLOCK pistol. Lubricant or solvent can affect the primer and powder in ammunition and cause it to malfunction. This could result in failure to fire, or in a bullet being pushed into the barrel of your GLOCK pistol and getting stuck in the barrel, which could cause the barrel to burst and result in death or serious personal injury, in addition to damaging the pistol.

⚠ WARNING Do not put lubricant or gun oil inside the firing pin channel. Make sure that the magazine (inside and out) and breech face are wiped dry before reassembling your GLOCK pistol. Leaving lubricant in these areas could cause contamination of primers and failure to fire, or a bullet lodged in the barrel resulting in a burst barrel.

NOTICE As with any semi-automatic pistol, your GLOCK pistol should be field-stripped (disassembled into its major components) every time it is cleaned. Cleaning without field stripping, by merely locking the slide to the rear and inserting the cleaning rod from the muzzle, can cause dirt, oil and lubricant to build up inside the pistol causing malfunctions.

Like all mechanical devices, your GLOCK pistol must be properly maintained to ensure reliable functioning and long service life. Taking proper care of your pistol will also preserve its value. Although your GLOCK pistol is highly resistant to adverse conditions, you should follow a regularly scheduled maintenance program to ensure that it is properly cleaned and lubricated to prevent corrosion and to remove accumulated dirt and debris that can affect the action and operation of your pistol.

Your GLOCK pistol should be cleaned and lubricated as follows:

1. when brand new, before first time it is fired, plus
2. after each time it is fired, plus
3. as required. This will be determined by your pistol's exposure to adverse conditions during storage or use such as rain, snow, perspiration, salt water, dirt, dust, lint, etc. Additionally, your pistol should be cleaned and inspected if it has been dropped or if any broken parts are suspected or malfunctions experienced, plus
4. at least once a year.

To clean your GLOCK pistol, first disassemble it into its five main components, the slide (1), barrel (2), recoil spring assembly (3), frame (17), and magazine, pursuant to the instructions in Chapter 7. Always use cleaning patches and brushes of the proper size for the caliber of your GLOCK pistol. (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).

BARREL: Clean the barrel as follows:

1. Wet a cleaning patch with gun cleaning solvent or cleaner-lubricant-preservative (CLP) and run it through the barrel, from the chamber end, several times using a cleaning rod.
2. Wet a bristled cleaning brush with gun cleaning solvent or cleaner-lubricant-preservative (CLP) and run it back and forth in the barrel, from the chamber end (Picture 25), using a cleaning rod to remove any fouling and burned powder.
3. Wet another cleaning patch with gun cleaning solvent or cleaner-lubricant-preservative (CLP) and run it through the barrel once, from the chamber end, with the cleaning rod and examine it. If it is not clean, **repeat steps 2 and 3** until the patch remains clean after being run through the barrel.
4. Run a clean patch through the barrel, from the chamber end, using the cleaning rod.
5. Lightly wet a clean patch with gun oil or gun cleaning solvent or cleaner-lubricant-preservative (CLP) and run it through the barrel from the chamber end.
6. Before firing your GLOCK pistol, run a clean patch through the barrel, from the chamber end, using the cleaning rod. Repeat this procedure until the patch comes out of the barrel with no gun oil or lubricant on it.





NOTICE If you will be storing your GLOCK pistol do not perform step 6 until you are ready to use it.

7. Wet a nylon bristle brush with gun cleaning solvent or cleaner-lubricant-preservative (CLP) and thoroughly brush the outside of the barrel to remove any dirt or residue.
8. Wipe the outside of the barrel dry with a clean patch and examine it. If it is not clean, **repeat steps 7 and 8** until the patch remains clean.

SLIDE: (Note: The copper colored lubricant on portions of the slide of brand new GLOCK pistols is intended to help provide long-term lubrication and should not be removed). Clean the slide as follows:

1. Wet a nylon bristle brush with gun cleaning solvent or cleaner-lubricant-preservative (CLP) and thoroughly brush the rail cuts in the slide where it meets the slide rails on the frame (Picture 26).
2. Wipe the rail cuts in the slide with a clean patch and examine it. If it is not clean, **repeat steps 1 and 2** until the patch remains clean (except copper colored long-term lubrication).
3. Wet a nylon bristle brush with gun cleaning solvent or cleaner-lubricant-preservative (CLP) and, while holding the slide with the muzzle end facing down, brush the breech face and the area under the extractor claw (Picture 26).
4. While holding the slide with the muzzle end facing down, wipe the breech face and the area under the extractor claw (10) (Picture 26) with a clean patch and examine it. If it is not clean, **repeat steps 3 and 4** until the patch remains clean.

5. Check all other exposed areas of the slide for cleanliness. If any dirt or debris is found, remove it with gun cleaning solvent or cleaner-lubricant-preservative (CLP) using a nylon bristle brush, patch, or a clean, soft cloth.
6. Wipe the exposed areas of the slide that you have cleaned in step 5 with a clean patch and examine it. If it is not clean, **repeat steps 5 and 6** until the patch remains clean.

FRAME: Check the frame for cleanliness. If necessary, clean the frame as follows:

1. Wipe exposed parts of the frame with a clean, soft cloth that has been slightly dampened with gun cleaning solvent or cleaner-lubricant-preservative (CLP).
2. Wipe the exposed areas of the frame that you have cleaned in step 1 with a clean patch and examine it. If it is not clean, **repeat steps 1 and 2** until the patch remains clean.

After you have cleaned your GLOCK pistol, lubricate it as follows:

1. Slightly dampen a clean patch with gun oil or gun cleaning solvent or cleaner-lubricant-preservative (CLP) and wipe the outside of the barrel, including the barrel hood and lugs (Picture 27), the inside top of the slide in front of the ejection port where the barrel hood rubs against the slide, and the opening that the barrel slides through in front of the slide.
2. Place a drop of gun oil or lubricant where the rear end of the trigger bar (26) touches the connector (24) at the right rear corner of the frame (Picture 28).





3. Spread one drop of gun oil or lubricant along the entire length of each slide rail cut (Picture 29).
4. Slightly dampen a clean patch with gun oil or lubricant and wipe the exterior surfaces of the slide.

⚠ CAUTION

GLOCK pistols are designed to operate properly with only small amounts of lubrication. Do not over-lubricate your GLOCK pistol because too much lubricant can collect unburned powder and other debris and prevent your GLOCK pistol from functioning properly.

After you have finished cleaning and lubricating your GLOCK pistol, you should perform a limited (user-level) inspection to help confirm that it is functioning properly. If your pistol fails any of the following checks, contact the GLOCK entity for your region or a GLOCK-Certified Armorer. To inspect your GLOCK pistol, follow these steps before reassembling it:

1. **EXTERNAL INSPECTION:** Inspect the outside of your frame and slide for dirt, corrosion, or any visible damage. Pay special attention to the sights (15 & 16a), trigger and trigger safety (26), slide stop lever (27), magazine catch (19), and extractor (10).
2. **BARREL INSPECTION:** Inspect the barrel (2) for dirt, leading, bulges, cracks or obstructions.

⚠ WARNING

Do not use a cracked, bulged, or obstructed barrel. Contact the GLOCK entity for your region or a GLOCK-Certified Armorer for repair or replacement.

3. **FIRING PIN SAFETY TEST:** Hold the slide and pull the lug of the firing pin (4) (Picture 30), all the way to the rear of the slide and then ease it forward until it stops in contact with the firing pin safety (8).


NOTICE The firing pin is held in the forward position under spring pressure. Do not allow the firing pin to snap forward against the firing pin safety because this could cause damage to the firing pin and/or the firing pin safety.

Then press the lug of the firing pin (4) forward with your forefinger using moderate force (approximately 5-8 lbs. / 23-36 N). The firing pin must not move forward past the firing pin safety (8), and must not protrude from the breech face of the slide.

⚠ WARNING If the firing pin safety fails to keep the firing pin from moving forward. **DO NOT LOAD OR FIRE YOUR GLOCK PISTOL.** Instead, have it inspected and repaired by the GLOCK entity for your region or a GLOCK-Certified Armorer.

4. **FIRING PIN:** Hold the slide with the muzzle end downward, and press the firing pin safety into the slide with your fingertip. The firing pin should move downward, and the tip of the firing pin should protrude from the breech face. (Note: On brand new pistols you may need to apply light downward pressure to the rear of the firing pin lug with your finger to assist the firing pin in moving downward).



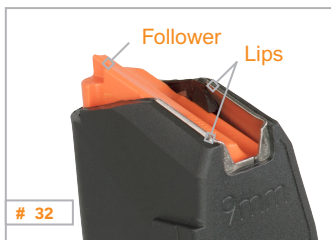


5. **FIRING PIN CHANNEL:** Hold the firing pin safety depressed with your fingertip, and vigorously shake the slide from end to end. You should hear the firing pin moving freely in the firing pin channel.
6. **EXTRACTOR:** Look across the breech face to inspect the extractor for cleanliness and to be sure the extractor claw is not broken.
7. **EJECTOR:** Inspect the ejector (23) (in the frame of the pistol) to ensure that it is intact (not broken) (Picture 31).
8. **SLIDE STOP LEVER TEST:** Pull upward on the slide stop lever and release. The lever should snap down sharply into the frame. If the lever's return to the downward position is sluggish, or it remains in the upward position, contact the GLOCK entity for your region or a GLOCK-Certified Armorer.
9. **MAGAZINE INSPECTION:** Inspect all magazines for dirt or visible damage, taking special care to look for spread or damaged feed lips or broken magazine followers (32) (Picture 32). Press down on the follower with your fingertip and release. The follower should spring fully upward, and should not stick inside the magazine tube.

IX. Reassembly and Inspection

⚠ WARNING Always wear safety glasses when reassembling your GLOCK pistol to protect your eyes from springs.

To reassemble your GLOCK pistol, follow the instructions below.

1. Holding the barrel (2) by the barrel locking cams, insert it into the slide (1) by pushing it down and in (Picture 33). (Note: The part numbers referenced in parenthesis throughout this manual correspond to the list of component parts and exploded drawing on pages 32-33).
2. Insert the recoil spring assembly (3) into the slide by placing the small end of the recoil spring assembly in the indentation in the front of the slide and pressing the other end of the recoil spring assembly towards the front of the slide to compress the spring and pushing down until the large end of the recoil spring assembly rests in the second (semi-circular) notch on the barrel locking cams (Pictures 34-36).
3. Holding the frame in your firing hand, with your finger off of the trigger and outside of the trigger guard, place the slide on top of the frame (17) in front of the slide rails and push the slide towards the back of the frame until the slide lock (21) snaps up to lock the slide into place (Picture 37).

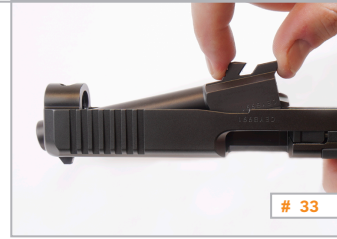



After you have reassembled your GLOCK pistol, you should inspect it to ensure that it is working properly by performing the following steps:

1. **TRIGGER SAFETY TEST:** Confirm that your GLOCK pistol is unloaded by making sure the magazine is not inserted in the pistol and visually and physically (with your finger) checking to make sure that there is not a cartridge in the chamber. Cycle the slide to reset the trigger to the forward position. With the muzzle of your GLOCK pistol pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge), grasp the sides of the trigger (without touching or depressing the trigger safety) and attempt to pull the trigger to the rear (Picture 38). The trigger safety should prevent rearward movement of the trigger, and the pistol should not dry fire.

⚠ WARNING If the trigger safety fails to keep the trigger from moving rearward, and the pistol dry fires, **DO NOT LOAD OR FIRE YOUR GLOCK PISTOL** and have it inspected and repaired by the GLOCK entity for your region or a GLOCK-Certified Armorer.

2. **TRIGGER RESET TEST:** With the muzzle of your GLOCK pistol pointed in a safe direction, pull the trigger and hold the trigger to the rear. You should hear and feel the firing pin release. While continuing to hold the trigger to the rear, pull the slide to the rear (Picture 39) and release it, allowing it to snap forward. Now release the trigger. The trigger should reset to its forward position. Repeat the trigger reset test several times.

3. SLIDE LOCK-OPEN TEST: Insert an EMPTY magazine into your pistol. Pull the slide fully to the rear. The slide should lock open (Picture 40). Repeat the slide lock-open test using each of your EMPTY magazines.


In addition to the limited (user level) inspection described in this manual, GLOCK pistols carried by law enforcement, security, or military personnel and other GLOCK pistols subjected to heavy usage, should be inspected periodically by a GLOCK-Certified Armorer, or by returning the pistols to the GLOCK entity for your region for inspection. Although the appropriate inspection interval will depend on the conditions of use, a reasonable rule of thumb for law enforcement, security, or military personnel is that the pistols should be inspected by a GLOCK-Certified Armorer once a year. To locate a GLOCK-Certified Armorer in your area or before returning the pistol for inspection, contact your local GLOCK dealer or the GLOCK entity for your region.



X. Component Parts (Gen6)

1	Slide
1b	Cover plate Optic Ready (OR)
1c	Cover plate screws
2	Barrel
3	Recoil spring assembly
4	Firing pin
5	Spacer sleeve
6	Firing pin spring
7	Spring cups
8	Firing pin safety
9	Firing pin safety spring
10	Extractor
14	Slide cover plate
15	Rear sight
16a	Front sight
16b	Front sight screw
17	Frame
17b	Backstrap Set
18	Magazine catch spring
19	Magazine catch
20	Slide lock spring
21	Slide lock
22	Locking block
23	Trigger mechanism housing with ejector
24	Connector
26	Trigger with trigger bar
27	Ambidextrous slide stop lever
28	Trigger pin
29	Trigger housing pin (short)
31	Magazine tube
32	Follower
33	Magazine spring
34	Magazine insert
35	Magazine floor plate
42a	Adapter plates OR Set
57	Extractor frame
58	Extractor pressure piece
59	Extractor package spring

Exploded Drawing GLOCK 17 Gen6

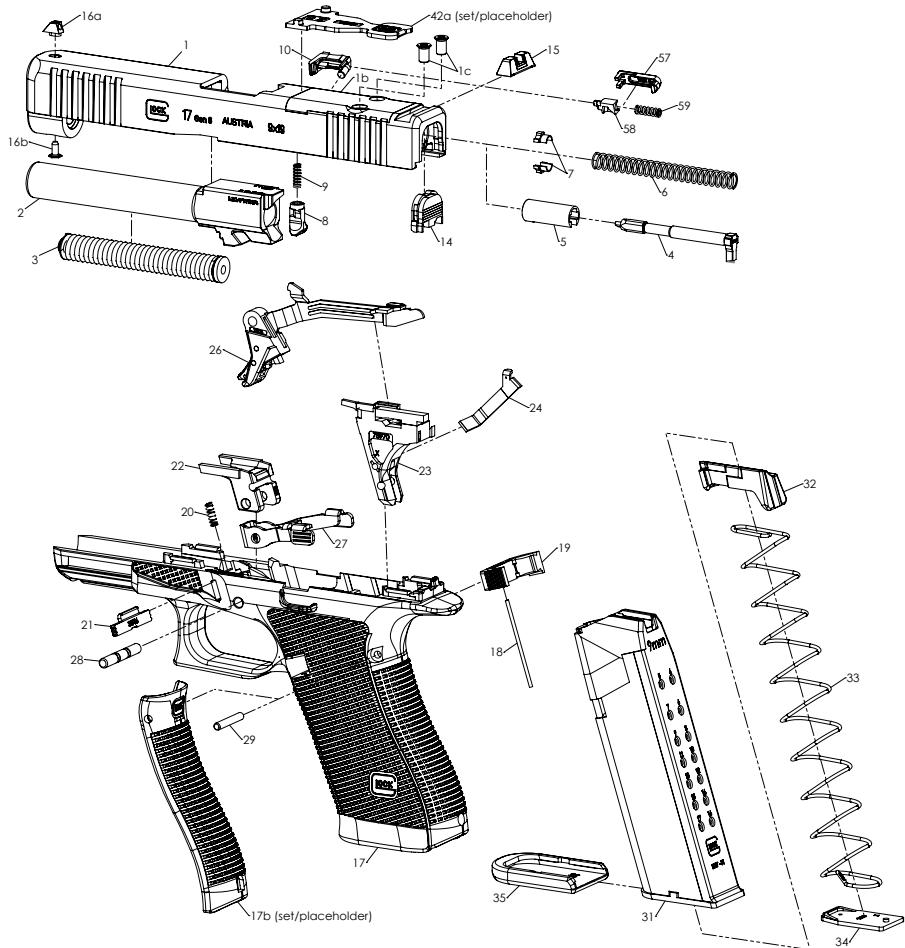


XI. Pistol Customizing

The V Series and Gen6 come with different backstraps and a reversible magazine catch to customize your pistol. For usage and installation instructions, please refer to the owner resources section on **www.glock.com**

Note: The pistol must be field stripped pursuant to the instructions in Chapter 8 before the magazine catch can be reversed.

⚠ WARNING Make sure that your GLOCK pistol is unloaded (magazine removed and chamber empty) before changing the backstraps. Keep the weapon pointed in a safe direction.

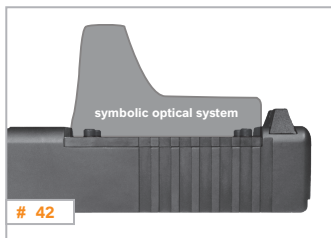

GLOCK C (Compensated)

⚠ WARNING Hot gasses and powder are forcefully expelled from the ports on top of the slide of GLOCK C (Compensated) model pistols when they are fired. Never place your hand on top of the slide and make certain that no part of your body is near, above or covering the ports on the barrel when firing.

GLOCK C models are equipped with an integrated compensator (Picture 41), making the pistol even more controllable during rapid fire, thereby increasing accuracy. The compensator consists of two longitudinal openings in the barrel and slide of the pistol arranged in a "V-position." This minimizes front sight blackening through powder gasses. The C configuration is available in only select GLOCK models.


GLOCK MOS (Modular Optic System)

GLOCK pistol models in MOS configuration offer various adapter plates in order to mount different optical systems (Picture 42). The MOS configuration is not available for all GLOCK pistol models.

The GLOCK Slimline models with a MOS configuration have slide cuts designed for specific micro-optics and do not include adapter plates.

GLOCK Gen6 Optic Ready

Standard frame Gen6 pistols come optic-ready with 3 polymer plates that allow various optics to be screwed directly into the slide for increased stability. Please use optic OEM mounting screws. (Picture 43)

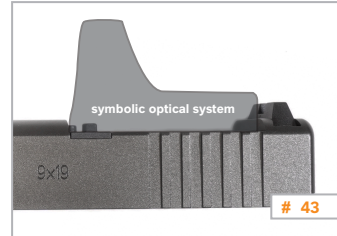

XII. Cable Lock and Storage



Each GLOCK pistol purchased in the U.S. and Canada includes a cable lock (Picture 44) as required under U.S. law. The cable lock must be installed on an unloaded pistol with the slide locked in the open (rearward position). The cable must be placed through the ejection port and out of the magazine well. Insert the end of the cable into the lock and make sure it is locked into place.

Your GLOCK pistol should always be stored clear of and separate from any ammunition and secured either with the included cable lock or other locked gun case, storage box or safe. All keys should be kept separate from locking mechanisms.

In addition to the Federal Safe Storage Saves Law Act, many states have enacted safe storage laws designed to prevent children or other unauthorized individuals from accessing firearms. Violations of these laws can result in criminal liability for gunowners. States without specific firearms storage laws can still result in civil liability for the gunowner if inadequate storage allows unauthorized access resulting in death or serious physical injury.

Please refer to the Youth Handgun and Safety Act and State Required Safety Warnings section of this owner's manual for additional and state specific information.

Note: While the laws reported in this manual are current as of the date of publication, all Federal and State Gun laws are subject to change at any time. It is every gun owner's sole responsibility to stay informed of and adhere to all federal and local gun laws.

⚠ WARNING Even if the cable lock is used, never leave your GLOCK pistol where it could be accessed by a child or other unauthorized person. Store the key to the cable lock separately from your GLOCK pistol.

⚠ WARNING Always store and transport your GLOCK pistol unloaded, secured with the cable lock provided, and/or locked in a suitable container, out of the reach and sight of children or other unauthorized persons.

Youth Handgun Safety Act Notice

- 1** The misuse of handguns is a leading contributor to juvenile violence and fatalities.
- 2** Safely storing and securing firearms away from children will help prevent the unlawful possession of handguns by juveniles, stop accidents, and save lives.
- 3** Federal law prohibits, except in certain limited circumstances, anyone under 18 years of age from knowingly possessing a handgun, or any person from selling, delivering, or otherwise transferring a handgun to a person under 18.
- 4** A knowing violation of the prohibition against selling, delivering, or otherwise transferring a handgun to a person under the age of 18 is, under certain circumstances, punishable by up to 10 years in prison.

FEDERAL LAW

The Gun Control Act of 1968, 18 U.S.C. Chapter 44, provides in pertinent part as follows:

18 U.S.C. §922(x)

- 1** It shall be unlawful for any person to sell, deliver, or otherwise transfer to a person who the transferor knows or has reasonable cause to believe is a juvenile –
 - A** a handgun; or
 - B** ammunition that is suitable for use only in a handgun.
- 2** It shall be unlawful for any person who is a juvenile to knowingly possess –
 - A** a handgun; or
 - B** ammunition that is suitable for use only in a handgun.
- 3** This subsection does not apply to –
 - A** a temporary transfer of a handgun or ammunition to a juvenile or to the possession or use of a handgun or ammunition by a juvenile if the handgun and ammunition are possessed and used by the juvenile –
 - i** in the course of employment, in the course of ranching or farming related to activities at the residence of the juvenile (or non property used for ranching or farming at which the juvenile, with the permission of the property owner or lessee, is performing activities related to the operation of the farm or ranch), target practice, hunting, or a course of instruction in the safe and lawful use of a handgun;
 - ii** with the prior written consent of the juvenile's parent or guardian who is not prohibited by Federal, State, or local law from possessing a firearm,

except –

- I** during transportation by the juvenile of an unloaded handgun in a locked container directly from the place of transfer to a place at which an activity described in clause (i) is to take place and transportation by the juvenile of that handgun, unloaded and in a locked container, directly from the place at which such an activity took place to the transferor; or
 - II** with respect to ranching or farming activities as described in clause (i), a juvenile may possess and use a handgun or ammunition with the prior written approval of the juvenile's parent or legal guardian and at the direction of an adult who is not prohibited by Federal, State or local law from possessing a firearm;
 - ii** the juvenile has the prior written consent in the juvenile's possession at all times when a handgun is in the possession of the juvenile; and
 - ii** in accordance with State and local law;
 - B** a juvenile who is a member of the Armed Forces of the United States or the National Guard who possesses or is armed with a handgun in the line of duty;
 - C** a transfer by inheritance of title (but not possession) of a handgun or ammunition to a juvenile; or
 - D** the possession of a handgun or ammunition by a juvenile taken in defense of the juvenile or other persons against an intruder into the residence of the juvenile or a residence in which the juvenile is an invited guest.
- 4** A handgun or ammunition, the possession of which is transferred to a juvenile in circumstances in which the transferor is not in violation of this subsection shall not be subject to permanent confiscation by the Government if its possession by the juvenile subsequently becomes unlawful because of the conduct of the juvenile, but shall be returned to the lawful owner when such handgun or ammunition is no longer required by the Government for the purposes of investigation or prosecution.
- 5** For purposes of this subsection, the term "juvenile" means a person who is less than 18 years of age.
- 6**
- A** In a prosecution of a violation of this subsection, the court shall require the presence of a juvenile defendant's parent or legal guardian at all proceedings.

- B** The court may use the contempt power to enforce subparagraph (A).
- C** The court may excuse attendance of a parent or legal guardian of a juvenile defendant at a proceeding in a prosecution of a violation of this subsection for good cause shown.

18 U.S.C. § 924(a)(6)

- i** A juvenile who violates section 922(x) shall be fined under this title, imprisoned not more than 1 year, or both, except that a juvenile described in clause (ii) shall be
- A** sentenced to probation on appropriate conditions and shall not be incarcerated unless the juvenile fails to comply with a condition of probation.
 - ii** A juvenile is described in this clause if –
 - I** the offense of which the juvenile is charged is possession of a handgun or ammunition in violation of section 922(x)(2); and
 - II** the juvenile has not been convicted in any court of an offense (including an offense under section 922(x) or a similar State law, but not including any other offense consisting of conduct that if engaged in by an adult would not constitute an offense) or adjudicated as a juvenile delinquent for conduct that if engaged in by an adult would constitute an offense.
- B** A person other than a juvenile who knowingly violates section 922(x) –
 - i** shall be fined under this title, imprisoned not more than 1 year, or both; and
 - ii** if the person sold, delivered, or otherwise transferred a handgun or ammunition to a juvenile knowing or having reasonable cause to know that the juvenile intended to carry or otherwise possess or discharge or otherwise use the handgun or ammunition in the commission of a crime of violence, shall be fined under this title, imprisoned not more than 10 years, or both.

State required Safety Warnings

Certain states require specific warnings be provided with handguns sales. Because GLOCK pistols are sold in all states, the safety warnings required by all states are included in this manual.

California:

⚠ WARNING

"Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the Web site of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison."

⚠ ADVERTENCIA

"Las armas de fuego deben operarse con responsabilidad y mantenerse guardadas en un lugar seguro fuera del alcance de niños o usuarios no autorizados. California tiene leyes estrictas con respecto a armas de fuego, y Usted puede ser multado o enviado a prisión por su incumplimiento con estas regulaciones. Visite la página web del Fiscal General de California en <https://oag.ca.gov/firearms> para obtener información acerca de las regulaciones sobre armas de fuego aplicables a su situación y que debe hacer para cumplir con ellas. Prevenga que niños tengan acceso a armas de fuego manteniéndolas descargadas y guardadas bajo llave cuando no las esté utilizando. Si Usted mantiene un arma de fuego cargada donde un niño pueda tener acceso y la usa de manera inapropiada, Usted puede resultar multado o enviado a prisión."

Connecticut:

"UNLAWFUL STORAGE OF A LOADED FIREARM MAY RESULT IN IMPRISONMENT OR FINE."

Florida:

"IT IS UNLAWFUL, AND PUNISHABLE BY IMPRISONMENT AND FINE, FOR ANY ADULT TO STORE OR LEAVE A FIREARM IN ANY PLACE WITHIN THE REACH OR EASY ACCESS OF A MINOR UNDER 18 YEARS OF AGE OR TO KNOWINGLY SELL OR OTHERWISE TRANSFER OWNERSHIP OR POSSESSION OF A FIREARM TO A MINOR OR A PERSON OF UNSOUND MIND."

Maine:

"ENDANGERING THE WELFARE OF A CHILD IS A CRIME. IF YOU LEAVE A FIREARM AND AMMUNITION WITHIN EASY ACCESS OF A CHILD, YOU MAY BE SUBJECT TO FINE, IMPRISONMENT OR BOTH. KEEP FIREARMS AND AMMUNITION LOCKED UP. USE TRIGGER LOCKS."

Maryland:

WARNING: "CHILDREN CAN OPERATE FIREARMS WHICH MAY CAUSE DEATH OR SERIOUS INJURY. IT IS A CRIME TO STORE OR LEAVE A LOADED FIREARM IN ANY LOCATION WHERE AN INDIVIDUAL KNEW OR SHOULD HAVE KNOWN THAT AN UNSUPERVISED MINOR WOULD GAIN ACCESS TO THE FIREARM. STORE YOUR FIREARM RESPONSIBLY!"

Massachusetts:

"WARNING FROM THE MASSACHUSETTS ATTORNEY GENERAL: This handgun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds, or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a

secure place and take reasonable preventive steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventative steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths."

"IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER-RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER."

New Jersey:

"IT IS A CRIMINAL OFFENSE TO LEAVE A LOADED FIREARM WITHIN EASY ACCESS OF A MINOR."

New York City:

"THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE FIREARMS STORAGE. FOR INCREASED SAFETY, FIREARMS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATE FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND OTHER UNAUTHORIZED PERSONS."

North Carolina:

"IT IS UNLAWFUL TO STORE OR LEAVE A FIREARM THAT CAN BE DISCHARGED IN A MANNER THAT A REASONABLE PERSON SHOULD KNOW IS ACCESSIBLE TO A MINOR."

Texas:

"IT IS UNLAWFUL TO STORE, TRANSPORT, OR ABANDON AN UNSECURED FIREARM IN A PLACE WHERE CHILDREN ARE LIKELY TO BE AND CAN OBTAIN ACCESS TO THE FIREARM."

Wisconsin:

"IF YOU LEAVE A LOADED FIREARM WITHIN THE REACH OR EASY ACCESS OF A CHILD YOU MAY BE FINED OR IMPRISONED OR BOTH IF THE CHILD IMPROPERLY DISCHARGES, POSSESSES, OR EXHIBITS THE FIREARM."

State and Federal laws are subject to change. Please check with your local federally licensed firearm dealer or state police for laws and regulations regarding the storage and use of firearms in your state.

42

GLOCK INSTRUCTIONS FOR USE

SCAN QR-CODE FOR:

Owner resources



CONTACT:

For more detailed information on our products refer to **www.glock.com** or contact your local GLOCK dealer.

MEDIA OWNER, PUBLISHER:

GLOCK Ges.m.b.H.
Gaston Glock-Platz 1,
2232 Deutsch-Wagram
Austria

PICTURES:


The pictures in this brochure are symbolic pictures and might differ from the actual product.


US PATENT INFORMATION:

This product may be covered by one or more patents. Visit us.glock.com for virtual patent information.

Technical and measurement changes as well as misprints in graphic or writing reserved.

EN | 51959 | 10-2025

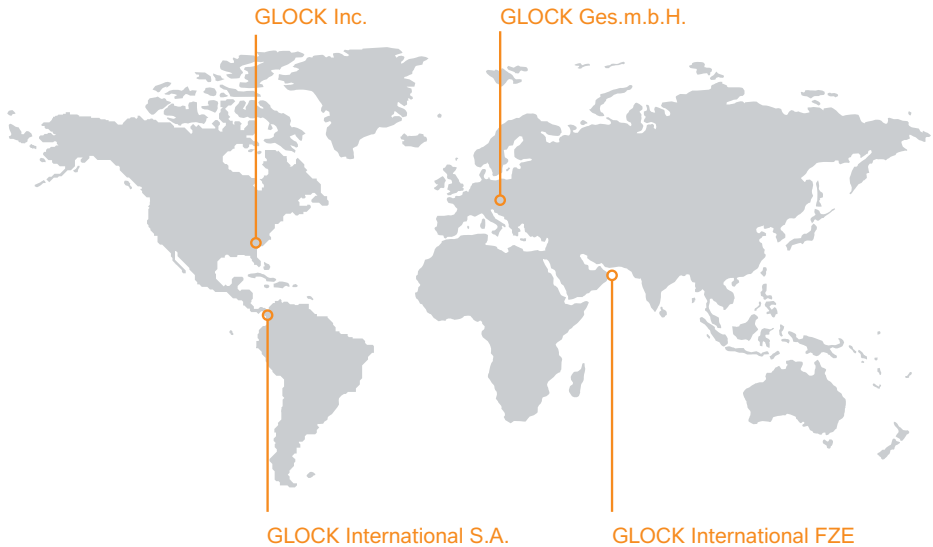

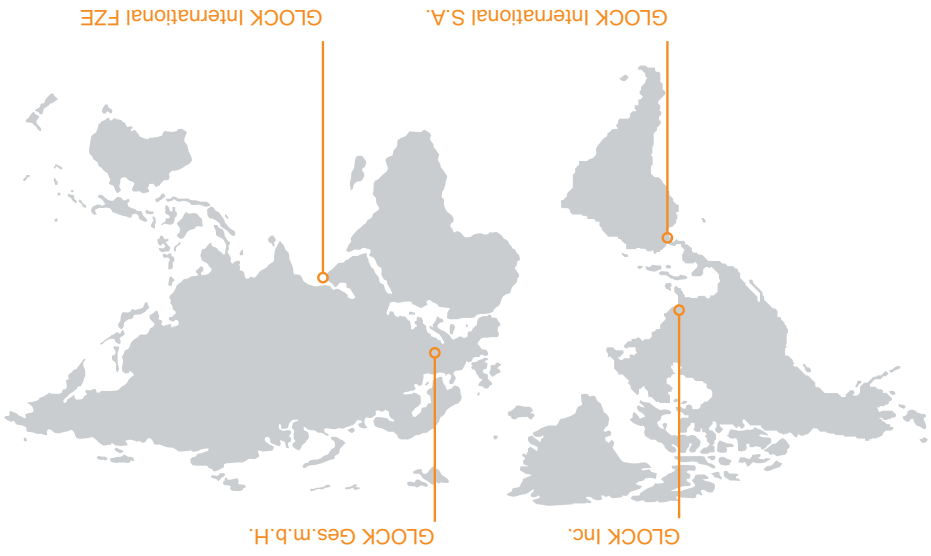

ESCANEE EL CÓDIGO QR PARA:
Recursos para propietarios



CONTACTO:
Para obtener información detallada de nuestros productos, visite www.glock.com o póngase en contacto con su distribuidor de GLOCK más cercano.

PROPIETARIO DE MEDIOS, EDITOR:

GLOCK Ges.m.b.H.
Gaston Glock-Platz 1,
2232 Deutsch-Wagram
Austria

FOTOS:

The pictures in this brochure are symbolic pictures and might differ from the actual product.

Reservado el derecho a introducir cambios técnicos y dimensionales, así como los errores de tipografía e impresión.

ES | 51959 | 10-2025

secure place and take reasonable preventive steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventative steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths."

"IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER-RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER."

New Jersey:
"IT IS A CRIMINAL OFFENSE TO LEAVE A LOADED FIREARM WITHIN EASY ACCESS OF A MINOR."

New York City:
"THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE FIREARMS STORAGE. FOR INCREASED SAFETY, FIREARMS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATE FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND OTHER UNAUTHORIZED PERSONS."

North Carolina:
"IT IS UNLAWFUL TO STORE OR LEAVE A FIREARM THAT CAN BE DISCHARGED IN A MANNER THAT A REASONABLE PERSON SHOULD KNOW IS ACCESSIBLE TO A MINOR."

Texas:
"IT IS UNLAWFUL TO STORE, TRANSPORT, OR ABANDON AN UNSECURED FIREARM IN A PLACE WHERE CHILDREN ARE LIKELY TO BE AND CAN OBTAIN ACCESS TO THE FIREARM."

Wisconsin:
"IF YOU LEAVE A LOADED FIREARM WITHIN THE REACH OR EASY ACCESS OF A CHILD YOU MAY BE FINED OR IMPRISONED OR BOTH IF THE CHILD IMPROPERLY DISCHARGES, POSSESSES, OR EXHIBITS THE FIREARM."

State and Federal laws are subject to change. Please check with your local federally licensed firearm dealer or state police for laws and regulations regarding the storage and use of firearms in your state.

State required Safety Warnings

Certain states require specific warnings be provided with handguns sales. Because GLOCK pistols are sold in all states, the safety warnings required by all states are included in this manual.

California:

⚠ WARNING

"Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the Web site of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison."

⚠ ADVERTENCIA

"Las armas de fuego deben operarse con responsabilidad y mantenerse guardadas en un lugar seguro fuera del alcance de niños o usuarios no autorizados. California tiene leyes estrictas con respecto a armas de fuego, y Usted puede ser multado o enviado a prisión por su incumplimiento con estas regulaciones. Visite la página web del Fiscal General de California en <https://oag.ca.gov/firearms> para obtener información acerca de las regulaciones sobre armas de fuego aplicables a su situación y que debe hacer para cumplir con ellas. Prevenga que niños tengan acceso a armas de fuego manteniéndolas descargadas y guardadas bajo llave cuando no las esté utilizando. Si Usted mantiene un arma de fuego cargada donde un niño pueda tener acceso y la usa de manera inapropiada, Usted puede resultar multado o enviado a prisión."

Connecticut:
"UNLAWFUL STORAGE OF A LOADED FIREARM MAY RESULT IN IMPRISONMENT OR FINE."

Florida:
"IT IS UNLAWFUL, AND PUNISHABLE BY IMPRISONMENT AND FINE, FOR ANY ADULT TO STORE OR LEAVE A FIREARM IN ANY PLACE WITHIN THE REACH OR EASY ACCESS OF A MINOR UNDER 18 YEARS OF AGE OR TO KNOWINGLY SELL OR OTHERWISE TRANSFER OWNERSHIP OR POSSESSION OF A FIREARM TO A MINOR OR A PERSON OF UNSOUND MIND."

Maine:
"ENDANGERING THE WELFARE OF A CHILD IS A CRIME. IF YOU LEAVE A FIREARM AND AMMUNITION WITHIN EASY ACCESS OF A CHILD, YOU MAY BE SUBJECT TO FINE, IMPRISONMENT OR BOTH. KEEP FIREARMS AND AMMUNITION LOCKED UP, USE TRIGGER LOCKS."

Maryland:
WARNING: "CHILDREN CAN OPERATE FIREARMS WHICH MAY CAUSE DEATH OR SERIOUS INJURY. IT IS A CRIME TO STORE OR LEAVE A LOADED FIREARM IN ANY LOCATION WHERE AN INDIVIDUAL FIREARM, STORE YOUR FIREARM RESPONSIBLY!"

Massachusetts:
WARNING FROM THE MASSACHUSETTS ATTORNEY GENERAL: This handgun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds, or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a

B The court may use the contempt power to enforce subparagraph (A).

C The court may excuse attendance of a parent or legal guardian of a juvenile defendant at a proceeding in a prosecution of a violation of this subsection for good cause shown.

18 U.S.C. § 924(a)(6)

I A juvenile who violates section 922(x) shall be fined under this title, imprisoned not more than 1 year, or both, except that a juvenile described in clause (iii) shall be

A sentenced to probation on appropriate conditions and shall not be incarcerated unless the juvenile fails to comply with a condition of probation.

!! A juvenile is described in this clause if –

I the offense of which the juvenile is charged is possession of a handgun or ammunition in violation of section 922(x)(2); and

!! the juvenile has not been convicted in any court of an offense (including an offense under section 922(x) or a similar State law, but not including any other offense consisting of conduct that if engaged in by an adult would not constitute an offense) or adjudicated as a juvenile delinquent for conduct that if engaged in by an adult would constitute an offense.

B A person other than a juvenile who knowingly violates section 922(x) –

I shall be fined under this title, imprisoned not more than 1 year, or both; and

!! if the person sold, delivered, or otherwise transferred a handgun or ammunition to a juvenile knowing or having reasonable cause to know that the juvenile intended to carry or otherwise possess or discharge or otherwise use the handgun or ammunition in the commission of a crime of violence, shall be fined under this title, imprisoned not more than 10 years, or both.

!! except –

I during transportation by the juvenile of an unloaded handgun in a locked container directly from the place of transfer to a place at which an activity described in clause (i) is to take place and transportation by the juvenile of that handgun, unloaded and in a locked container, directly from the place at which such an activity took place to the transferor; or

II with respect to ranching or farming activities as described in clause (i), a juvenile may possess and use a handgun or ammunition with the prior written approval of the juvenile's parent or legal guardian and at the direction of an adult who is not prohibited by Federal, State or local law from possessing a firearm;

!! the juvenile has the prior written consent in the juvenile's possession at all times when a handgun is in the possession of the juvenile; and

!! in accordance with State and local law;

B a juvenile who is a member of the Armed Forces of the United States or the National Guard who possesses or is armed with a handgun in the line of duty; C a transfer by inheritance of title (but not possession) of a handgun or ammunition to a juvenile; or D the possession of a handgun or ammunition by a juvenile taken in defense of the juvenile or other persons against an intruder into the residence of the juvenile or a residence in which the juvenile is an invited guest.

4 A handgun or ammunition, the possession of which is transferred to a juvenile in circumstances in which the transferor is not in violation of this subsection shall not be subject to permanent confiscation by the Government if its possession by the juvenile subsequently becomes unlawful because of the conduct of the juvenile, but shall be returned to the lawful owner when such handgun or ammunition is no longer required by the Government for the purposes of investigation or prosecution.

5 For purposes of this subsection, the term "juvenile" means a person who is less than 18 years of age.

6 A In a prosecution of a violation of this subsection, the court shall require the presence of a juvenile defendant's parent or legal guardian at all proceedings.

Youth Handgun Safety Act Notice

- 1 The misuse of handguns is a leading contributor to juvenile violence and fatalities.
- 2 Safely storing and securing firearms away from children will help prevent the unlawful possession of handguns by juveniles, stop accidents, and save lives.
- 3 Federal law prohibits, except in certain limited circumstances, anyone under 18 years of age from knowingly possessing a handgun, or any person from selling, delivering, or otherwise transferring a handgun to a person under 18.
- 4 A knowing violation of the prohibition against selling, delivering, or otherwise transferring a handgun to a person under the age of 18 is, under certain circumstances, punishable by up to 10 years in prison.

FEDERAL LAW

The Gun Control Act of 1968, 18 U.S.C. Chapter 44, provides in pertinent part as follows:

18 U.S.C. §922(x)

- 1 It shall be unlawful for any person to sell, deliver, or otherwise transfer to a person who the transferor knows or has reasonable cause to believe is a juvenile –
A a handgun; or
B ammunition that is suitable for use only in a handgun.
- 2 It shall be unlawful for any person who is a juvenile to knowingly possess –
A a handgun; or
B ammunition that is suitable for use only in a handgun.
- 3 This subsection does not apply to –
A a temporary transfer of a handgun or ammunition to a juvenile or to the possession or use of a handgun or ammunition by a juvenile if the handgun, and ammunition are possessed and used by the juvenile –

I in the course of employment, in the course of ranching or farming related to activities at the residence of the juvenile (or non property used for ranching or farming at which the juvenile, with the permission of the property owner or lessee, is performing activities related to the operation of the farm or ranch), target practice, hunting, or a course of instruction in the safe and lawful use of a handgun;

II with the prior written consent of the juvenile's parent or guardian who is not prohibited by Federal, State, or local law from possessing a firearm,

XII. Bloqueo de Cable y Almacenamiento

Cada pistola GLOCK comprada en EE. UU. y Canadá incluye un candado de cable (imagen 44), tal y como exige la legislación estadounidense. El candado de cable debe instalarse en una pistola descargada con la corredera bloqueada en posición abierta (hacia atrás). El cable debe colocarse a través de la ventana de expulsión y salir por el cargador. Inserte el extremo del cable en el candado y asegúrese de que quede bien bloqueado.



Su pistola GLOCK debe guardarse siempre separada de cualquier munición y asegurada con el candado de cable incluido u otra funda con cerradura, caja de almacenamiento o caja fuerte. Todas las llaves deben guardarse separadas de los mecanismos de cierre.

Además de la Ley Federal de Almacenamiento Seguro, muchos estados han promulgado leyes de almacenamiento seguro diseñadas para evitar que los niños u otras personas no autorizadas tengan acceso a las armas de fuego. El incumplimiento de estas leyes puede dar lugar a responsabilidad penal para los propietarios de armas. Los estados que no cuentan con leyes específicas sobre el almacenamiento de armas de fuego pueden seguir imponiendo responsabilidad civil al propietario del arma si un almacenamiento inadecuado permite el acceso no autorizado y provoca la muerte o lesiones físicas graves.

Consulte la sección Ley de armas cortas y seguridad para jóvenes y advertencias de seguridad exigidas por el estado de este manual del propietario para obtener información adicional y específica del estado.

Nota: Aunque las leyes que se recogen en este manual están vigentes en la fecha de publicación, todas las leyes federales y estatales sobre armas están sujetas a cambios en cualquier momento. Es responsabilidad exclusiva de cada propietario de armas mantenerse informado y cumplir con todas las leyes federales y locales sobre armas.

ADVERTENCIA No deje nunca su pistola GLOCK accesible a personas no autorizadas y mucho menos a niños, aunque tenga el cable de seguridad puesto.

ADVERTENCIA Guarde y transporte siempre su pistola GLOCK descargada, asegurada con el candado de cable suministrado y/o guardada bajo llave en un recipiente adecuado, fuera del alcance y de la vista de los niños u otras personas no autorizadas.

estos modelos no incluyen adaptadores para acoplar otros sistemas ópticos.

GLOCK Gen6 Optic Ready

Las pistolas Gen6 con armazón estándar vienen preparadas para ópticas con 3 placas de polímero que permiten atornillar directamente diversas ópticas en la corredera para una mayor estabilidad. Utilice tornillos de montaje ópticos OEM. (Foto 43)



XI. Configuraciones de Pistola

Las series V y Gen6 incluyen diferentes correas traseras y un retén de cargador reversible para personalizar su pistola. Para obtener instrucciones de uso e instalación, consulte la sección de recursos para propietarios en www.glock.com

Nota: la pistola debe estar desarmada de acuerdo con las instrucciones del Capítulo 8 para poder invertir el retén del cargador.

ADVERTENCIA Asegúrese de que su pistola GLOCK esté descargada (con el cargador extraído y la recámara vacía) antes de cambiar los suplementos de empuñadura.

GLOCK C (con compensador)


ADVERTENCIA Cuando se dispara una pistola GLOCK modelo C (con compensador), se expulsan con energía pólvora y gases calientes por los orificios de la parte superior de la corredera. No coloque nunca su mano sobre la corredera, y asegúrese de que ninguna parte de su cuerpo cubra los orificios del cañón al disparar.

Los modelos GLOCK C están equipados con un compensador (Foto 41) integrado que hace que la pistola sea aún más controlable durante disparos rápidos, con lo que aumenta la precisión. El compensador se compone de dos aberturas longitudinales en el cañón y la corredera de la pistola, dispuestas en una 'posición de V'. Esto minimiza el ennegrecimiento del punto de mira por los gases de la pólvora. La configuración C solo está disponible en determinados modelos GLOCK.


GLOCK MOS (Sistema Modular Óptico)

Las pistolas GLOCK modelos Slimline con configuración MOS tienen la corredera modificada diseñada para recibir sistemas ópticos específicos, disponible para todos los modelos GLOCK.

Las pistolas GLOCK en configuración MOS tienen placas adaptadoras diferentes para el montaje de sistemas ópticos (Foto 42). La configuración MOS no está

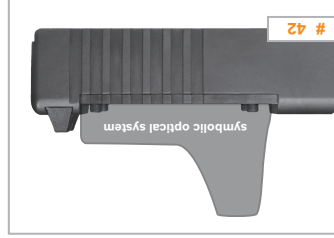

Vista Desarmada GLOCK 17 Gen6

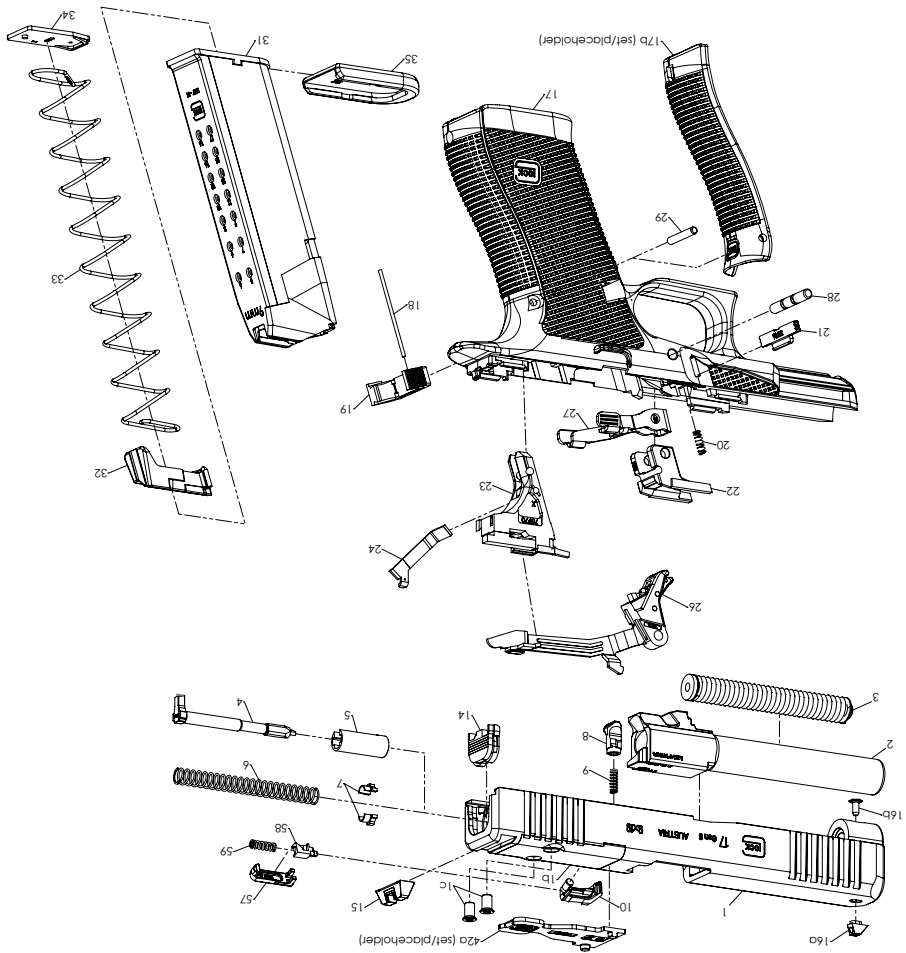

1	Corredera
1b	Placa de cubierta Optic Ready (OR)
1c	Tornillos de la placa de cubierta
2	Cañón
3	Conjunto de resorte recuperador*
4	Percutor
5	Manguito distanciadador
6	Resorte del percutor
7	Copas de resorte
8	Seguro de percutor
9	Resorte del seguro de percutor
10	Extractor
14	Placa de cubierta de corredera
15	Alza
16a	Punto de mira
16b	Tornillo de punto de mira
17	Armazón
17b	Juego de correas traseras
18	Resorte del retén de cargador
19	Retén de cargador
20	Resorte del bloqueo de la corredera
21	Bloqueo de la corredera
22	Pieza de bloqueo
23	Armazón del mecanismo de gatillo con eyector
24	Conector
26	Gatillo con varilla de gatillo
27	Palanca de retención de la corredera ambidiestra
28	Perno de retenida de gatillo
29	Perno de armazón de gatillo (corto)
31	Tubo del cargado
32	Elevador
33	Resorte de cargador
34	Inserto de cargador
35	Placa base de cargador
42a	Placas adaptadoras OR Set
57	Marco del extractor
58	Pieza de presión del extractor
59	Resorte del paquete extractor

3. PRUEBA DE LA CORREDERA BLOQUEADA ABIERTA. Introduzca en su pistola un cargador VACÍO. Tire de la correa completamente hacia atrás. La correa debe quedar bloqueada abierta (Foto 40). Repita la prueba de la correa bloqueada abierta con cada uno de sus cargadores VACÍOS.



Además de la inspección limitada (a nivel usuario) descrita en este manual, las pistolas GLOCK usadas por personal policial, de seguridad y militar, así como otras pistolas GLOCK sometidas a un uso intenso, deben ser inspeccionadas periódicamente por un armero certificado por GLOCK o reenviadas a GLOCK para su inspección. Si bien el intervalo de inspección apropiado dependerá de las condiciones de uso, una regla práctica razonable para los usuarios policiales, de seguridad y militares es que las pistolas deben ser inspeccionadas una vez al año por un armero certificado por GLOCK. Para localizar un armero certificado por GLOCK en su área, o antes de reenviar la pistola para inspección, póngase en contacto con su vendedor GLOCK local o la sucursal de GLOCK más cercana.

Después de haber reensamblado su pistola GLOCK, debe realizar los siguientes pasos para inspeccionarla y asegurarse de que funcione correctamente:

1. CONTROL DEL SEGURO DE GATILLO.

Confirme que su pistola GLOCK esté descargada: asegúrese de que el cargador no esté introducido en la pistola y verifique visual y físicamente (con su dedo) para asegurarse de que no haya un cartucho en la recámara. Haga un ciclo de movimiento de la corredera para regresar el gatillo a la posición hacia adelante. Con la boca de su pistola GLOCK apuntada hacia una dirección segura (una posibilidad segura es aquella en la cual no hay posibilidad de que nadie salga lesionado en caso de una descarga involuntaria), aferre los lados del gatillo (sin tocar ni oprimir el seguro de gatillo) e intente apretar el gatillo hacia atrás (Foto 38). El seguro de gatillo debe impedir el movimiento del gatillo hacia atrás, y la pistola no debe disparar en seco.



⚠ ADVERTENCIA

Si el seguro de gatillo no logra impedir que el gatillo se mueva hacia atrás, y la pistola dispara en seco, NO CARGUE NI DISPARE SU PISTOLA GLOCK, y hágala examinar y reparar por GLOCK o por un armero certificado por GLOCK.

2.

PRUEBA DE REGRESO DEL GATILLO.

Con la boca de su pistola GLOCK apuntada hacia una dirección segura, apriete el gatillo y sosténgalo hacia atrás. Se debe oír y sentir la liberación del percutor. Mientras continúa sosteniendo el gatillo hacia atrás, tire de la corredera hacia atrás (Foto 39) y suéltela, dejando que avance bruscamente. Ahora suelte el gatillo. El gatillo debe regresar a la posición hacia adelante. Repita varias veces la prueba de regreso del gatillo.

IX. Reensamblado

⚠ ADVERTENCIA


Use siempre gafas de seguridad cuando reensamble su pistola GLOCK.

Siga las instrucciones de abajo para reensamblar su pistola GLOCK.

1. Sostenga el cañón (2) desde las levas de bloqueo del mismo, e introduzcalo en la corredera (1) empujándolo hacia abajo y adentro (Foto 33). (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarrollada de las páginas 32-33).

2. Introduzca el conjunto de resorte recuperador (3) en la corredera; para hacerlo, coloque el extremo pequeño del conjunto de resorte recuperador en la indentación del frente de la corredera, oprima el otro extremo del conjunto de resorte recuperador hacia el frente de la corredera para comprimir el resorte, y empuje hacia abajo hasta que el extremo grande del conjunto de resorte recuperador se apoye en la segunda muesca (semicircular) de las levas de bloqueo del cañón (Foto 34-36).

3. Sostenga el armazón con la mano con que dispara y, con su dedo lejos del gatillo y fuera del guardamonte, coloque la corredera sobre el armazón (17) delante de los riles de corredera y empuje la corredera hacia la parte trasera del armazón, hasta que el bloqueo de la corredera (21) suba bruscamente para bloquear la corredera en su lugar (Foto 37).

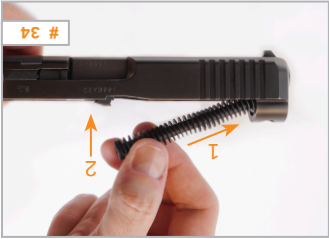

puede que tenga que aplicar una presión ligera hacia abajo con su dedo sobre la parte posterior del tetón del percutor, para ayudar a que el percutor se mueva hacia abajo).


5. CANAL DEL PERCUTOR. Mantenga el seguro de percutor oprimido con la punta de su dedo, y agite enérgicamente la corredera de extremo a otro. Se debe oír el percutor moverse libremente en el canal del percutor.

6. EXTRACTOR. Mire a través del plano de cierre para examinar la limpieza del extractor (10) y para asegurarse de que la uña extractora no esté rota.

7. EYECTOR. Examine el eyector (23) (en el armazón de la pistola) para asegurarse de que esté intacto (no roto) (Foto 31).

8. PRUEBA DE LA PALANCA DE RETENCIÓN DE LA CORREDERA. Tire de la palanca de retención de la corredera hacia arriba, y suéltela. La palanca debe bajar bruscamente dentro del armazón. Si el regreso de la palanca a la posición hacia abajo es lento, o si se queda en la posición hacia arriba, póngase en contacto con GLOCK o con un armero certificado por GLOCK.

9. INSPECCIÓN DEL CARGADOR. Examine todos los cargadores en busca de suciedad o daños visibles; compruebe con especial cuidado si hay labios de alimentación extendidos o dañados, y elevadores (32) (Foto 32) del cargador rotos. Oprima el elevador con la punta de su dedo y libérello. El elevador debe saltar hacia arriba completamente, y no debe atascarse dentro del tubo del cargador.

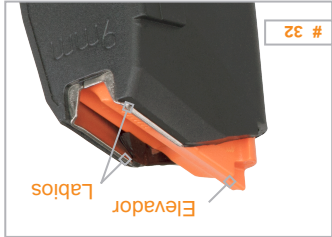

4. PERCUTOR. Sostenga la corredera con el extremo de la boca hacia abajo, y con la punta de su dedo empuje el seguro de percutor dentro de la corredera. El percutor debe moverse hacia abajo, y la punta del percutor debe sobresalir del plano de cierre. (Nota: en pistolas nuevas,


ADVERTENCIA Si el seguro de percutor no logra impedir que el percutor se mueva hacia adelante, NO CARGUE NI DISPARÉ SU PISTOLA GLOCK. En lugar de ello, hágala examinar y reparar por GLOCK o por un armero certificado por GLOCK.

Luego empuje el tetón del percutor (4) hacia adelante (aproximadamente 5 – 8 lb./ 23 – 36 N). El percutor no debe moverse hacia adelante más allá del seguro de percutor, y no debe sobresalir del plano de cierre de la corredera.

AVISO El percutor es sostenido en posición hacia adelante bajo la presión de un resorte. No deje que el percutor avance bruscamente contra el seguro de percutor, ya que esto puede provocar daños al percutor o al seguro de percutor.

3. CONTROL DEL SEGURO DE PERCUTOR. Sostenga la corredera, tire del tetón del percutor (4) (Foto 30) hasta el extremo trasero de la corredera, y luego muévelo con cuidado hacia adelante hasta que se detenga en contacto el seguro de percutor (8).

ADVERTENCIA No use un cañón rajado, con protuberancias u obstruido. Póngase en contacto con GLOCK o con un armero certificado por GLOCK para una reparación o reemplazo.

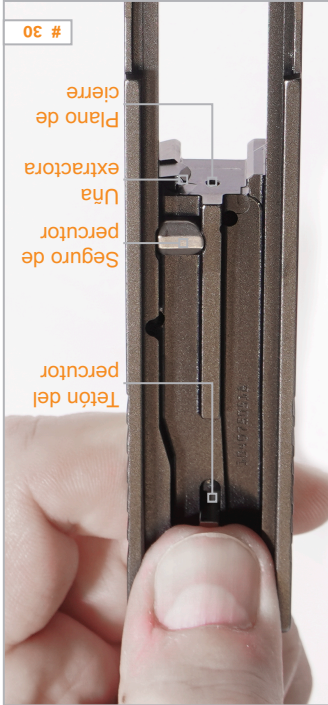


1. INSPECCIÓN EXTERIOR. Examine el exterior de su arma y corredera en busca de suciedad, corrosión o cualquier daño visible. Preste especial atención al alza y al punto de mira (15 y 16a), gatillo y seguro de gatillo (26), palanca (27) de retención de la corredera, retén (19) del cargador, y extractor (10).
2. INSPECCIÓN DEL CAÑÓN. Examine el cañón (2) en busca de suciedad, empujamiento, protuberancias, rajaduras u obstrucciones.

Después de que haya terminado de limpiar y lubricar su pistola GLOCK, siga estos pasos antes de reensamblarla. Con un armero certificado por GLOCK. Para examinar su controles siguientes, póngase en contacto con GLOCK o (a nivel de usuario) para confirmar que funcione correctamente. Si su pistola no pasa alguno de los pistola GLOCK, debe realizar una inspección limitada de su arma y corredera en busca de suciedad, corrosión o cualquier daño visible. Preste especial atención al alza y al punto de mira (15 y 16a), gatillo y seguro de gatillo (26), palanca (27) de retención de la corredera, retén (19) del cargador, y extractor (10).

⚠ PRECAUCIÓN Las pistolas GLOCK están diseñadas para operar correctamente con sólo pequeñas cantidades de lubricación. No lubrique en exceso su pistola GLOCK, ya que si hay demasiado lubricante éste puede juntar pólvora sin quemar y otros desperdicios e impedir que su pistola GLOCK funcione correctamente.

2. Coloque una gota de aceite para armas o de lubricante donde el extremo trasero de la varilla del gatillo (26) toca el conector (24) en la esquina posterior derecha del armazón (Foto 28).
3. Espazza una gota de aceite para armas o lubricante a todo lo largo de cada corte para riel de corredera (Foto 29).
4. Humedezca ligeramente un parche limpio con aceite de calidad para armas o lubricante, y frote las superficies exteriores de la corredera.

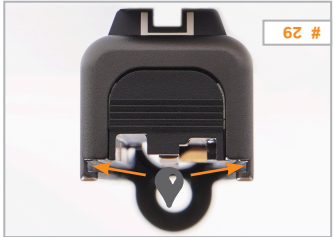

4. Mientras sostiene la corredera con el extremo de la boca apuntando hacia abajo, frote el plano de cierre y el área que está debajo de la uña extractora (10) con un parche limpio, y examínelo. Si no está limpio, repita los pasos 3 y 4 hasta que el parche se mantenga limpio.
5. Verifique la limpieza de todas las demás áreas expuestas de la corredera. Si encuentra suciedad o desperdicios, elimínelos con un solvente para limpieza de armas o limpiador-lubrificante-conservante (CLP), y mediante un cepillo de cerdas de nilón, un parche o un paño suave limpio. Frote con un parche limpio las áreas expuestas de la corredera que limpie en el paso 5, y examínelo. Si no está limpio, repita los pasos 5 y 6 hasta que el parche se mantenga limpio.

ARMAZÓN: verifique la limpieza de la corredera. De ser necesario, limpie el armazón como sigue:

1. Frote las partes expuestas del armazón con un paño suave limpio ligeramente humedecido con disolvente para limpieza de armas o limpiador-lubrificante-conservante (CLP).
2. Frote con un parche limpio las áreas expuestas del armazón que limpie en el paso 1, y examínelo. Si no está limpio, repita los pasos 1 y 2 hasta que el parche se mantenga limpio.

Después de que haya limpiado su pistola GLOCK, lubrifíquela como sigue:

1. Humedezca ligeramente un parche limpio con aceite de calidad para armas o disolvente para limpieza de armas o limpiador-lubrificante-conservante (CLP) y frote el exterior del cañón, incluidos los tetones y el puente del cañón (Foto 27), la parte superior interna de la corredera del cañón roza contra la corredera, y la abertura por la que el cañón se desliza delante de la corredera.



1. Humedezca un cepillo de cerdas de nilón con un disolvente para limpieza de armas o limpiador-lubricante-conservante (CLP), y cepille bien los cortes para rieles de la corredera, donde encastra con los rieles de corredera del armazón (Foto 26).
2. Frote los cortes para rieles de la corredera con un parche limpio, y examínelo. Si no está limpio, repita los pasos 1 y 2 hasta que el parche se mantenga limpio (Salvo lubricante de larga vida color cobre).
3. Humedezca un cepillo de cerdas de nilón con un disolvente para limpieza de armas o limpiador-lubricante-conservante (CLP), y cepille bien los cortes para rieles de la corredera, donde encastra con los rieles de corredera del armazón (Foto 26).

CORREDERA: (Nota: el lubricante de color cobre que se encuentra en algunas partes de la corredera de las pistolas GLOCK nuevas tiene por objeto proporcionar una lubricación duradera, y no debe eliminarse). Limpie la corredera como sigue:

7. Humedezca un cepillo de cerdas de nilón con un disolvente para limpieza de armas o limpiador-lubricante-conservante (CLP), y cepille bien el exterior del cañón para eliminar toda suciedad o residuo.
8. Sequé el exterior del cañón con un parche limpio y examínelo. Si no está limpio, repita los pasos 7 y 8 hasta que el parche se mantenga limpio.

AVISO Si va a guardar su pistola GLOCK, no realice el paso 6 hasta que esté listo/a para usarla.

6. Antes de disparar su pistola GLOCK, haga pasar un parche limpio a través del cañón, desde el extremo de la recámara, con la varilla limpiadora. Repita este procedimiento hasta que el parche salga del cañón sin aceite para armas o lubricante.



Para limpiar su pistola Glock, primero desármela hasta separar sus cinco piezas principales: corredera (1), cañón (2), conjunto de resorte recuperador (3), armazón (17) y cargador, de acuerdo con las instrucciones del Capítulo 7. Use siempre cepillos y parches limpiadores del tamaño apropiado para el calibre de su pistola GLOCK. (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarrollada de las páginas 32-33).

CANÓN: Limpie el cañón como sigue.

1. Humedezca un parche limpiador con disolvente para limpieza de armas o limpiador-lubricante-conservante (CLP), y hágalo pasar varias veces por el cañón, desde el extremo de la recámara, con una varilla limpiadora.

2. Humedezca un cepillo de cerdas limpiador con un lubricante y hágalo pasar una y otra vez por el cañón, desde el extremo de la recámara (Foto 25), con una varilla limpiadora para eliminar todos los residuos y pólvora quemada.

3. Humedezca otro parche limpiador con disolvente para limpieza de armas o limpiador-lubricante-conservante (CLP), hágalo pasar una vez por el cañón con la varilla limpiadora, desde el extremo de la recámara, y examínelo. Si no está limpio, **repita los pasos 2 y 3** hasta que el parche se mantenga limpio después de pasarlo a través del cañón.

4. Pase un parche limpio a través del cañón, desde el extremo de la recámara, con la varilla limpiadora.

5. Humedezca ligeramente un parche limpio con aceite para armas o disolvente para limpieza de armas o limpiador-lubricante-conservante (CLP), y hágalo pasar a través del cañón desde el extremo de la recámara.



Al igual que con todos los dispositivos mecánicos, debe realizar un mantenimiento adecuado de su pistola GLOCK para asegurar un funcionamiento fiable y una vida útil prolongada. Realizar un cuidado apropiado de su pistola preservará también su valor. Si bien su pistola GLOCK es altamente resistente a las condiciones adversas, debe seguir un programa de mantenimiento programado periódicamente para asegurar que esté correctamente limpiada y lubricada, a fin de impedir la corrosión y eliminar la suciedad y desperdicios acumulados que puedan afectar la acción y la operación de su pistola.

Su pistola GLOCK debe limpiarse y lubricarse como sigue:

1. cuando es nueva, antes de dispararse por primera vez, más
2. después de cada vez que se la dispara, más
3. cuando sea necesario. Esto será determinado por la exposición de su pistola a condiciones adversas como lluvia, nieve, transpiración, agua salada, suciedad, polvo, pelusas, etc. Además, su pistola debe limpiarse e inspeccionarse si se cayó, si se sospecha que hay piezas rotas, o si sucedió alguna falla de funcionamiento, más,
4. al menos una vez por año.

VIII. Mantenimiento preventivo e inspección

ADVERTENCIA Asegúrese siempre de que el canon de su pistola GLOCK esté libre de obstrucciones, (incluyendo grasa o exceso de lubricantes) antes de dispararla. Elimine toda obstrucción antes de disparar su pistola GLOCK, para que funcione de manera segura y correcta. Cualquier obstrucción en el canon puede impedir que la pistola dispare correctamente o que reviente el canon esto puede causar la muerte o lesiones serias y danos a la pistola.

ADVERTENCIA Es posible que un cartucho esté en la recámara cuando se extrae o introduce un cargador lleno en su pistola GLOCK. Un cartucho ubicado en la recámara se disparará cuando se apriete el gatillo, haya o no un cargador en su pistola GLOCK. Por lo tanto, no deje nunca desatendida su pistola GLOCK, aun cuando el cargador esté extraído. Debe verificar siempre que la recámara esté vacía antes del desarme parcial (separación de las piezas principales) de su pistola GLOCK para limpieza o por otra razón.


ADVERTENCIA Use siempre gafas de seguridad cuando limpie su pistola GLOCK para proteger sus ojos de los materiales de limpieza y evitar lesiones causadas por resortes y otras partes que están bajo presión en la pistola.

ADVERTENCIA Asegúrese siempre de que no haya munición en el área en la que limpia su pistola GLOCK. El lubricante o el solvente pueden afectar el fulminante y la pólvora de las municiones y provocar un mal funcionamiento. Esto podría provocar que la pistola no dispare o que una bala quede atascada en el canon de su pistola esto podría causar que estalle causando la muerte, serias lesiones y por ende dañar su pistola.

ADVERTENCIA No introduzca solventes limpiadores ni aceite dentro del canal del percutor. Asegúrese de que el cargador (por dentro y por fuera) y el plano de cierre estén completamente secos antes de reensamblar su pistola GLOCK. Dejar solvente o lubricante en estas áreas puede provocar contaminaciones de los fulminantes y hacer que la pistola no dispare, por tanto quede una bala atascada en el canon y provoque que se estalle, pudiendo provocar la muerte, lesiones graves y por ende dañado la pistola.

AVISO Al igual que cualquier pistola semiautomática, su pistola GLOCK debe someterse a un desarme parcial (separación de las piezas principales) cada vez que se la limpie. Realizar la limpieza sin desarme parcial, meramente bloqueando la corredera hacia atrás e introduciendo la varilla limpiadora desde la boca, puede provocar que se acumule suciedad, aceite y solventes dentro de la pistola y causar fallas de funcionamiento.

12. Sostenga el cañón desde las levas de bloqueo del mismo, levántelo y empujelo hacia el frente de la corredera, y luego tire de él hacia arriba y hacia atrás para extraerlo de la corredera (Foto 23).

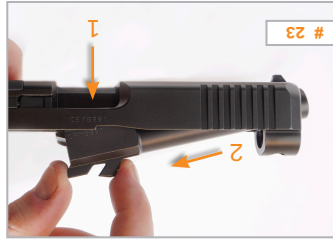

⚠ ADVERTENCIA No realice nunca en su pistola GLOCK (Foto 24) un desarme mayor que éste. Todo desarme mayor debe ser realizado por un armero certificado por GLOCK. (Nota: todo desarme mayor anulará la garantía a menos que sea realizado por un armero certificado por GLOCK).

AVISO Cuando su pistola GLOCK está desarmada, no realice nunca la maniobra manual de regresar el gatillo a la posición hacia adelante y luego apretarlo hacia atrás, ya que esto puede dañar el seguro de gatillo.

AVISO Cuando su pistola GLOCK está desarmada, no realice la maniobra manual de tirar del percutor (4) hacia la parte trasera de la corredera y dejar que avance bruscamente, ya que esto podría dañar el percutor y el seguro (8) de percutor.



6. Manteniendo la boca de su pistola GLOCK apuntada hacia una dirección segura (una dirección segura es aquella en la cual no hay posibilidad de que nadie salga lesionado en caso de una descarga involuntaria), apriete el gatillo. (Nota: para extraer la corredera, el gatillo debe estar en la posición extrema hacia atrás) (Foto 17). Oírás un clic.


7. Sostenga su pistola GLOCK con la mano con que dispara, con sus dedos a través del extremo superior de la parte trasera de la corredera y delante del alza, y su pulgar sobre la parte trasera del armazón (Foto 18).

8. Con sus dedos, retraiga la corredera (1) aproximadamente 3 mm / 1/8 pulg. y sosténgala en esta posición. (Foto 19) (Nota: si tira de la corredera demasiado hacia atrás, esta devolverá al gatillo de la pistola a su posición hacia adelante. Si sucede esto, vuelva a apretar el gatillo a la vez que mantiene la boca de su pistola GLOCK apuntada hacia una dirección segura).

9. Con los dedos pulgar e índice de la mano con la que no dispara, tire del bloqueo (21) de la corredera hacia abajo desde ambos lados por igual (Foto 20).

10. A la vez que mantiene abajo el bloqueo de la corredera, empuje la corredera hacia adelante y quítlela del armazón.

11. Empuje el conjunto de resorte (3) recuperador hacia el frente (el extremo de la boca) de la corredera, y a la vez tire de él hacia arriba para extraerlo de la corredera (Foto 21-22).

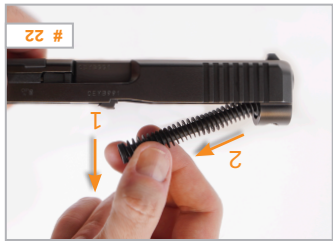

Para realizar el desarme parcial de su pistola GLOCK con fines de limpieza, siga las instrucciones de abajo. Para asegurarse de que su pistola GLOCK esté descargada, el desarme DEBE realizarse en este orden.

1. Optima el retén (19) (Foto 13) del cargador para extraer el cargador. (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarrollada de las páginas 32-33).

2. Sosteniendo la empuñadura con la mano con la que dispara, con su dedo lejos del gatillo (26) y fuera del guardamonte, agarre con su otra mano la parte trasera de la corredera (1) desde el borde dentado y tire de ella completamente hacia atrás para expulsar el cartucho que pudiera haber en la recámara (Foto 14).

3. Bloquee la corredera en la posición hacia atrás (abierta); para hacerlo, empuje hacia arriba la palanca (27) de retención de la corredera y suelte lentamente la corredera desde la posición completamente hacia atrás hasta que trabé en la posición abierta (Foto 15).

4. Una vez que la corredera esté bloqueada hacia atrás, examine visual y físicamente (con su dedo) tanto la recámara como el alojamiento del cargador de la pisto-la para asegurarse de que no haya munición en ninguno de ambos lugares (Foto 16).

5. Libere la corredera para que regrese a la posición hacia adelante (cerrada); para hacerlo, empuje hacia abajo la palanca de retención de la corredera, o agarre con su otra mano la parte trasera de la corredera desde el borde dentado, tire de ella completamente hacia atrás y suéltela.



VII. Desarme parcial

ADVERTENCIA Si el gatillo está en posición hacia adelante, su pistola GLOCK puede estar cargada.

ADVERTENCIA Vacíe todos los cargadores y retire toda la munición activa del área antes de desmontar su pistola GLOCK, para reducir la probabilidad de una descarga negligente.

ADVERTENCIA Si bien su pistola GLOCK tiene un indicador de recámara cargada, es un dispositivo mecánico que puede fallar. No confíe nunca únicamente en un indicador de recámara cargada ni en su memoria para determinar si su pistola GLOCK está cargada o descargada. Para retraer la corredera, hágalo siempre aferrándola por el borde dentado de su parte trasera y tirando de ella completamente hacia atrás; luego, verifique visual y físicamente (con su dedo) para asegurarse de que no haya un cartucho en la recámara.

ADVERTENCIA Es posible que un cartucho esté en la recámara cuando se extrae o introduce un cargador lleno en su pistola GLOCK. Un cartucho ubicado en la recámara se disparará cuando se apriete el gatillo, haya o no un cargador en su pistola GLOCK. Por lo tanto, no deje nunca desatendida su pistola GLOCK, aun cuando el cargador esté extraído. Debe verificar siempre que la recámara esté vacía antes del desarme parcial (separación de las piezas principales) de su pistola GLOCK para limpieza o por otra razón.

ADVERTENCIA No altere ni modifique nunca su pistola GLOCK, ya que esto podría causar fallas de funcionamiento y generar una condición peligrosa.


ADVERTENCIA Use siempre gafas de seguridad al desarmar su pistola GLOCK para proteger sus ojos de alguna lesión seria que puede ser causado por cualquier componente que este bajo presión en la pistola.

3. Bloquee la corredera en la posición hacia atrás (abierta); para hacerlo, empuje hacia arriba el bloqueo de la corredera y suelte lentamente la corredera desde la posición completamente hacia atrás hasta que trabé en la posición abierta.

4. Una vez que la corredera esté bloqueada hacia atrás, examine visual (Foto 9) y físicamente (con su dedo) (Foto 10-11) tanto la recámara como el alojamiento del cargador de la pistola para asegurarse de que no haya munición en ninguno de ambos lugares.

5. Libere la corredera para que regrese a la posición hacia adelante (cerrada); para hacerlo, empuje hacia abajo la palanca de retención de la corredera (27), o agarre con su otra mano la parte trasera de la corredera desde el borde dentado, tire de ella completamente hacia atrás y suéltela.

6. Manteniendo la boca de su pistola GLOCK apuntada hacia una dirección segura (una dirección segura es aquella en la cual no hay posibilidad de que nadie salga lesionado en caso de una descarga involuntaria), apriete el gatillo (Foto 12). Oírás un clic.

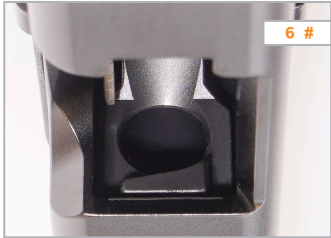

9



10



11



12

VI. Procedimiento de Descarga y Control de Seguridad

ADVERTENCIA Si el gatillo está en posición hacia adelante, su pistola GLOCK puede estar cargada.

ADVERTENCIA Si bien su pistola GLOCK tiene un indicador de recámara cargada, es un dispositivo mecánico que puede fallar. No confíe nunca únicamente en un indicador de recámara cargada para determinar si su pistola GLOCK está cargada o descargada. Extraiga siempre el cargador, retraiga y bloquee la corredera tirando de ella completamente hacia atrás y luego verifique visual y físicamente (con su dedo) para asegurarse de que no haya un cartucho en la recámara.

ADVERTENCIA Es posible que un cartucho esté en la recámara cuando se extrae o introduce un cargador en su pistola GLOCK. Un cartucho ubicado en la recámara se disparará cuando se apriete el gatillo, haya o no un cargador en su pistola GLOCK. Por lo tanto, no deje nunca desatendida su pistola GLOCK, aun cuando el cargador esté extraído. Debe verificar siempre que la recámara esté vacía antes del desarme parcial (separación de las piezas principales) de su pistola GLOCK para limpieza o por otra razón.

Siga las instrucciones de abajo para descargar su pistola GLOCK. Para asegurarse de que su pistola GLOCK esté descargada, DEBE proceder en este orden.

1. Mantenga el arma apuntando en una dirección segura y retire el cargador presionando el retén del cargador (19) (Foto 7). (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarrollada de las páginas 32-33).

2. Sosteniendo la empuñadura con la mano con la parte trasera de la corredera (1) desde el borde dentado y tire de ella completamente hacia atrás para expulsar el cartucho que pudiera haber en la recámara (Foto 8).



Si un cartucho se atasca al ingresar a la recámara o al ser expulsado, cumpla los pasos siguientes para extraerlo.

Manteniendo la boca de su pistola GLOCK apuntada hacia una dirección segura (una dirección segura es aquella en la cual no hay posibilidad de que nadie salga lesionado en caso de una descarga involuntaria), extraiga el cargador (de ser posible) oprimiendo el retén (19) del cargador. (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarrollada de las páginas 32-33).

Sosteniendo la empuñadura con la mano con que dispara, con su dedo lejos del gatillo (26) y fuera del guardamonte, agarre con su otra mano la parte trasera de la (1) corredera desde el borde dentado y tire de ella completamente hacia atrás. Bloquee la corredera en la posición hacia atrás (abierta): para hacerlo, empuje hacia arriba la palanca de retención de la corredera (27) y suelte lentamente la corredera desde la posición completamente hacia atrás hasta que trabé en la posición abierta.

Si esto no logra extraer el cartucho atasado, retírelo cuidadosamente de la recámara con sus dedos o con un tarugo de madera puntiagudo.

ADVERTENCIA

Siempre use la protección adecuada para sus ojos, siempre que vaya a remover un cartucho atasado en la pistola (no use herramienta metálica). No utilice una herramienta metálica para intentar extraer un cartucho no disparado, ya que puede encender el fulminante y provocar que reviente el cartucho, lo que provocaría que los fragmentos del mismo salgan volando por la ventana de expulsión con fuerza suficiente como para causar la muerte, lesiones personales graves y/o daños materiales.

Si no puede extraer el cartucho atasado mediante los pasos precedentes, deje la corredera bloqueada en la posición hacia atrás (abierta) y póngase en contacto en su región, con un armero de GLOCK certificado o un armero certificado.

V. Solución de Fallas de Funcionamiento (Atascos)

ADVERTENCIA En caso de que no se efectúe el disparo, continúe sosteniendo su pistola GLOCK apuntada hacia el objetivo durante al menos 30 segundos. Si se produjo una detonación retardada (ignición lenta), el cartucho debería disparar dentro de los 30 segundos aproximadamente. Si el cartucho no ha disparado, mantenga el arma apuntando en una dirección segura, retire el cargador, expulse el cartucho de la recámara y examine su cebador. Si la indentación del percutor es leve, está descentrada o no existe, interrumpa el uso de su pistola GLOCK y hágala examinar por GLOCK o un armero certificado por GLOCK. Si la indentación del percutor en el fulminante se ve normal (en comparación con cartuchos similares previamente disparados), puede que el cartucho sea defectuoso. Separe el cartucho del resto de la munición activa y los casquillos vacíos, vuelva a cargar su pistola GLOCK, y reanude los disparos. (Nota: deseché los cartuchos que fallaron de acuerdo con las instrucciones del fabricante de la munición).

ADVERTENCIA Si un cartucho no disparado se atraviesa, atasca o encasquilla al ingresar en la recámara, no intente forzar su ingreso en la misma empujando o golpeando la corredera para intentar cerrarla, ya que esto podría hacer que el cartucho explote, lo que provocaría que los fragmentos del mismo salgan volando por la ventana de expulsión con fuerza suficiente como para causar la muerte, lesiones personales graves y/o daños materiales.

ADVERTENCIA Utilice siempre gafas de seguridad cuando intente extraer un cartucho atascado para proteger sus ojos, y aleje de usted la ventana de expulsión de la pistola manteniendo el cañón apuntando en una dirección segura.

Todas las pistolas de carga automática pueden experimentar ocasionalmente una falla de funcionamiento (atasco) relacionada con la carga de munición. La mayoría de las fallas de funcionamiento son causadas por una munición inadecuada, un incorrecto agarre de la pistola al disparar ("muneca floja") una limpieza o lubricación inapropiada y un daño en su pistola. Para minimizar la probabilidad de fallas de funcionamiento (atascos), realice periódicamente un mantenimiento preventivo a su pistola GLOCK de acuerdo con las instrucciones del Capítulo 8 de este manual. Si experimenta una falla de funcionamiento (atasco) al utilizar una nueva marca, tipo o lote de munición, intente disparar otro tipo de munición para determinar si la munición fue la causa de la falla de funcionamiento (atasco).

ADVERTENCIA No use munición recargada, refabricada o cargada a mano, porque puede no cumplir con las normas aplicables de SAAMI, CIP u OTAN (NATO) y podría causar, la muerte, lesiones serias y/o dañar su pistola. Utilice únicamente munición de alta calidad fabricada comercialmente, del mismo calibre que su pistola GLOCK. (Nota: el uso de munición recargada, refabricada o cargada a mano anulará la garantía). El calibre de su pistola GLOCK está marcado en el cañón de la pistola.

Cuando la pistola está cargada con un cartucho en la recámara, puede ser disparada sencillamente apretando el gatillo (26) completamente hacia atrás. (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarrollada de las páginas 32-33).

Después de disparar el último cartucho del cargador, la corredera (1) permanecerá bloqueada abierta en posición hacia atrás (Foto 6). (Nota: si dispara su pistola GLOCK sin un cargador insertado, la corredera no se mantendrá bloqueada abierta en posición hacia atrás después de disparar).



ADVERTENCIA Nunca dispare a una superficie dura (como una roca) ni a una superficie líquida (como agua), ya que una bala puede rebotar y viajar en cualquier dirección, alcanzándole a usted o a otra persona.

ADVERTENCIA Su pistola GLOCK no tiene un seguro exterior convencional, y disparará si aprueba el gatillo cuando hay una bala en la recámara. La pistola GLOCK no tienen un seguro exterior convencional y disparará si aprueba el gatillo aun cuando haya una bala en la recámara y el proveedor haya sido removido de la pistola.

ADVERTENCIA Cuando se dispara una pistola GLOCK modelo C (con compensador), se expulsan con energía pólvora y gases calientes por los orificios de la parte superior de la corredera. No coloque nunca su mano sobre la corredera, y asegúrese de que ninguna parte de su cuerpo esté cerca o sobre los orificios del cañón al dispar.

ADVERTENCIA Ponga siempre a una persona responsable y competente a cargo para mantener la seguridad, la disciplina y el control cuando un grupo está disparando en un polígono, para reducir la probabilidad de una descarga negligente.

ADVERTENCIA Cuando esté en un polígono, lleve siempre descargada su pistola GLOCK con la corredera bloqueada abierta en posición hacia atrás, hasta prepararse para disparar. Mantenga siempre la pistola apuntada hacia la valla del blanco ("backstop") al cargarla, disparar y descargarla.

ADVERTENCIA Cuando esté listo/para disparar, asegúrese de que el área que está detrás de la corredera esté despejada (verifique su pulgar), y no sostenga la pistola cerca de su cuerpo, ya que la corredera se moverá con energía hacia atrás cuando la pistola se dispare. (Nota: cuando dispare con agarre de las dos manos, el pulgar de la mano inhábil debe estar del lado de la mano inhábil de la pistola, nunca detrás de la corredera).

ADVERTENCIA Asegúrese siempre de que ni usted ni otra persona estén cerca de la ventana de expulsión, ya que los cartuchos usados están calientes y son expulsados con suficiente fuerza como para causar lesiones. No toque nunca la corredera ni el cañón inmediatamente después de disparar, ya que pueden estar calientes y provocar quemaduras.

ADVERTENCIA Excepto cuando la corredera esté bloqueada en la posición completamente hacia atrás y usted esté revisando para asegurarse de que la recámara está vacía, no coloque nunca sus dedos en la ventana de expulsión, ya que pueden lesionarse por el movimiento de la corredera.

ADVERTENCIA No dispare nunca su pistola GLOCK cerca de un animal, a menos que el mismo esté adiestrado para tolerar ese ruido. La reacción asustada de un animal puede provocarle lesiones, o puede provocar que le lastime a usted o a otra persona.

ADVERTENCIA Antes de disparar su pistola GLOCK pase un parche limpio por el cañón, desde el extremo de la recámara, con la varilla limpiadora. Mantenga el arma apuntando en una dirección segura y elimine cualquier obstrucción, incluido el exceso de lubricante, antes de disparar su pistola GLOCK para que funcione de forma segura y correcta. Repita este procedimiento hasta que el parche salga del cañón sin aceite para armas o lubricante, ya que cualquier obstrucción en el cañón puede impedir que la pistola dispare adecuadamente y provocar la muerte o lesiones personales graves y daños a la pistola.

ADVERTENCIA En caso de que no se efectúe el disparo, continúe sosteniendo su pistola GLOCK apuntada hacia el objetivo durante al menos 30 segundos. Si se produjo una detonación retardada (ignición lenta), el cartucho debería disparar dentro de los 30 segundos aproximadamente. Si el cartucho no se disparó, extraiga el cargador, expulse el cartucho de la recámara y examine su fulminante. Si la indentación del percutor es leve, está descentrada o no existe, interrumpa el uso de su pistola GLOCK y haga la examinar por GLOCK, Inc. o un armero certificado por GLOCK. Si la indentación del percutor en el fulminante se ve normal (en comparación con cartuchos similares previamente disparados), puede ser que el cartucho sea defectuoso. Separe el cartucho del resto de la munición activa y los casquillos vacíos, vuelva a cargar su pistola GLOCK, y reanude los disparos. (Nota: deseche los cartuchos que fallaron de acuerdo con las instrucciones del fabricante de la munición).

ADVERTENCIA No use nunca su pistola GLOCK si no funciona correctamente, y no fuerce nunca el cierre de la corredera sobre un cartucho atascado, ya que puede causar que explote.

ADVERTENCIA Utilice siempre gafas de seguridad adecuadas cuando dispare su pistola GLOCK para proteger sus ojos. La protección ocular debe, como mínimo, proporcionar protección contra impactos con paneles laterales y cumplir con la norma ANSI Z87.1. Los ojos pueden sufrir lesiones por fragmentos expulsados de la pistola, casquillos de cartuchos expulsados, casquillos de cartuchos rotos, salpicaduras de los blancos, marcos de los blancos o topes traseros.

ADVERTENCIA Utilice siempre protección auditiva adecuada cuando dispare su pistola GLOCK para proteger su audición. La protección auditiva debe proporcionar, como mínimo, una reducción del ruido (NRR) de 24 Db (24 decibelios). La exposición sin protección al ruido de los disparos puede causar pérdida auditiva permanente o tinnitus (zumbido en los oídos).

ADVERTENCIA Asegúrese siempre, antes de disparar, de que la valla del blanco ('backstop') sea adecuada para detener y contener las balas, para no impactar en nada que esté fuera del área del polígono de tiro. Una bala puede pasar a través y más allá de su objetivo, hasta una distancia de aproximadamente 3 km (2 millas). Si tiene dudas, no dispare.

Si la corredera está bloqueada en la posición hacia atrás, oprima la palanca (27) de retención de la posición completamente hacia adelante, o agarre desde el borde dentado, tire de ella completamente hacia atrás y luego suéltela, permitiendo que regrese a la posición completamente hacia adelante. La pistola está ahora cargada y lista para disparar al apretar el gatillo.

0

Si la corredera (1) está en la posición hacia adelante, sostenga su pistola GLOCK con la mano con que dispara y, manteniendo su dedo lejos del gatillo y fuera del guardamonte, agarre con su otra mano la parte trasera de ping la corredera desde el borde dentado, tire de ella completamente hacia atrás (Foto 4) y luego suéltela, permitiendo que regrese a la posición completamente hacia adelante (Foto 5).



III. Carga



1



2



3

ADVERTENCIA

Su pistola GLOCK no tiene un seguro exterior convencional, y disparará si aprieta el gatillo cuando hay una bala en la recámara, aun si el proveedor es retirado de la pistola.

ADVERTENCIA

No use munición recargada, refabricada o cargada a mano, porque puede no cumplir con las normas aplicables de SAAMI, CIP u OTAN (NATO) y podría causar la muerte, lesiones personales graves y/o daños a su pistola. Utilice únicamente munición de alta calidad fabricada comercialmente, del mismo calibre que su pistola GLOCK. (Nota: El calibre de su pistola está marcado en la corredera de la misma pistola, el uso de munición recargada, refabricada o cargada a mano anulará la garantía de la pistola).

ADVERTENCIA

Antes de disparar su pistola-GLOCK pase un parche limpio por el cañón, desde el extremo de la recámara, con la varilla limpiadora. Repita este procedimiento hasta que el parche salga del cañón sin aceite para armas o lubricante, ya que cualquier obstrucción en el cañón puede impedir que la pistola dispare adecuadamente y provocar la muerte o lesiones personales graves y/o daños a la pistola.

Para llenar el cargador, empuje cada cartucho dentro del cargador desde el frente – ingresando primero la parte trasera del cartucho – contra la fuerza del resorte del cargador. (Foto 1-2)

Introduzca el cargador en su alojamiento hasta que el retén (19) del cargador quede bloqueado en su lugar. (Foto 3). (Nota: los números de pieza mencionados entre paréntesis a lo largo de este manual corresponden a la lista de piezas y a la vista desarmada de las páginas 32-33).


II. Juego de Pistola GLOCK

- Pistola GLOCK Safe Action con un cargador incluido
- Ayuda de carga
- Cargador(es) de repuesto (EE. UU. y Canadá incluyen 2 cargadores de repuesto)
- Equipo de limpieza (varilla con portaparche y cepillo)
- Manual de instrucciones de uso
- Placa(s) adaptadora(s), si procede
- Estuche para pistola (para almacenamiento y transporte)
- Juego de colas de castor o correas traseras, si procede.
- Bloqueo de cable (EE. UU. y Canadá únicamente)
- Folleto sobre Reglas básicas de seguridad de armas de fuego (EE. UU. y Canadá únicamente)



WWW.GLOCK.COM

I. Nomenclatura de la Pistola

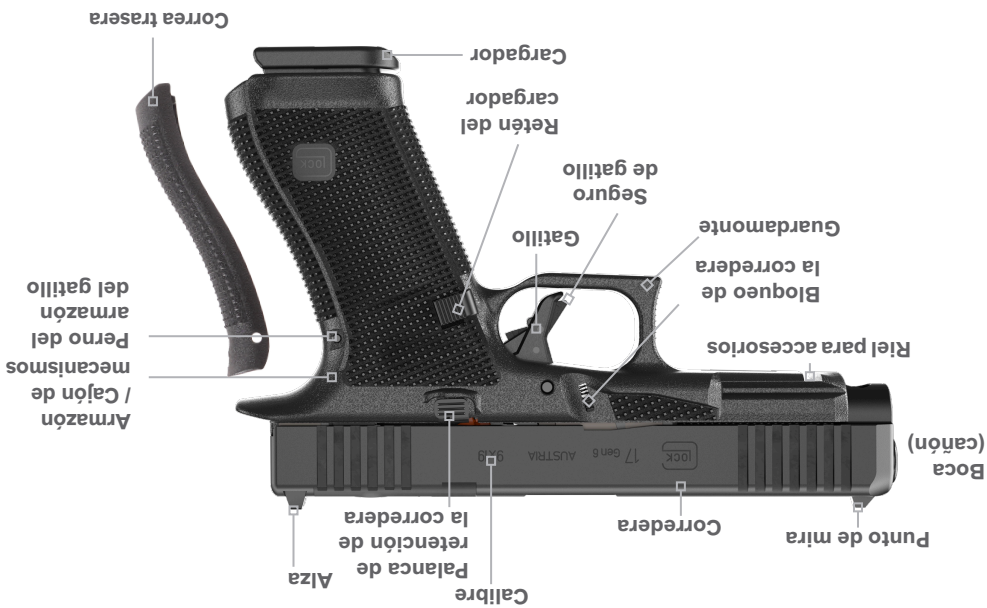

Especificaciones del modelo de pistola

ESTADOS UNIDOS Y CANADA

INTERNACIONAL



us.glock.com/en/products/commercial-firearms



eu.glock.com/en/Products/Pistols

06	I.	Juego de Pistola GLOCK
07	II.	Nomenclatura de la Pistola
08	III.	Carga
10	IV.	Disparo
13	V.	Solución de Fallas de funcionamiento (Atascos)
15	VI.	Procedimiento de Descarga y Control de Seguridad
17	VII.	Desarme parcial
21	VIII.	Mantenimiento preventivo e Inspección
29	IX.	Reensamblado e Inspección
32	X.	Piezas
33		Vista Desarrollada GLOCK 17 Gen6
34	XI.	Configuraciones de Pistola
36	XII.	Bloqueo de Cable y Almacenamiento
		(EE. UU. y Canadá únicamente)
37		Aviso de la ley de Seguridad de los Jóvenes y las Armas de Mano (EE. UU.)
40		Advertencias de Seguridad Establecidas por los Estados (EE. UU.)

Nota: Los números de Pieza mencionados entre Paréntesis a lo largo de este manual corresponden a la Lista de Piezas y a la vista desarrollada de las Páginas 32-33.

INTERNACIONAL

GLOCK Ges.m.b.H.
Gaston Glock-Platz 1, 2232 Deutsch-Wagram,
Austria
Tel.: +43(0)2247 90 300-0
E-Mail: sales@glock.at

ESTADOS UNIDOS Y CANADÁ

GLOCK Inc.
6000 Highlands Parkway, Smyrna, GA 30082,
U.S.A.
Tel.: +1 770-432-1202
E-Mail: glockcustomerservice@glock.us

Antes de salir de la fábrica, su pistola GLOCK fue probada, cuidadosamente inspeccionada, y empacada. GLOCK no puede controlar lo que le sucede a la pistola después de salir de fábrica; por lo tanto, debe examinar cuidadosamente su pistola GLOCK cuando la adquiere para asegurarse de que esté descargada y sin daños.

Si necesita otra copia de este manual, no entienda alguna de las advertencias e instrucciones del mismo o encuentra algún problema al operar su pistola GLOCK, póngase en contacto con la sucursal de GLOCK más cercana.

ADVERTENCIA La mayoría de las municiones contienen plomo en el proyectil y/o fulminante. El plomo es tóxico (sustancia venenosa), puede causar lesiones graves, muerte, defectos de nacimiento en recién nacidos y otro tipo de anomalías disparar su pistola GLOCK en un área poco ventilada puede causar exposición al plomo. Lave siempre sus manos después de manejar munición, disparar su pistola GLOCK y/o realizar un mantenimiento preventivo a su pistola GLOCK, para minimizar su exposición al plomo.

ADVERTENCIA La fabricación, posesión, venta o transferencia de dispositivos de conversión de ametralladoras (MCD) están prohibidas por la ley federal de los Estados Unidos, así como por muchas leyes estatales. Las infracciones de estas leyes están sujetas a sanciones penales.

ADVERTENCIA Si maneja su pistola GLOCK o cualquier otra arma de fuego de forma incorrecta o irresponsable, podría provocar una descarga negligente que puede causar la muerte, lesiones personales graves y/o daños materiales.

ADVERTENCIA Al manejar su pistola GLOCK considérela siempre cargada, para no disparar nunca con negligencia.

ADVERTENCIA Mantenga siempre su pistola apuntando en una dirección segura.

ADVERTENCIA No apriete nunca el gatillo, ni coloque su dedo en el gatillo o en el guardamonte, hasta que haya tomado la decisión de dispararle.

ADVERTENCIA No le crea nunca a nadie que un arma de fuego está descargada; verifíquelo siempre usted mismo/a, con el arma de fuego apuntada hacia una dirección segura y con su dedo lejos del gatillo y fuera del guardamonte. Ver páginas 15 – 16 para un procedimiento apropiado.

ADVERTENCIA Antes de entregar su pistola GLOCK a otra persona, asegúrese siempre y que la corredera esté bloqueada abierta en posición hacia atrás con el cargador extraído. Ver páginas 15 – 16 para un procedimiento apropiado.

ADVERTENCIA No altere ni modifique nunca su pistola GLOCK, ya que esto podría causar fallas de funcionamiento y generar una condición peligrosa.

ADVERTENCIA No lleve nunca su pistola GLOCK fuera de una pistola adecuada con un cartucho cargado en la recámara.

ADVERTENCIA Para guardar su pistola GLOCK, primero descárguela como se describe en el Capítulo 06. Luego, después de revisar para asegurarse de que esté descargada (con el proveedor extraído y la recámara vacía), use el cable con candado provisto por GLOCK para asegurar su pistola y colóquela en un contenedor con cerradura.

ADVERTENCIA Siempre guarde y transporte su pistola GLOCK descargada, puesta en la caja con cerradura, use el cable con candado provisto por Glock, por favor mantener fuera del alcance y de la vista de los niños o cualquier persona no autorizada.

ADVERTENCIA Nunca guarde o transporte munición en la misma caja que su pistola GLOCK.

Reglas de Seguridad de Armas de Fuego

Lea este manual y las advertencias antes de manipular, cargar o usar su pistola GLOCK. Este manual explica el funcionamiento y manejo de su pistola GLOCK y advierte sobre los peligros potenciales, incluida la muerte y lesiones personales graves, que puede ocasionar el uso inseguro de su pistola GLOCK. Este manual debe acompañar SIEMPRE su pistola GLOCK y transferirse junto con ella si es vendida, regalada o prestada a otra persona. Queremos que disfrute de disparar su pistola GLOCK, pero queremos que la disfrute de manera segura. Sea usted una persona experimentada en tiro o alguien que nunca antes manejó un arma de fuego, debe LEER CUIDADOSAMENTE ESTE MANUAL antes de manipular, cargar o disparar su pistola GLOCK. Este manual proporciona instrucciones básicas sobre el funcionamiento y manejo correctos de su pistola GLOCK. Su seguridad y la seguridad de otros dependen de que siga las instrucciones y advertencias de este manual, así como del uso constante de prácticas seguras de manejo de armas de fuego. Si usted no está familiarizado/a con las armas de fuego, tome un curso sobre el manejo seguro de armas de fuego dictado por un instructor calificado en el uso de las mismas, su club de tiro local o una organización calificada similar.

Este manual contiene varias instrucciones y advertencias de seguridad precedidas por las leyendas **ADVERTENCIA**, **PRECAUCION** o **AVISO**. Estas palabras clave están diseñadas para llamar su atención sobre una información de seguridad importante. **ADVERTENCIA** indica una situación peligrosa que, si no se evita, podría provocar la muerte o lesiones personales graves. **PRECAUCION** indica una situación peligrosa que, si no se la evita, puede provocar la muerte o lesiones graves. **AVISO** aborda prácticas de seguridad no relacionadas con lesiones personales.

El mayor nivel de preparación requerido por parte del personal militar o de las fuerzas de seguridad puede supeditar varias de las instrucciones de seguridad contenidas en este manual. Para proporcionar seguridad y a la vez operar con un mayor nivel de preparación, se recomienda realizar un apropiado entrenamiento inicial orientado al combate y una cantidad razonable de entrenamiento periódico que haga énfasis en procedimientos tácticos seguros.

ADVERTENCIA Si no se sigue la información de seguridad y las instrucciones de seguridad y/o daños materiales.

ADVERTENCIA Si toma alguna medicación, consulte siempre a un médico para asegurarse de que puede disparar y manejar con seguridad un arma de fuego. No tome nunca bebidas alcohólicas ni drogas antes o durante el uso del arma. Su visión, balance, coordinación y juicio pueden verse seriamente afectados y eso puede hacer inseguro su manejo del arma de fuego (PISTOLA).



PISTOLAS SAFE ACTION®



ADVERTENCIA Lea cuidadosamente este manual antes de manipular, cargar o usar su pistola GLOCK.

ADVERTENCIA Como la mayoría de las pistolas modernas, su pistola GLOCK está diseñada sin seguro exterior convencional. Por lo tanto, debe considerarla cargada y lista para disparar hasta que haya retirado el cargador y confirmado visual y físicamente (con su dedo) que la recámara está vacía. INCLUSO después de haber confirmado que la pistola esta descargada, usted debe continuar manipulando la pistola como si estuviera cargada todo el tiempo NUNCA, apunte hacia usted, o hacia otra persona o cualquier lugar inseguro.