
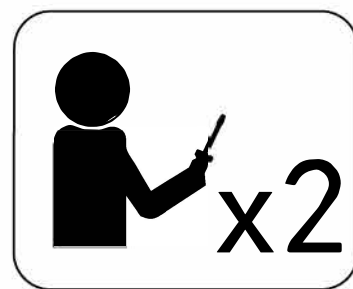
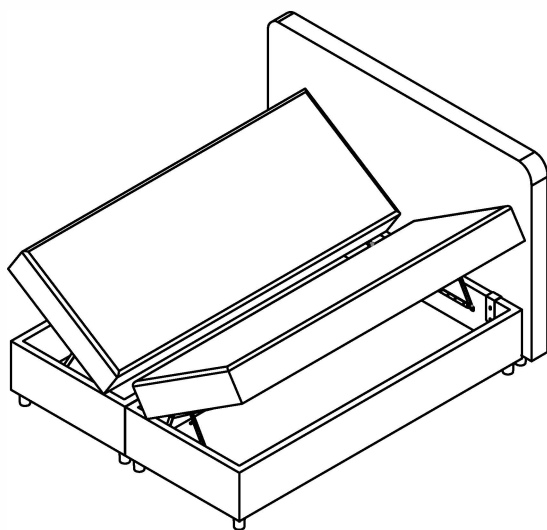
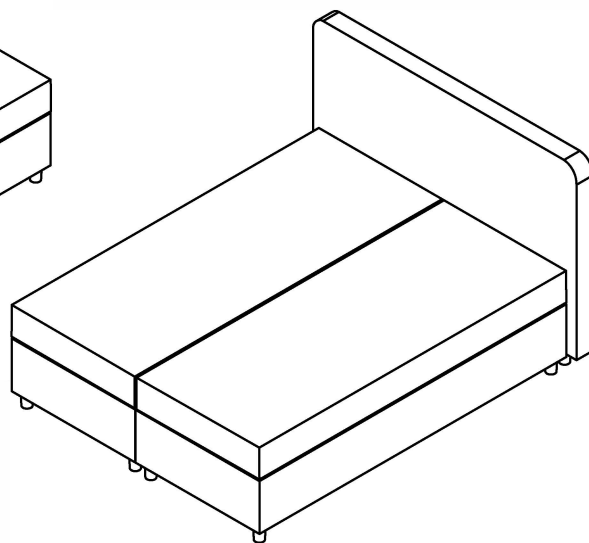



24085

ASSEMBLY INSTRUCTIONS

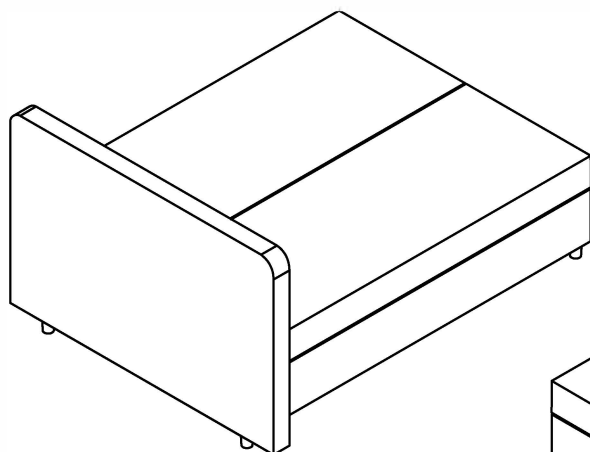


READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY


1. PLEASE SEPARATE AND IDENTIFY ALL PARTS , MAKING SURE THATYOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ONASOFT MAT ORSIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREWAND NUT IS PROPERLY FASTENED , DO NOT OVER FASTEN IT.
6. DO NOTCOMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FXED.

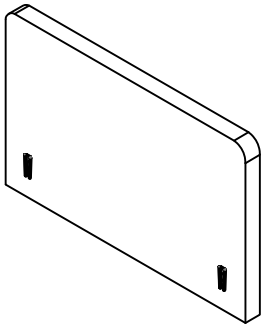


①x1

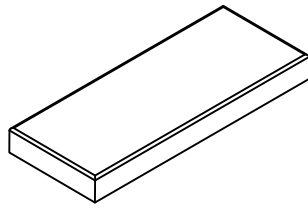


②x1

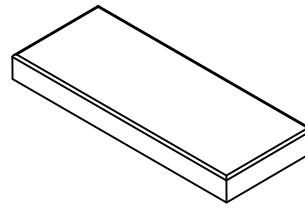


③x1

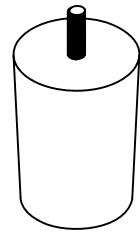


④x12

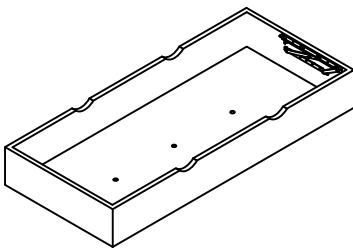


⑤x1

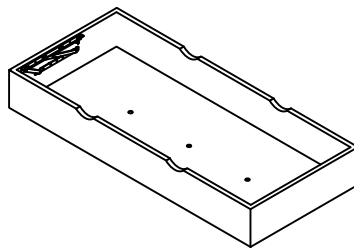


⑥x1

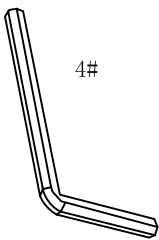

Ax1

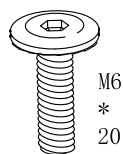


Bx16




Cx1


Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

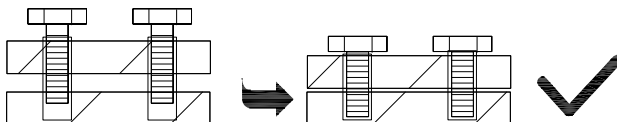


Don't tighten up the screw before you start next mounting during the installation.

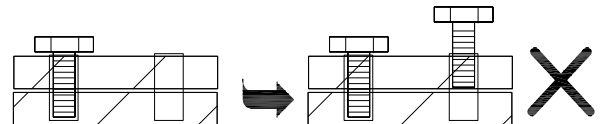


1

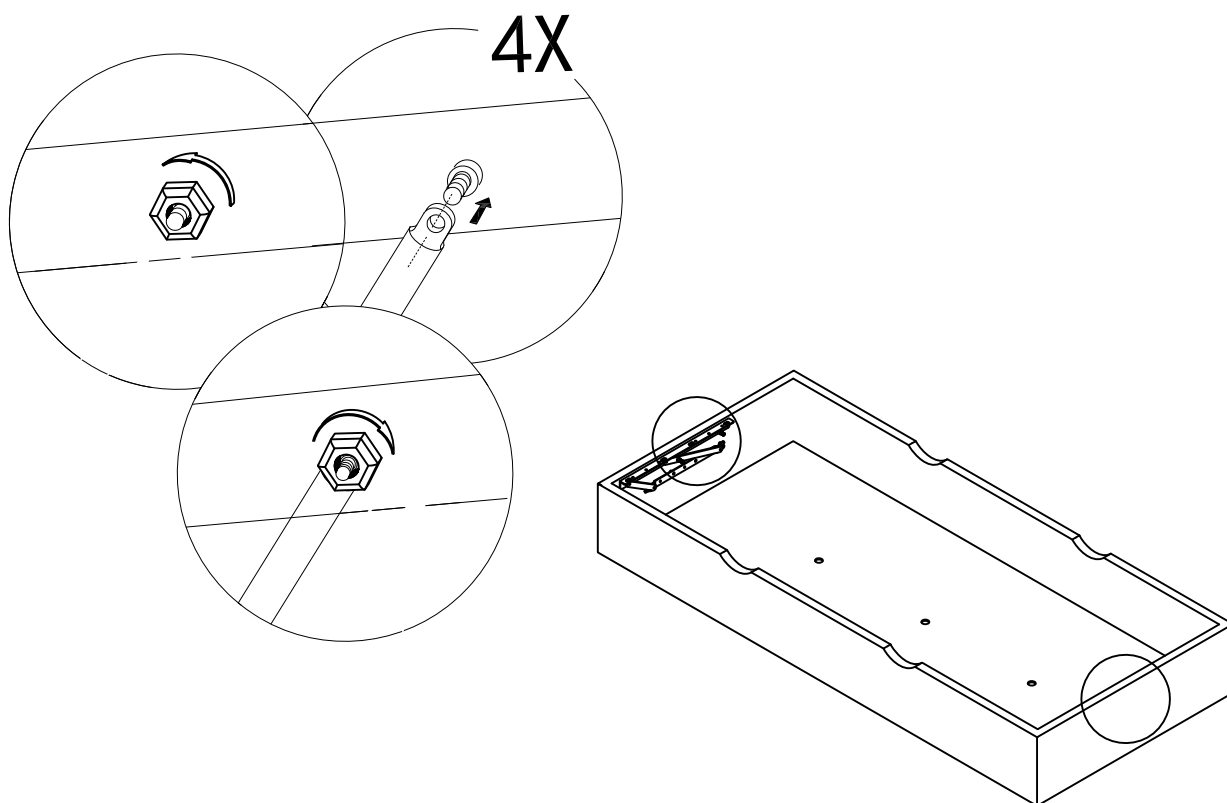


2

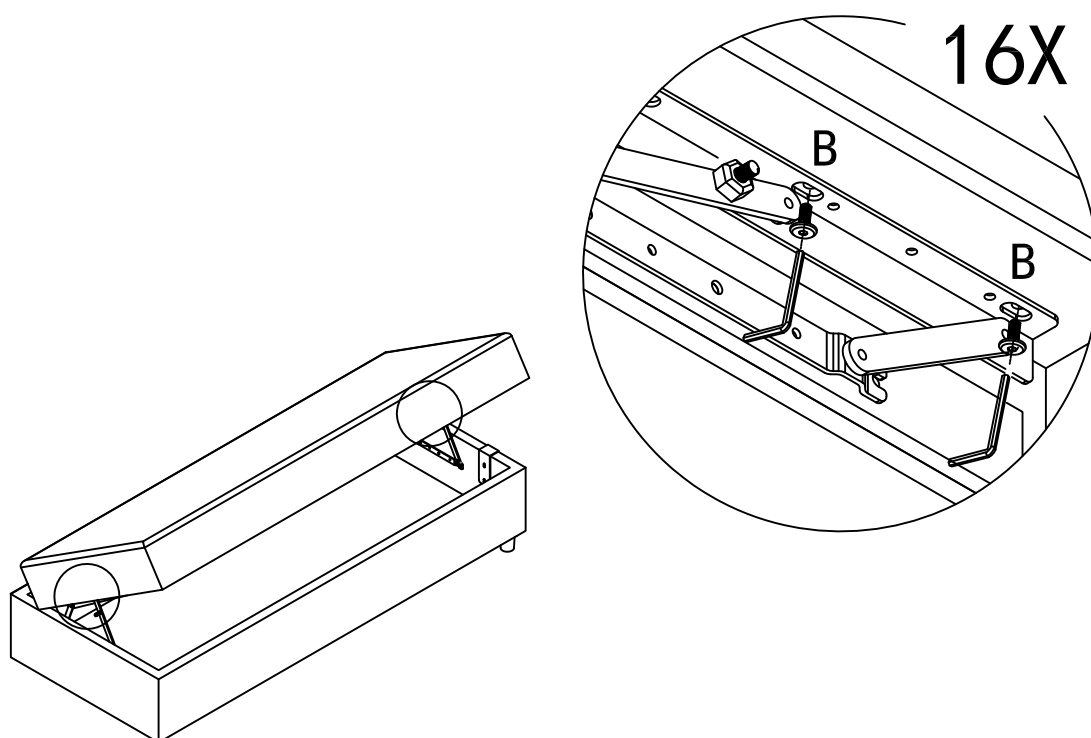





3

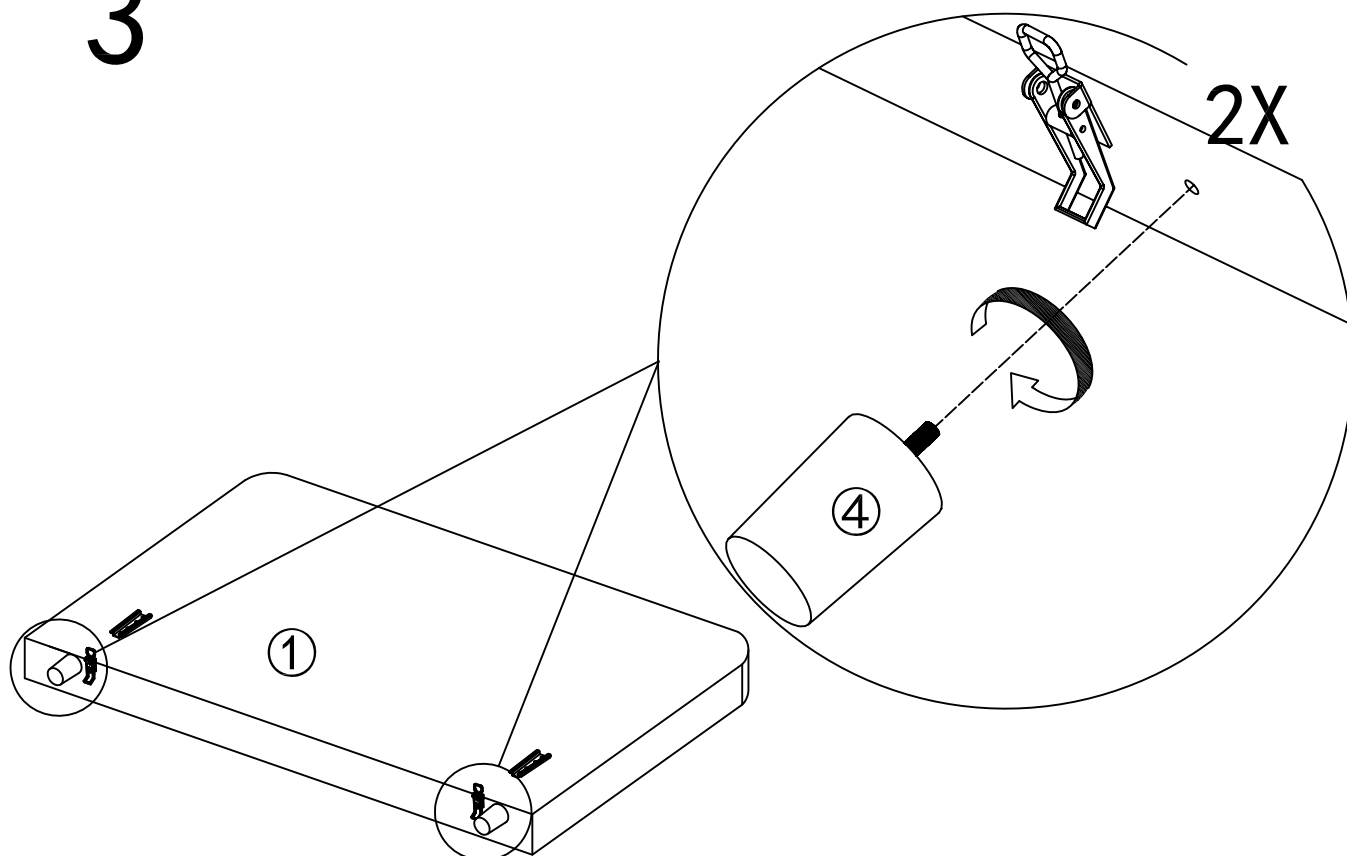

4

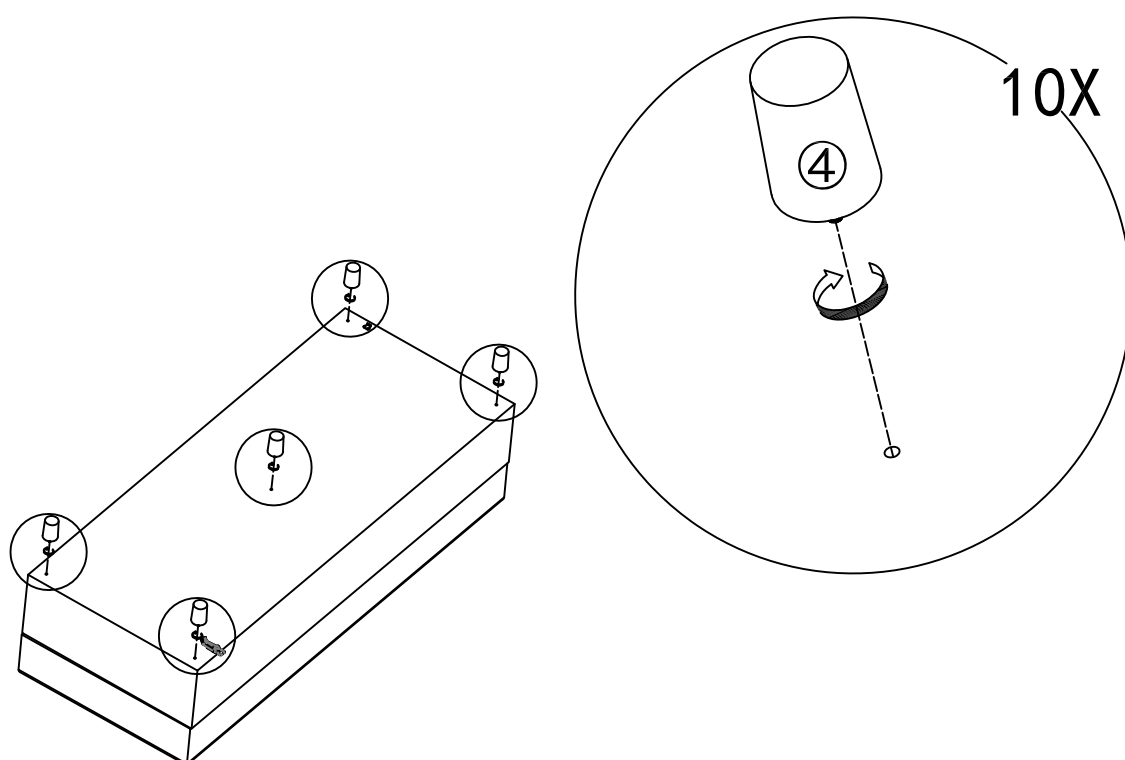

5

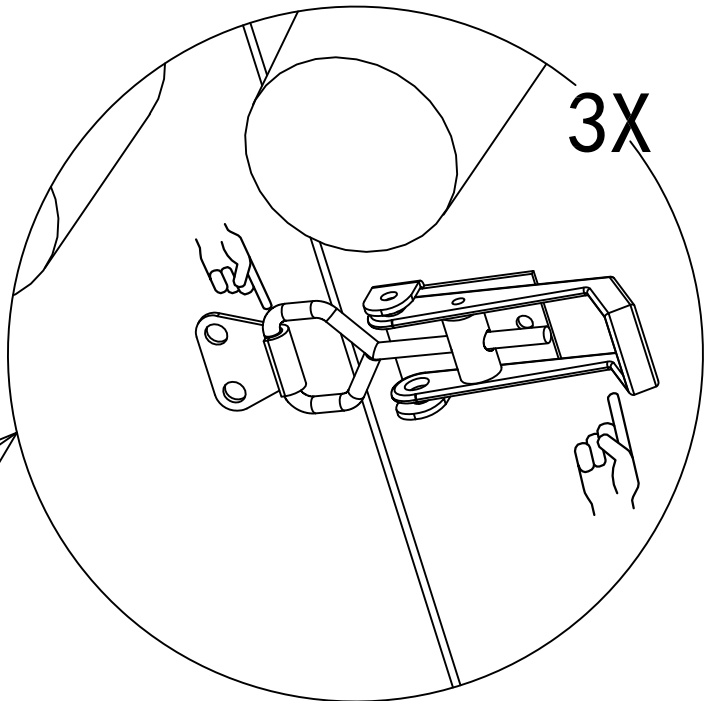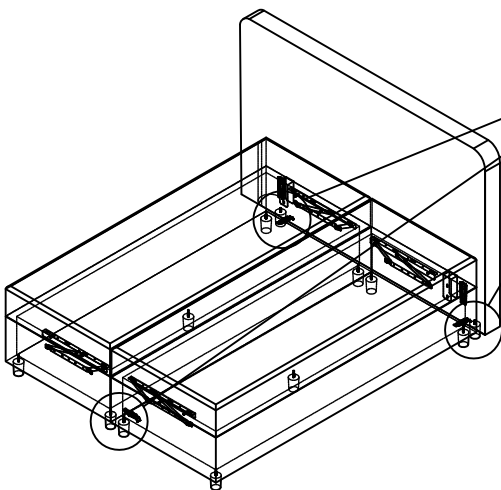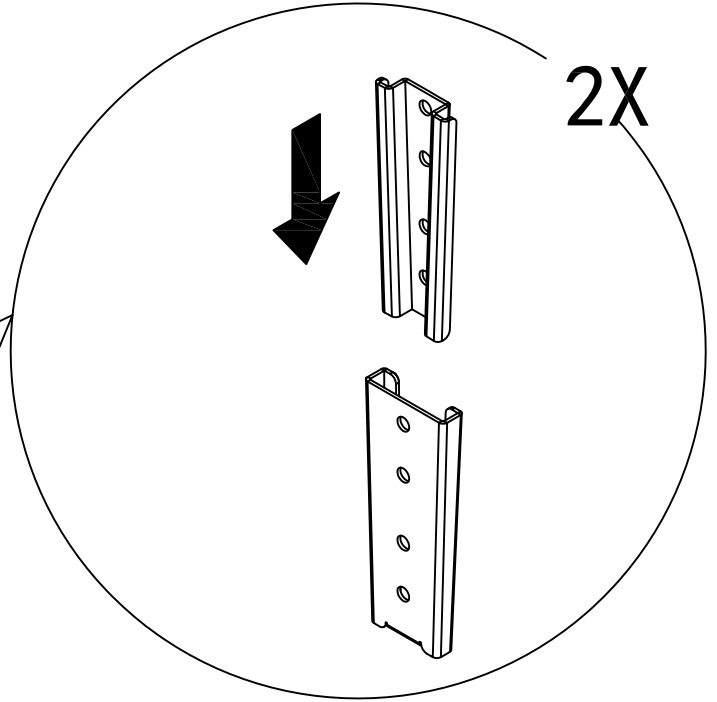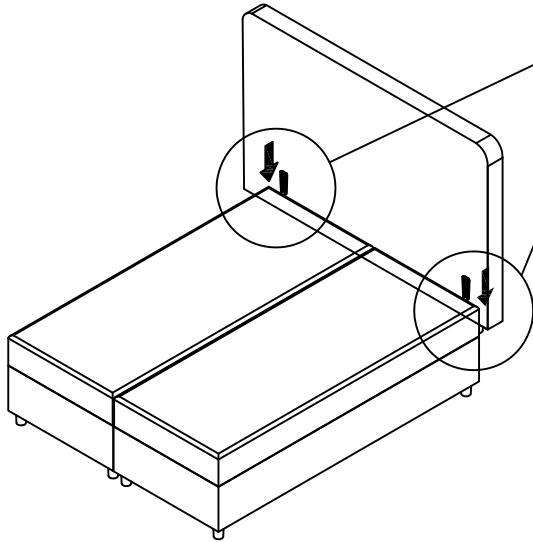

6

