



Night Antwerp

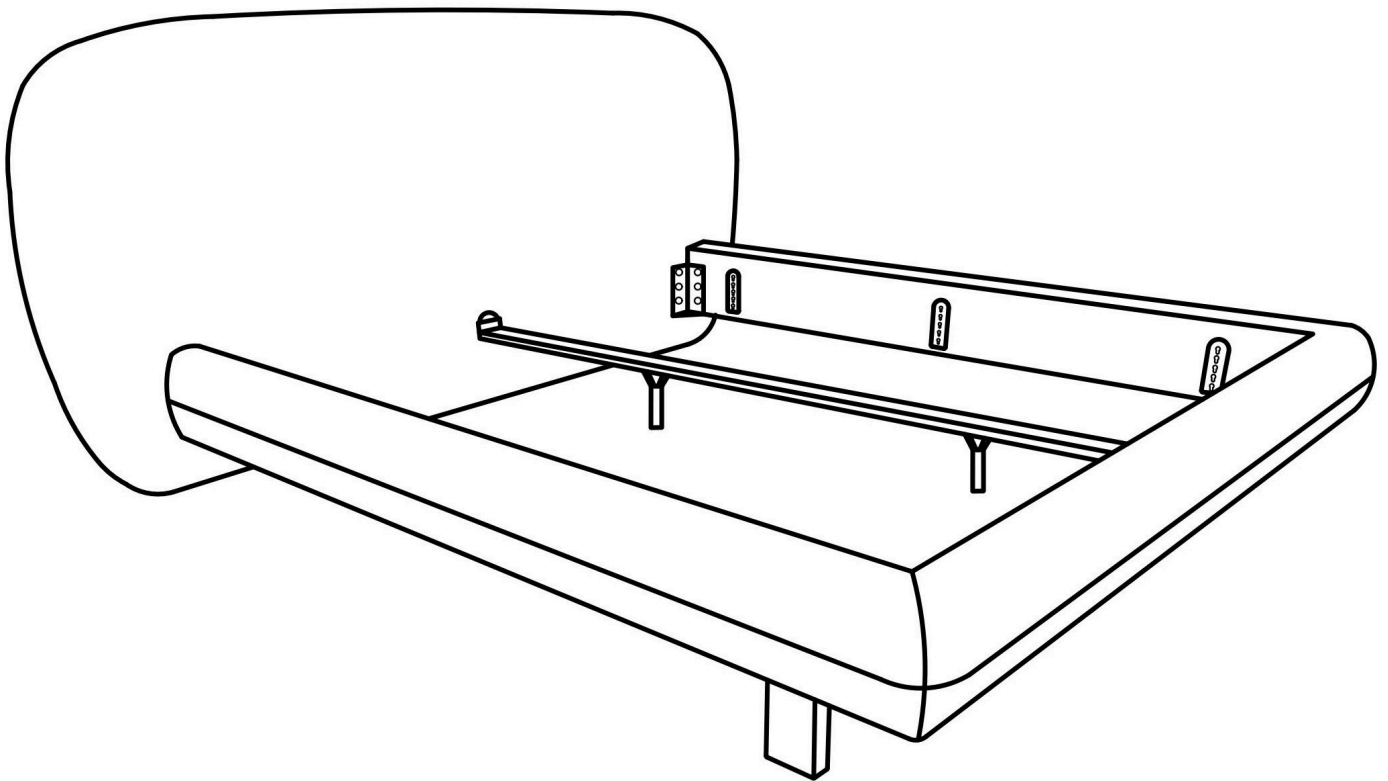

Polsterbett ohne Stauraum
Gestoffeerd bed zonder opbergruimte
Upholstered bed without storage space


SWISS♦SENSE®

A

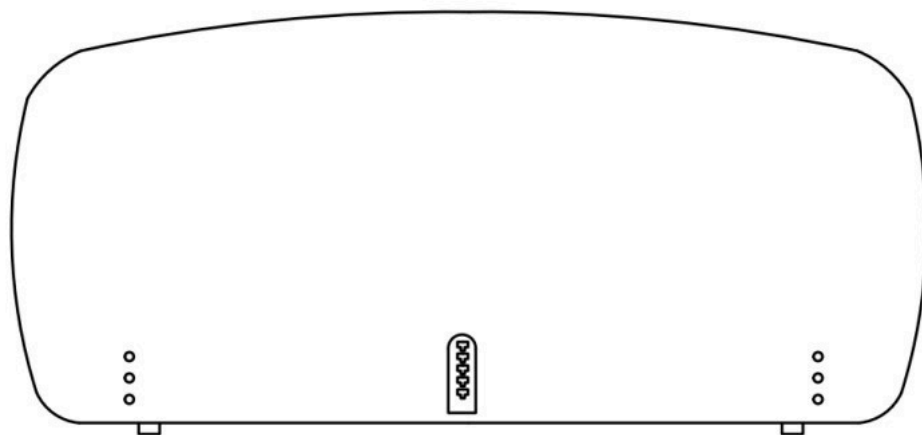

1x

B

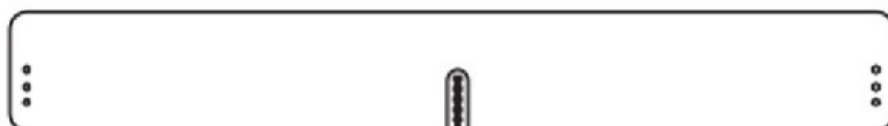

1x

C




2x


D




1x

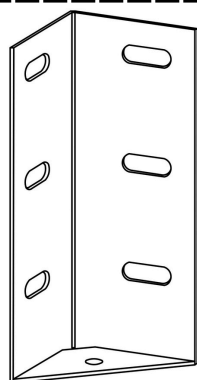

E 4x

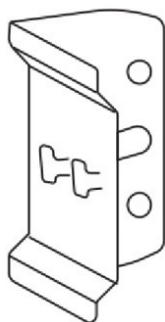

F 6x

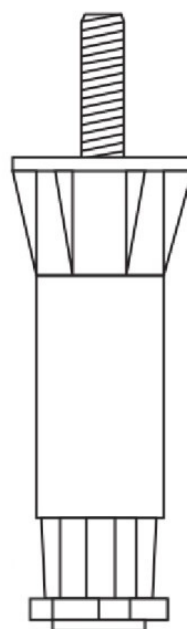

G 2x




H 24x



I 24x



J 8x

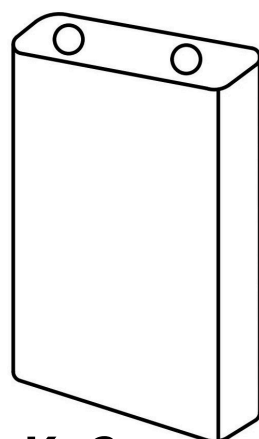

K 2x




L 4x



M 4x

! ACHTUNG ATTENTIE ATTENTION !

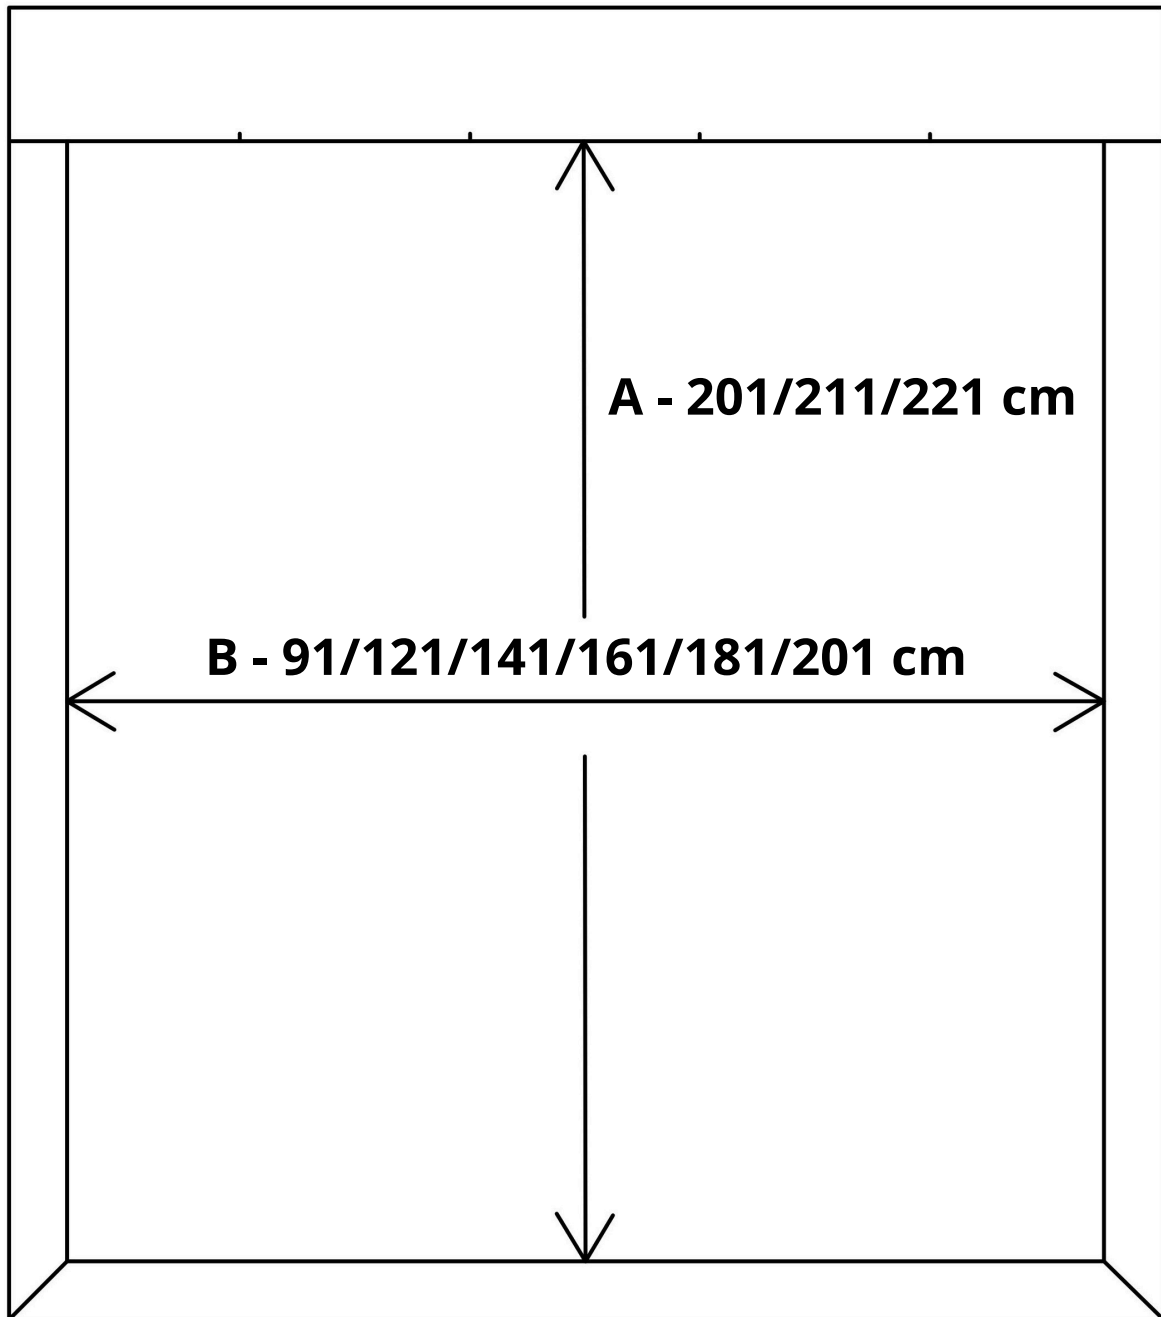


Je nach gekauftem Bettmaß muss das Innenmaß nach dem Verdrehen den Maßen A und B entsprechen.

Afhankelijk van de gekochte bedafmeting moet de binnenafmeting na verdraaiing overeenkomen met de afmetingen A en B.

Depending on the purchased bed size, the internal dimension after assembly must correspond to dimensions A and B.


1

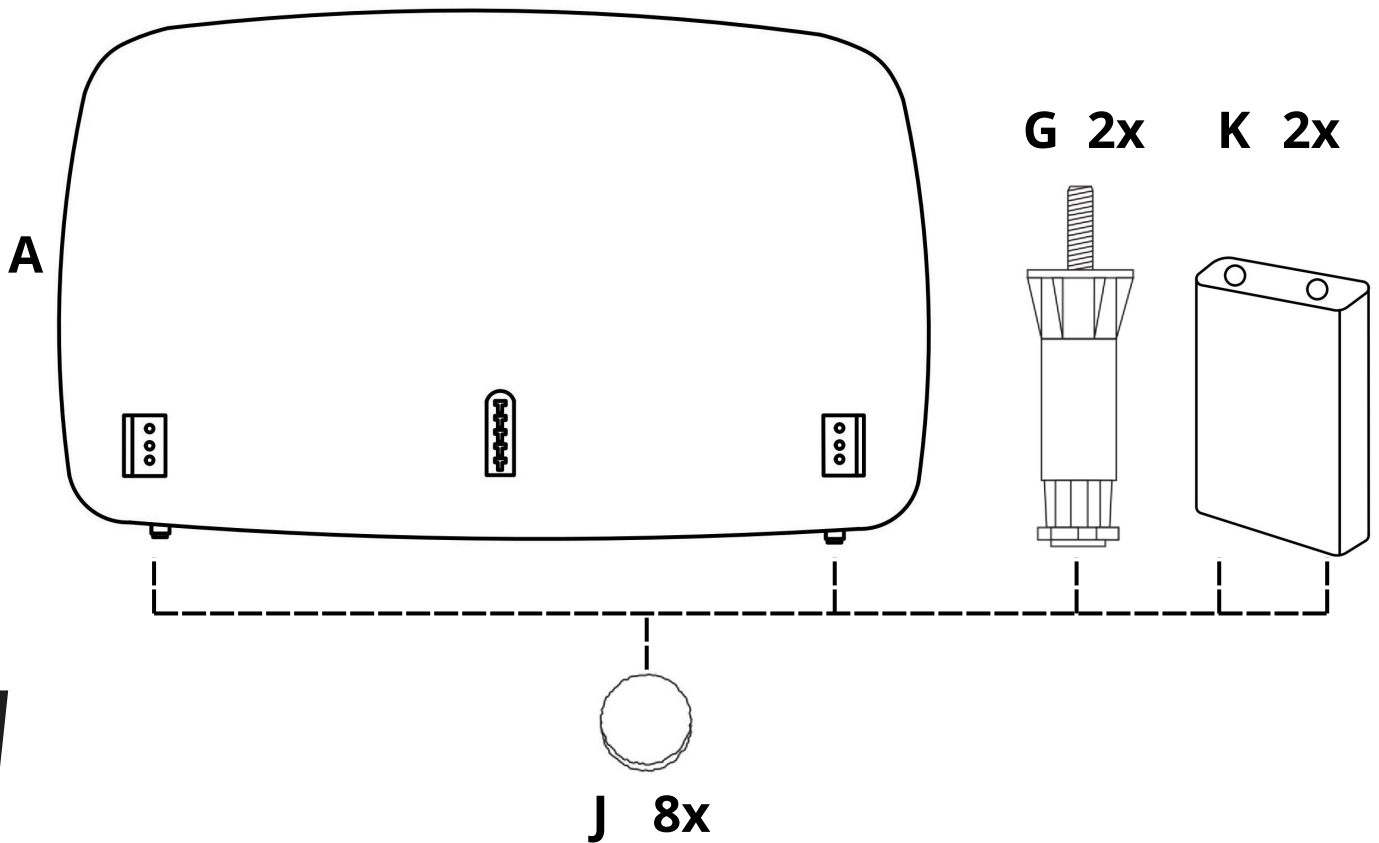


Verbinden Sie zuerst das Element E mit dem Element B und dann die Schraube mit dem Element C.

Verbind eerst element E met element B, dan de bout met element C.


First connect element E to element B, then bolt to element C.

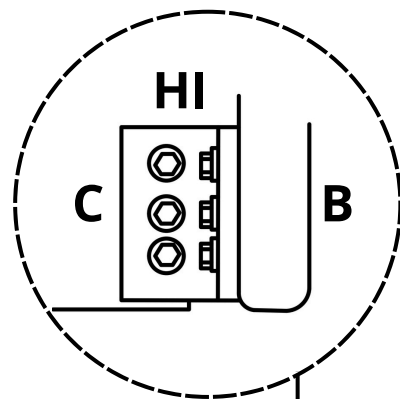


2

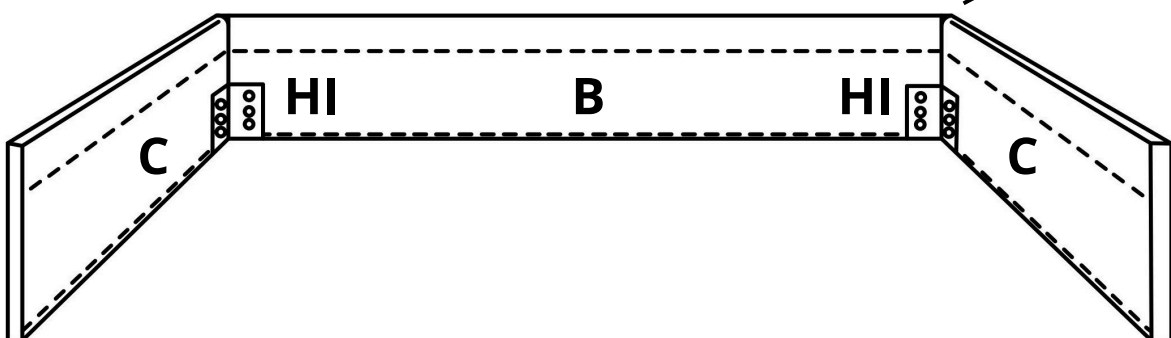

3

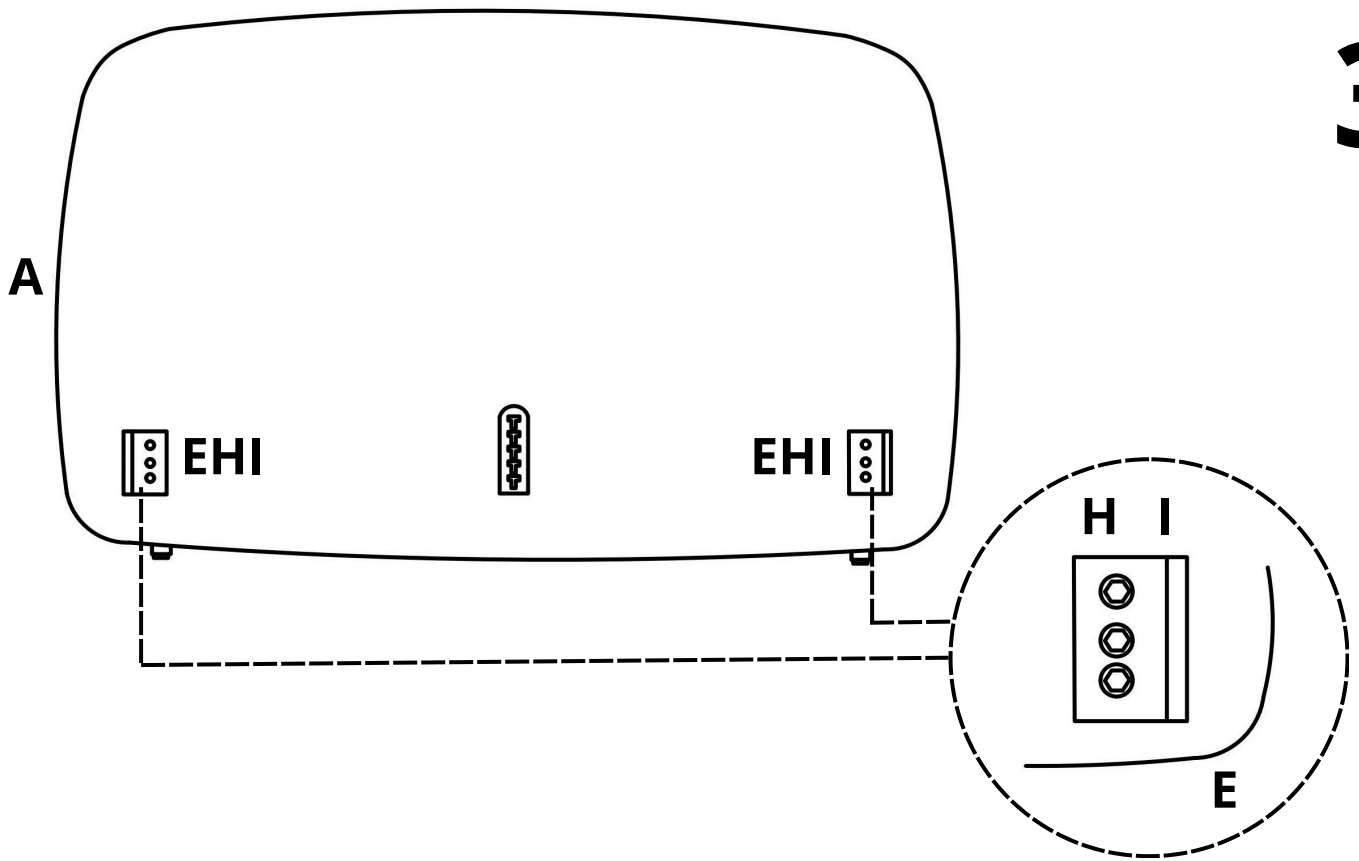

4

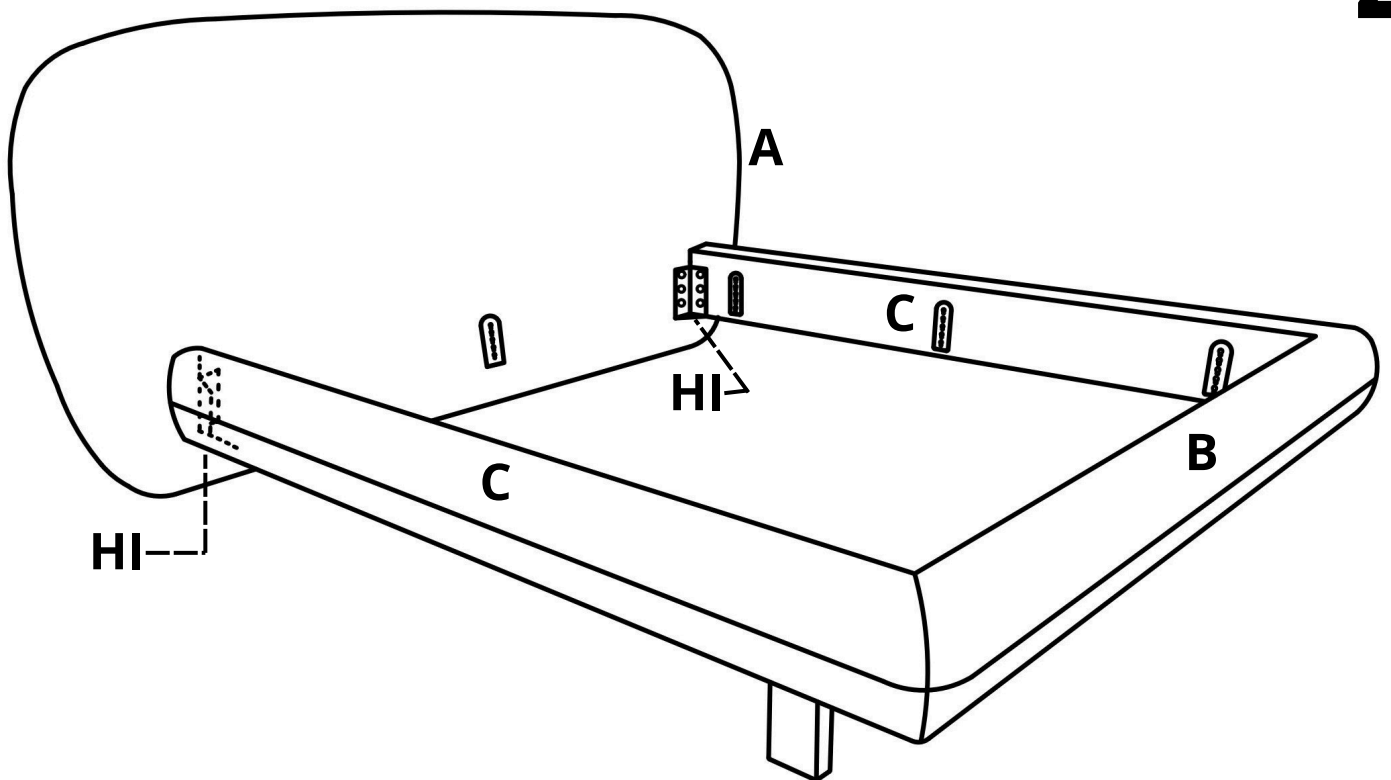



A schematic diagram of a beam. The beam is represented by a long horizontal rectangle. At each end of the beam, there is a vertical line segment extending downwards, representing a fixed support or end restraint, labeled with a bold 'D'. Below the beam, there are two identical support structures, each labeled with a bold 'G'. These supports consist of a vertical post with a flared base, representing a roller support.

Diagram 7 illustrates the step of attaching the headboard to the bed frame. The headboard is shown being positioned against the top of the frame. The label 'D' indicates the specific attachment point or mechanism on the headboard.