



① (X1)

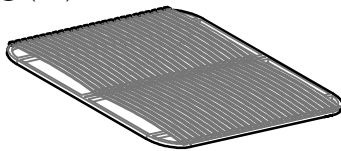


BED BOTTOMS SET

② (X2)

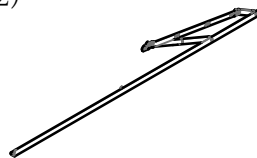


MECHANISM

③ (X2)

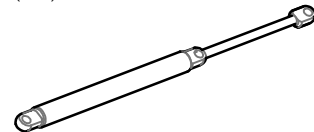


GAS LIFT

④ (X1)

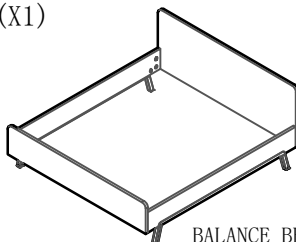


BALANCE BEDFRAME

⑤ (X1)

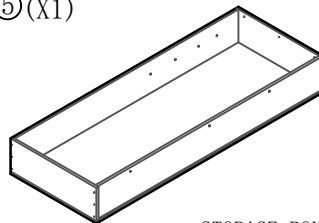


STORAGE BOX - LEFT

⑥ (X1)

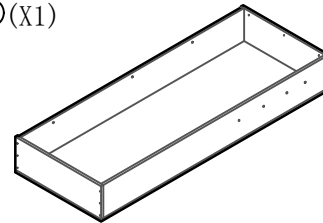


STORAGE BOX - RIGHT

A (3pcs)



SPACER
16MM THK

B (2pcs)



SCREW
M8X80

C (5pcs)



ALLEN BOLT
M6X50

D (4pcs)



SCREW
M8X45

E (18pcs)



SCREW
M8X25

F (6pcs)



SCREW
M8X15

G (6pcs)



TORX WOOD
SCREW
M5X40MM

H (6pcs)



M8 NUT

I (2pcs)



M6 NUT

J (2pcs)




WASHER

K (1pc)




FABRIC
LOOP 64CM


L (2pcs)




U-PROFILE

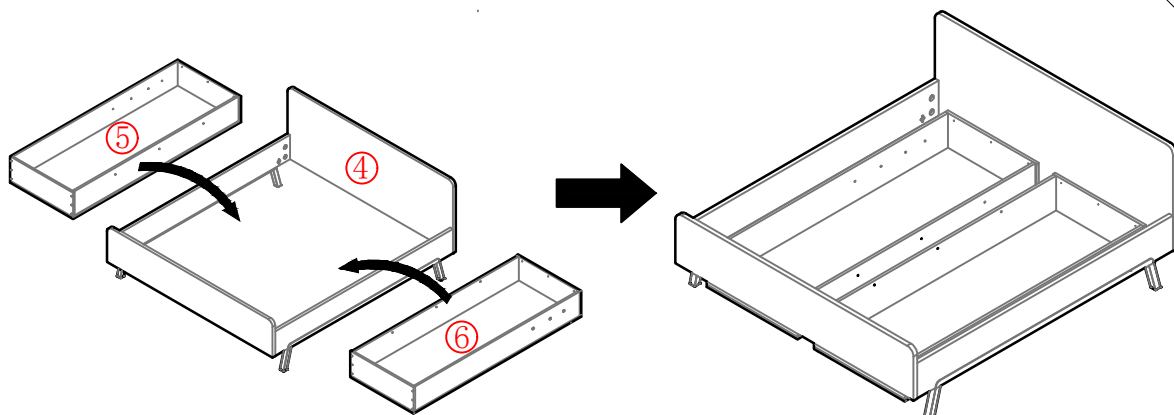


PLEASE REFER TO THE BED FRAME ASSEMBLY INSTRUCTIONS.

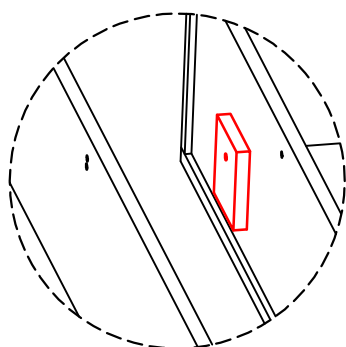


IMPORTANT: MOVE SPACERS FROM THE LEFT BOX TO THE RIGHT BOX

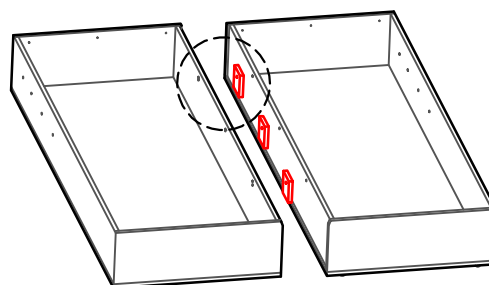



SPACER INSTALLATION

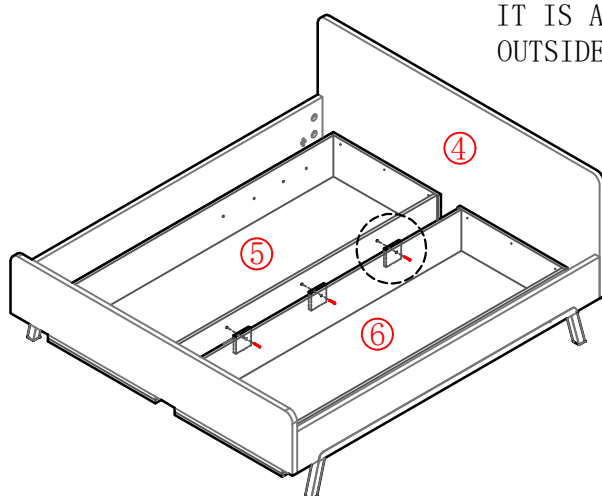

ATTACH THE BOLT INSIDE THE BOX, ENSURING IT IS ALIGNED WITH THE SPACER LOCATED OUTSIDE THE BOX.

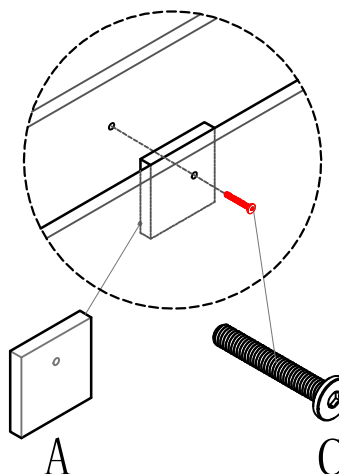


INSTALLATION OF SPACER BOLT

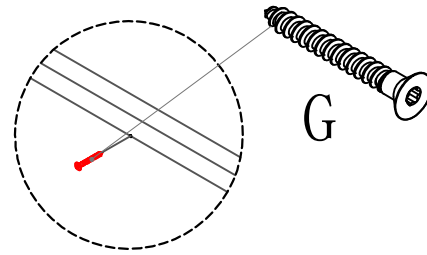
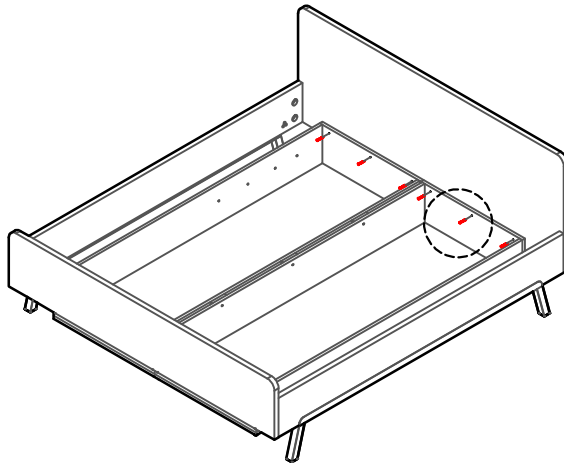


IMPORTANT : ALIGN THE
STORAGE BOXES LEFT AND
RIGHT WITH THE SIDE
RAILS PRIOR TO ATTACHING
THEM TO THE CENTER OF
HEADBOARD

INSTALLATION OF STORAGE BOX

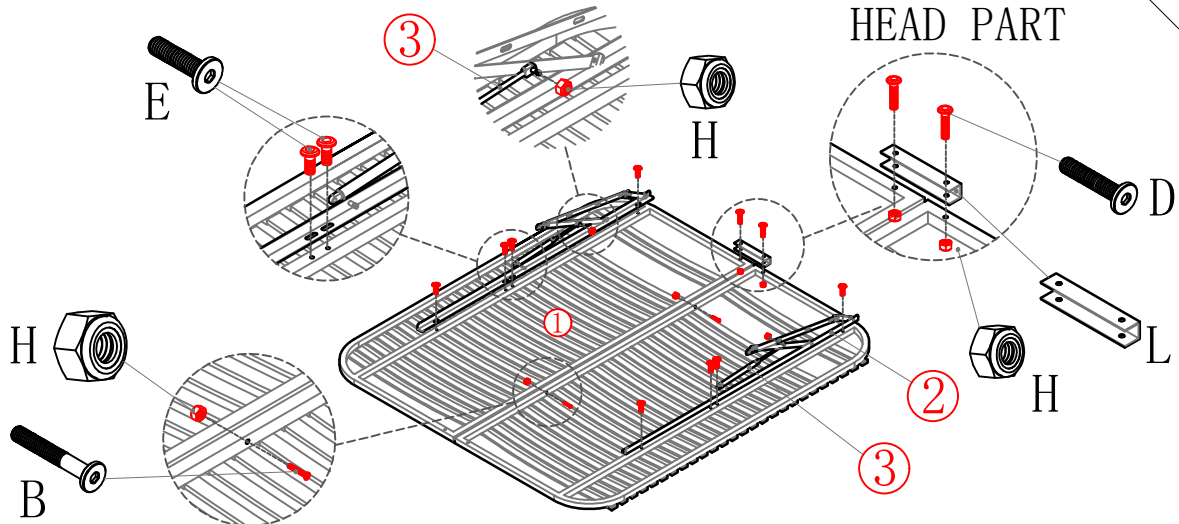


INSTALLATION OF BED BOTTOM MECHANISM

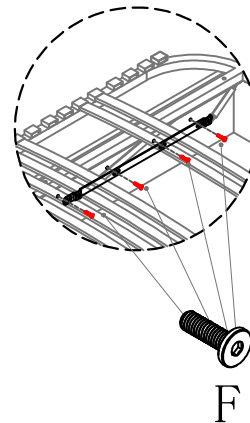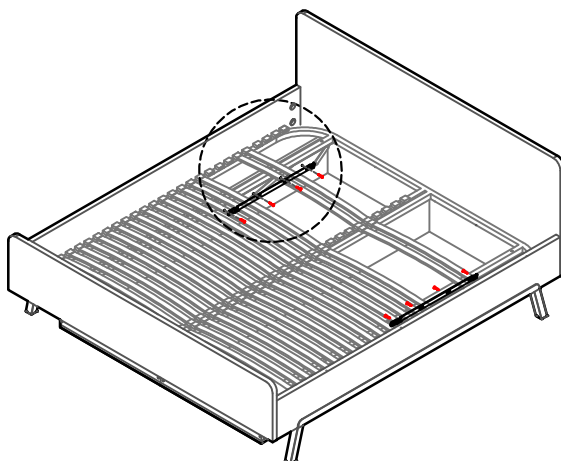

MECHANISM INSTALLATION



7

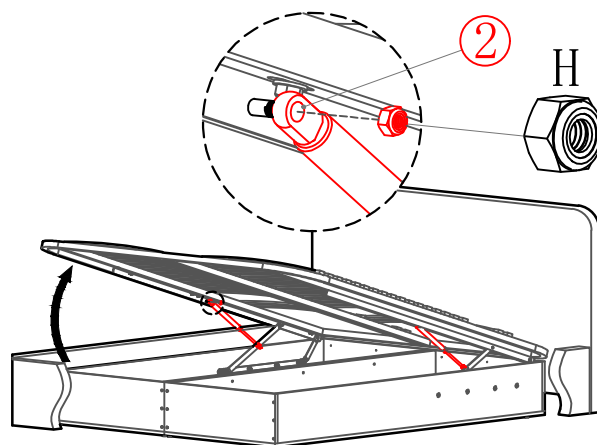


GAS LIFT INSTALLATION

8

9.1

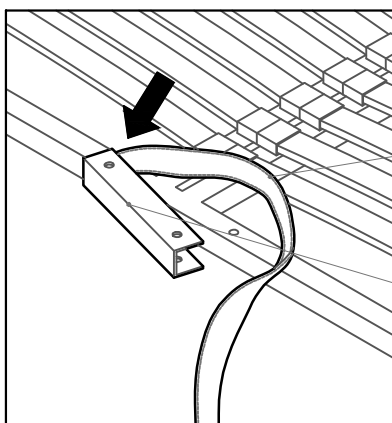




9.2

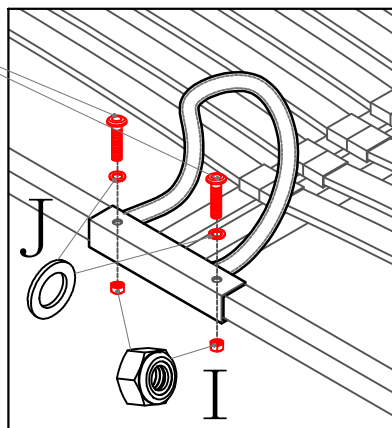

INSTALLATION OF FABRIC LOOPS FOR FOOT PART

ENSURE THAT THE WOODEN SLATS ARE
ALIGNED IN THE SAME ORIENTATION AS
THE OTHER SLATS.

9

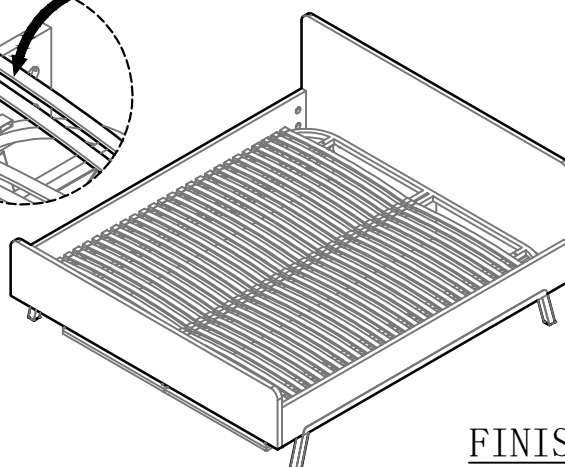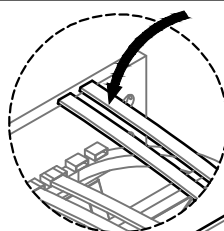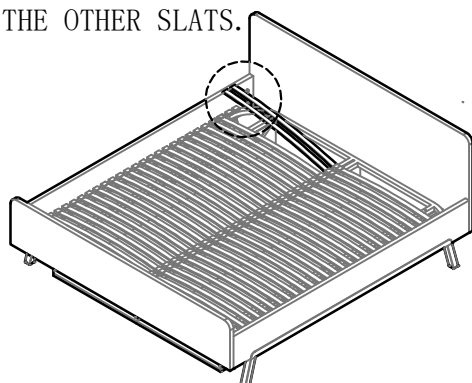

REATTACH THE WOODEN SLATS

FINISH