

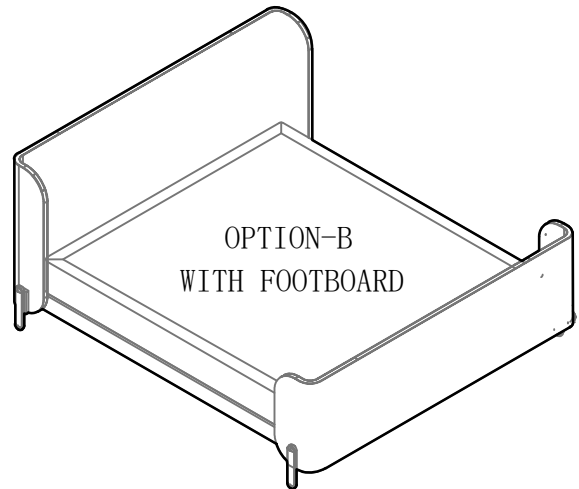
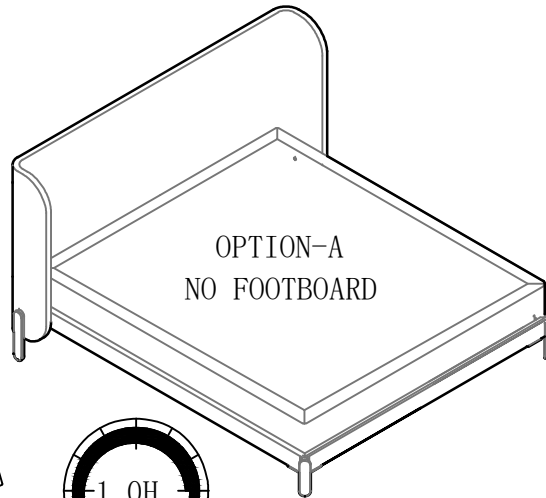
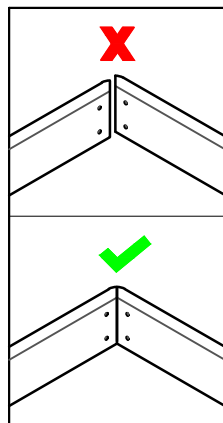


① (1pc) HEADBOARD	② (1pc) LEFT SIDE RAIL	③ (1pc) RIGHT SIDE RAIL	④ (1pc) FOOT RAIL
⑤ OPTION-A (2pcs) OPTION-B (4pcs) FELT PADS (4pcs) HEADBOARD/FOOTBOARD DECORATIVE LEGS - LARGE	⑥ OPTION-A (2pcs) FELT PADS (2pcs) BEDFRAME DECORATIVE LEGS - SMALL	⑦ (2pcs) BOXSPRING	⑧ (1pc) MATTRESS
⑨ OPTION-B (1pc) FOOTBOARD	A (4pcs) METAL CONNECTOR	B (12pcs) BOXSPRING LEGS	C OPTION-A (12pcs) OPTION-B (16pcs) ALLEN BOLT M6X40
D OPTION-A (4pcs) ALLEN BOLT M6X50	E OPTION-A (8pcs) OPTION-B (12pcs) ALLEN BOLT M6X90	F (1pc) ALLEN KEY	G OPTION-A (4pcs) OPTION-B (8pcs) M6 PLAIN WASHER

OPTION A

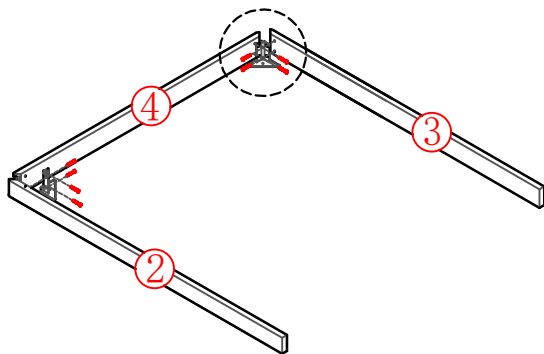

PROPER CORNER
ALIGNMENT

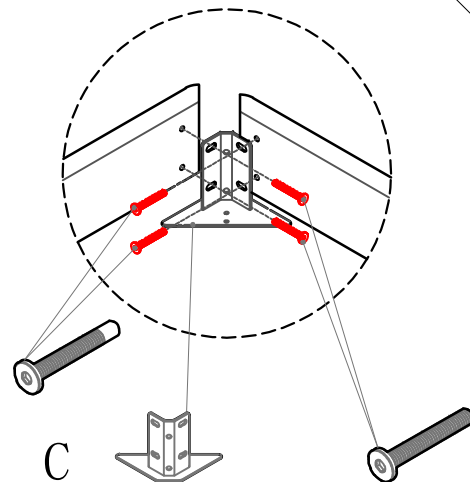


C

A

E

BEDFRAME INSTALLATION / NO FOOTBOARD

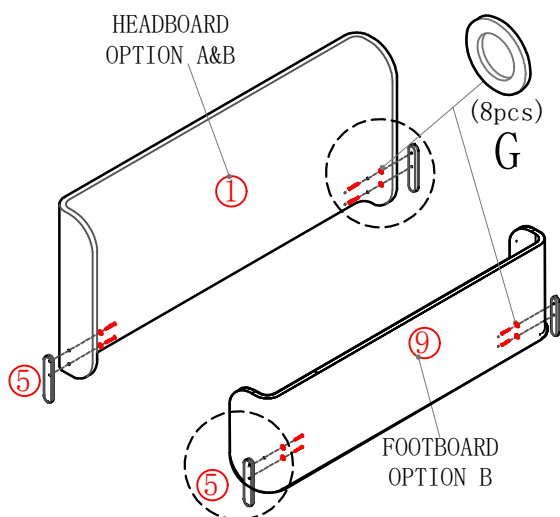


HEADBOARD
OPTION A&B

(8pcs)
G

FOOTBOARD
OPTION B


FOR OPTION A, ATTACH THE
SMALL DECORATIVE LEGS ((6))
TO THE CORNER OUTER BEDFRAME
USING BOLT D.

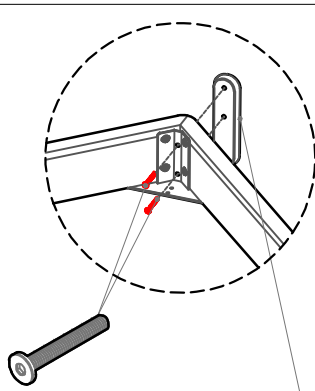

D

(6)

FOR OPTION B, ON OUTER SIDE
OF HEADBOARD & FOOTBOARD
ATTACH LARGE DECORATIVE LEGS
((5)) WITH BOLT E & WASHER G.

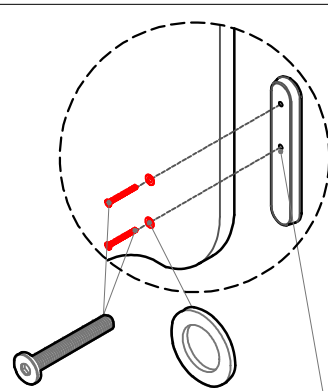


E

G


(5)

DECORATIVE LEGS INSTALLATION

OPTION A

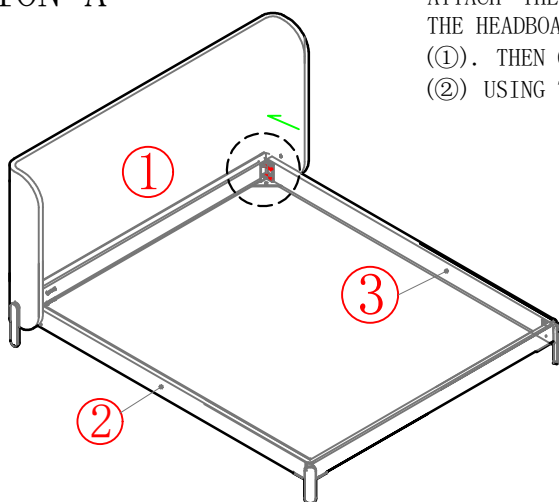

ATTACH THE METAL CONNECTOR (A) TO
THE HEADBOARD.
(1). THEN CONNECT THE SIDE RAILS
(2) USING THE BOLTS (E & C).

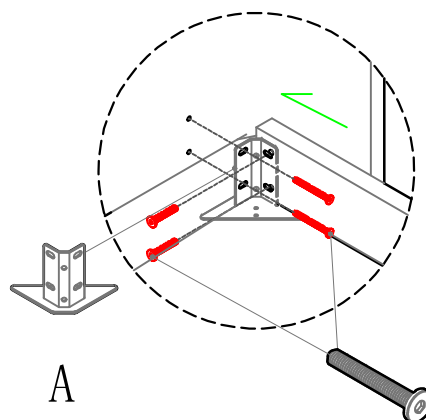


A


C

INSTALLATION OF HEADBOARD

OPTION B

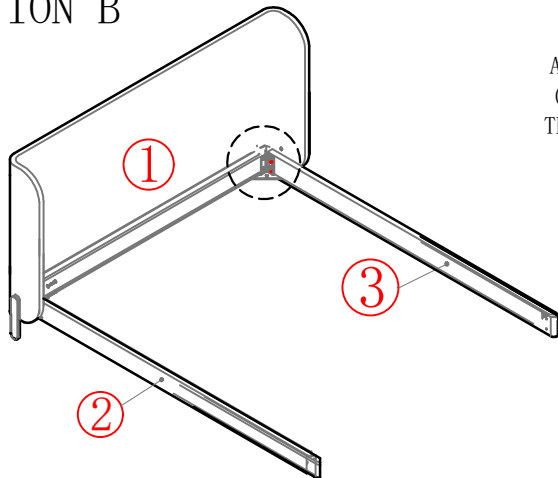


ATTACH THE METAL CONNECTOR (A) TO THE HEADBOARD (1). THEN CONNECT THE SIDE RAILS (2) USING THE BOLTS (C).

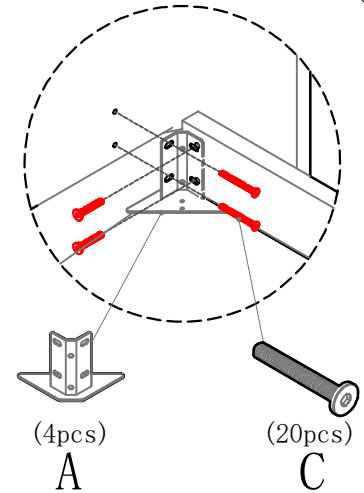

3

INSTALLATION OF HEADBOARD

OPTION B


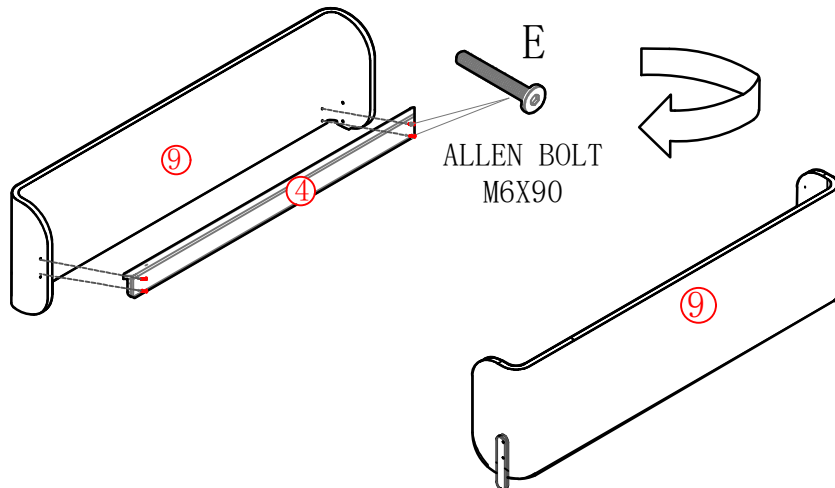


INSERT THE BOLT (E) DIRECTLY THROUGH THE SPECIFIED HOLES ON THE FOOTBOARD.

4


INSTALLATION OF FOOTRAIL & FOOTBOARD CONNECTOR

OPTION B

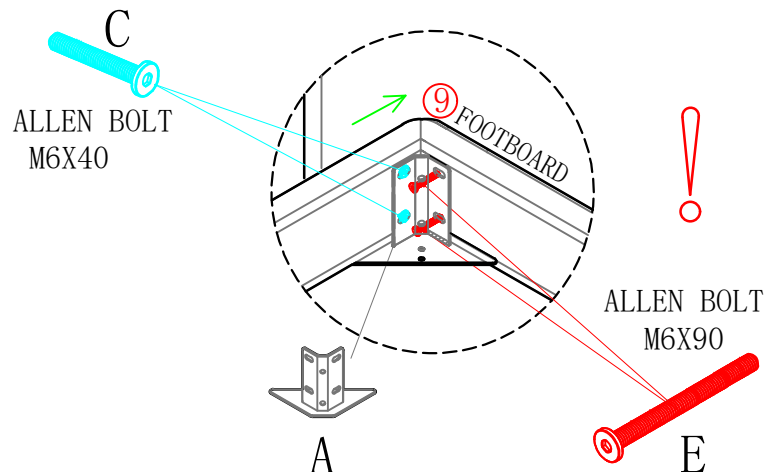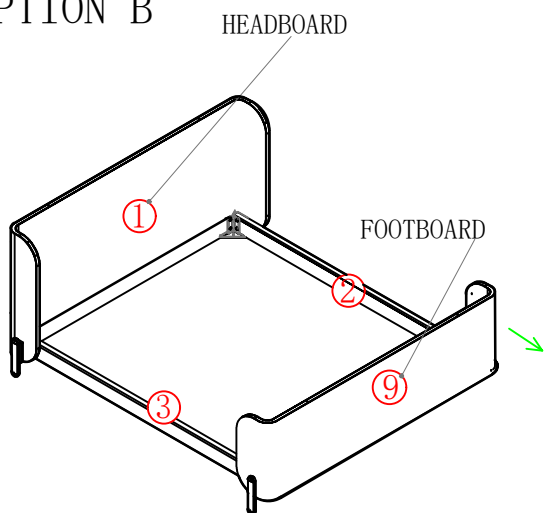



5

INSTALLATION OF FOOTBOARD

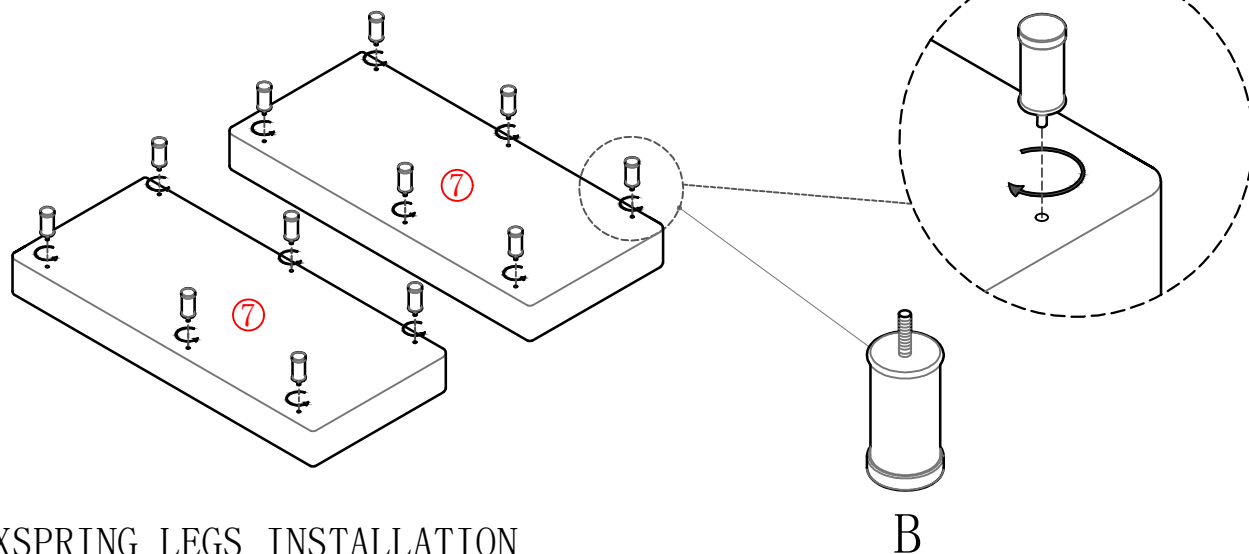

OPTION A

OPTION B

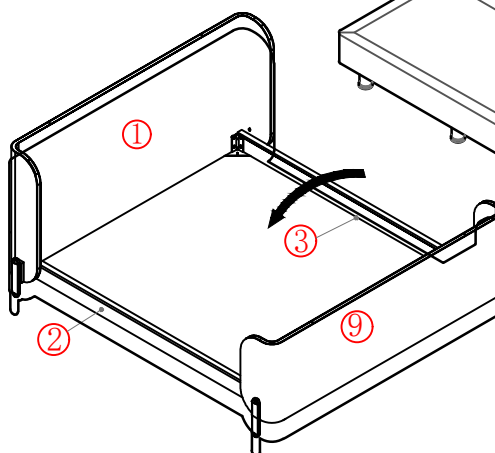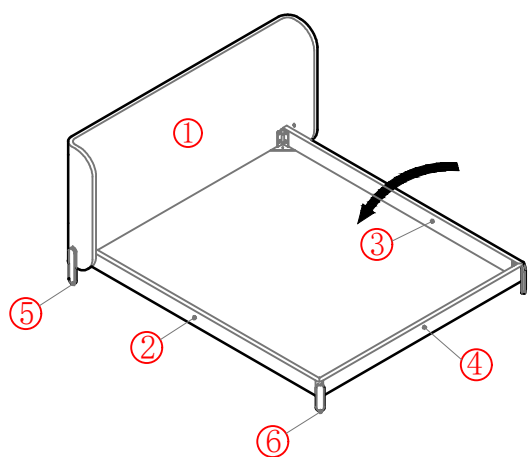




FOR BOTH OPTIONS
A AND B

BOXSPRINGS

OPTION A


OPTION B

OPTION 1

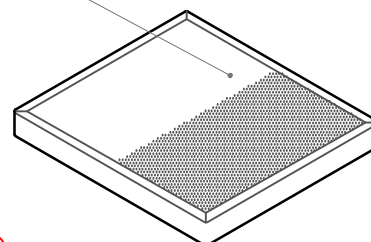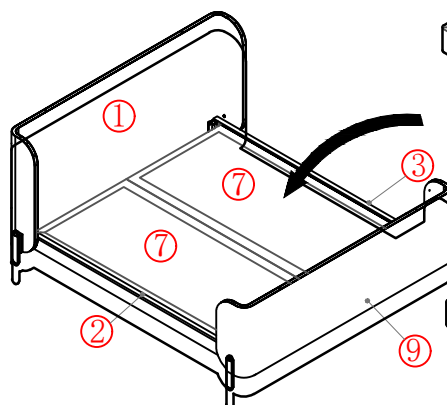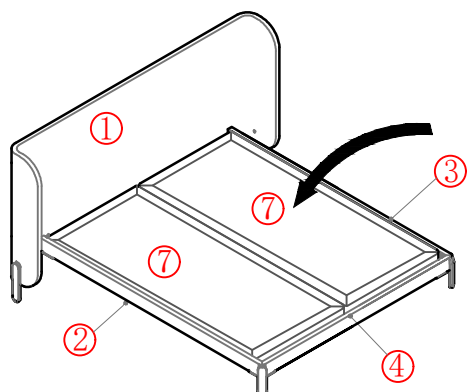

FOR BOTH OPTIONS
A AND B

OPTION 2

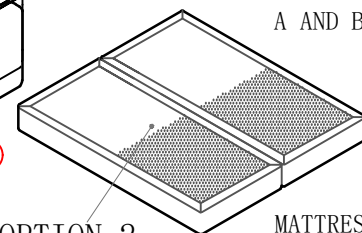

MATTRESSES