

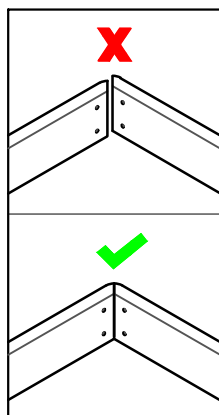


<p>① (1pc)</p> <p>HEADBOARD</p>	<p>② (1pc)</p> <p>LEFT SIDE RAIL</p>	<p>③ (1pc)</p> <p>RIGHT SIDE RAIL</p>	<p>④ (1pc)</p> <p>FOOT RAIL</p>
<p>⑤ OPTION-A (2pcs) OPTION-B (4pcs)</p> <p>HEADBOARD/FOOTBOARD DECORATIVE LEGS - LARGE</p>	<p>⑥ OPTION-A (2pcs)</p> <p>BEDFRAME DECORATIVE LEGS - SMALL</p>	<p>⑦ (2pcs)</p> <p>BOXSPRING</p>	<p>⑧ (1pc)</p> <p>MATTRESS</p>
<p>⑨ OPTION-B (1pc)</p> <p>FOOTBOARD</p>	<p>A (4pcs)</p> <p>METAL CONNECTOR</p>	<p>B (12pcs)</p> <p>BOXSPRING LEGS</p>	<p>C OPTION-A (16pcs) OPTION-B (20pcs)</p> <p>ALLEN BOLT M6X40</p>
<p>D OPTION-A (4pcs)</p> <p>ALLEN BOLT M6X50</p>	<p>E OPTION-A (4pcs) OPTION-B (8pcs)</p> <p>ALLEN BOLT M6X90</p>	<p>F (1pc)</p> <p>ALLEN KEY</p>	<p>G OPTION-B (2pcs)</p> <p>FOOTBOARD- MOUNTING KIT</p>
			<p>F OPTION-A (4pcs) OPTION-B (8pcs)</p> <p>M6 PLAIN WASHER</p>

OPTION A

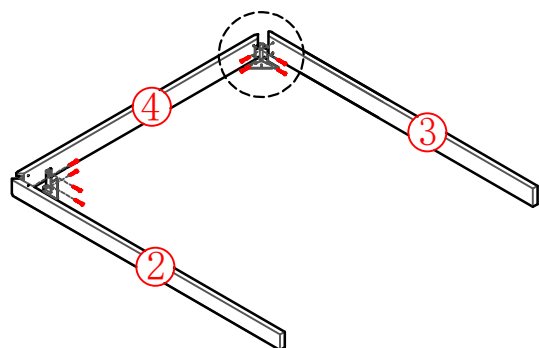


PROPER CORNER
ALIGNMENT

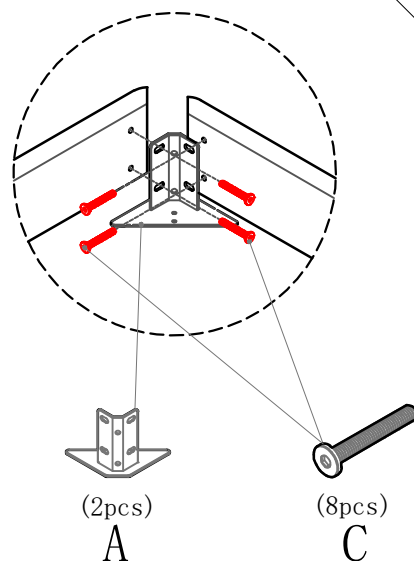


1

BEDFRAME INSTALLATION / NO FOOTBOARD

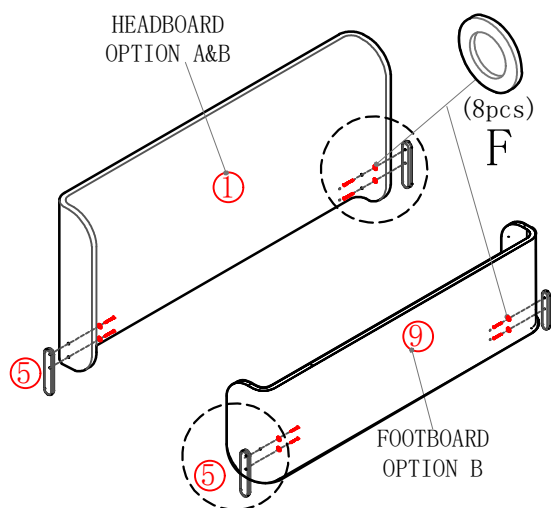


DECORATIVE LEGS INSTALLATION

FOR OPTION A, ATTACH THE
SMALL DECORATIVE LEGS ((6))
TO THE CORNER OUTER BEDFRAME
USING BOLT D.

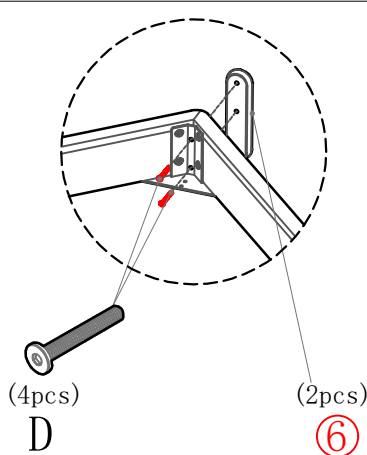


FOR OPTION B, ON OUTER SIDE
OF HEADBOARD & FOOTBOARD
ATTACH LARGE DECORATIVE LEGS
((5)) WITH BOLT E & WASHER F.

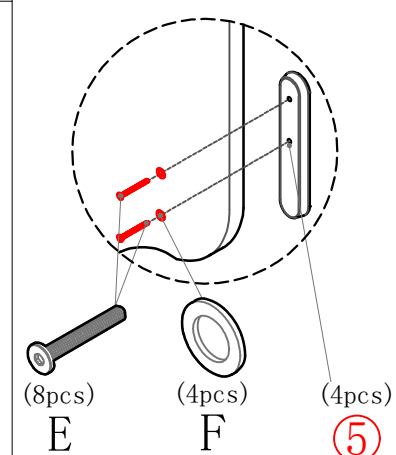


2

OPTION A

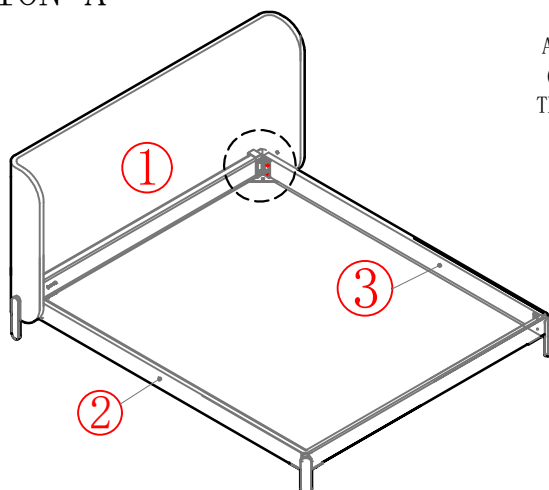


ATTACH THE METAL CONNECTOR
(A) TO THE HEADBOARD ((1)).
THEN CONNECT THE SIDE RAILS
((2)) USING THE BOLTS (C).

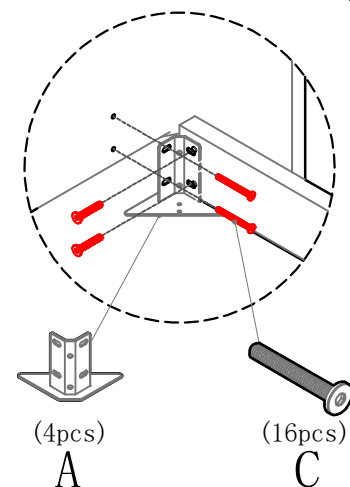


3

INSTALLATION OF HEADBOARD

OPTION B

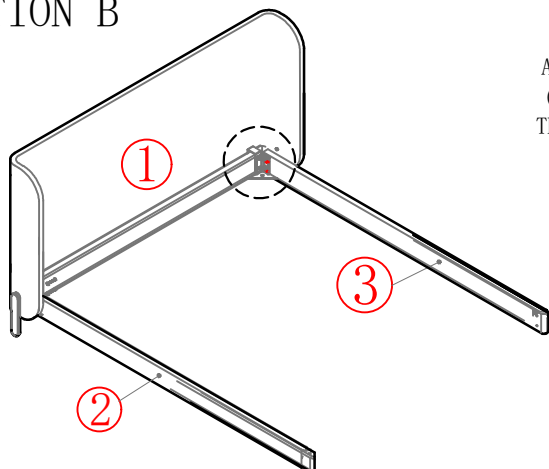


ATTACH THE METAL CONNECTOR (A) TO THE HEADBOARD (1). THEN CONNECT THE SIDE RAILS (2) USING THE BOLTS (C).

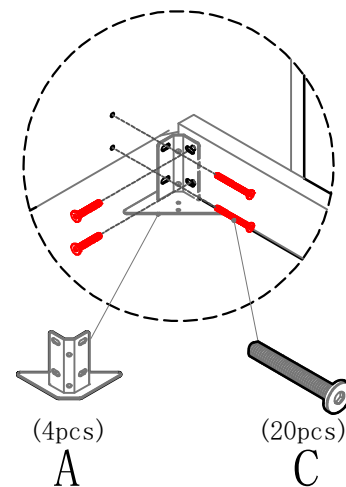


3

INSTALLATION OF HEADBOARD


OPTION B

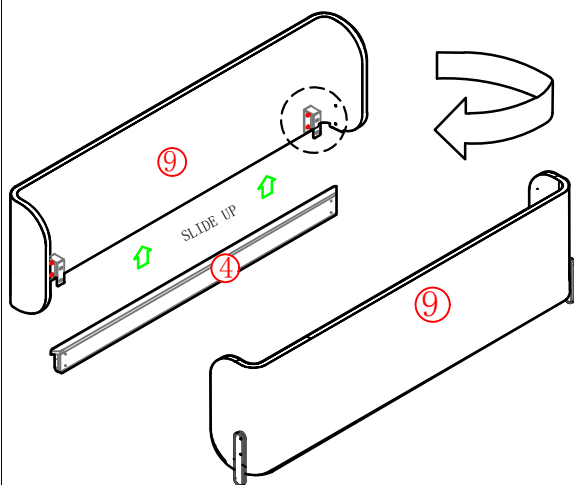

INSERT THE BOLT (C) INTO THE DESIGNATED HOLES ON THE FOOTBOARD CONNECTOR TIGHTEN TO SECURE.

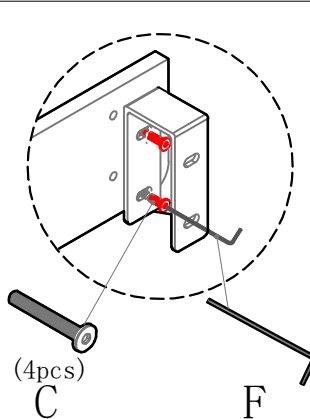


SLIDE THE FOOTRAIL (4) UPWARD INTO THE ATTACHED FOOTBOARD CONNECTOR.

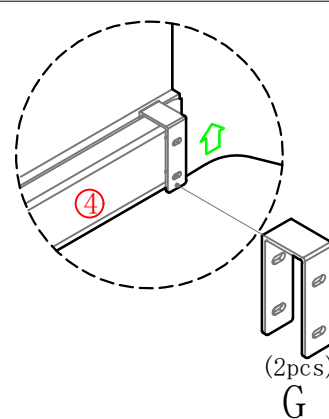


4

INSTALLATION OF FOOTRAIL & FOOTBOARD CONNECTOR

OPTION B

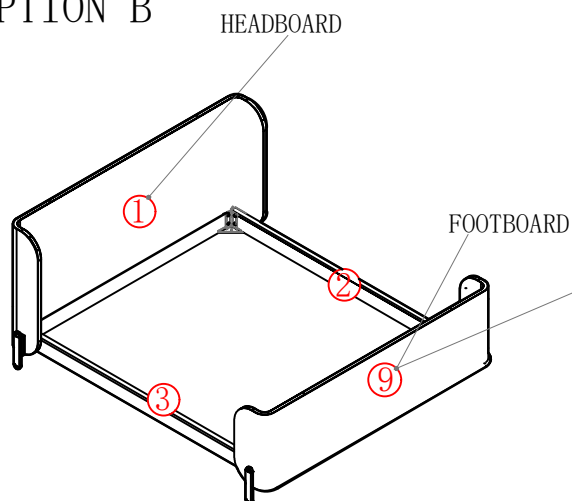


SLIDE FOOT RAIL DOWN INTO THE CONNECTOR. ALIGN HOLES. THEN INSERT BOLT (C) INTO THE LEFT/RIGHT HOLES. TIGHTEN TO SECURE.

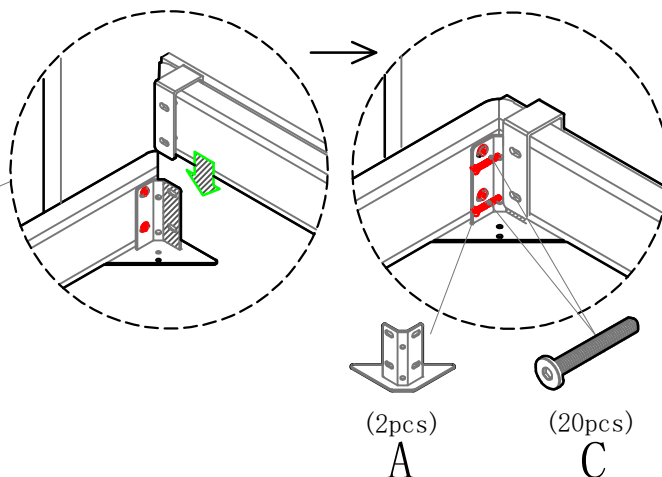

5

INSTALLATION OF FOOTBOARD



6

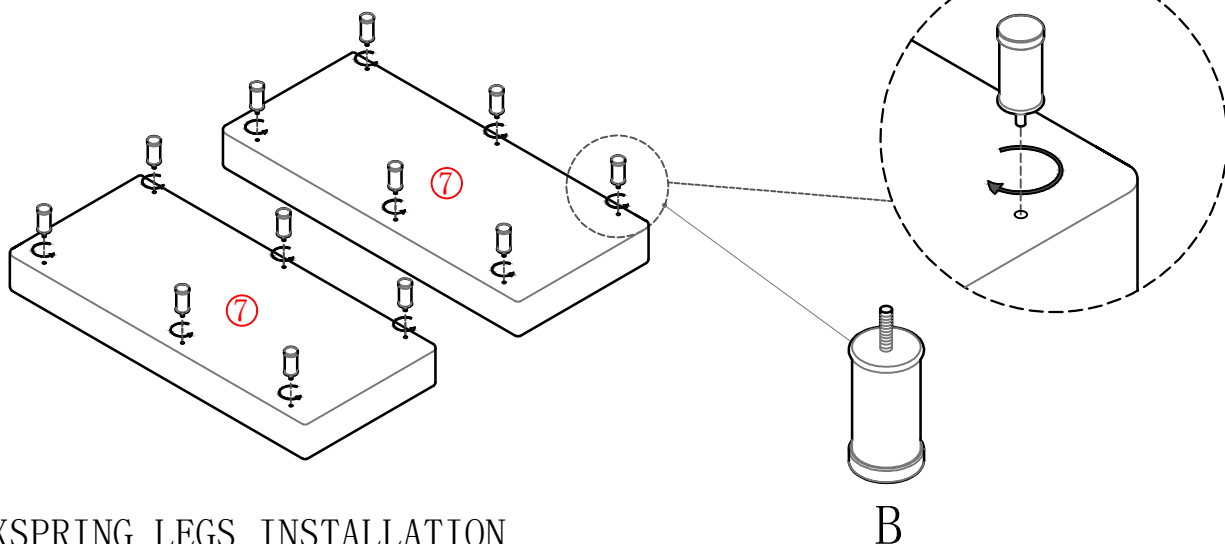

7

OPTION A

OPTION B

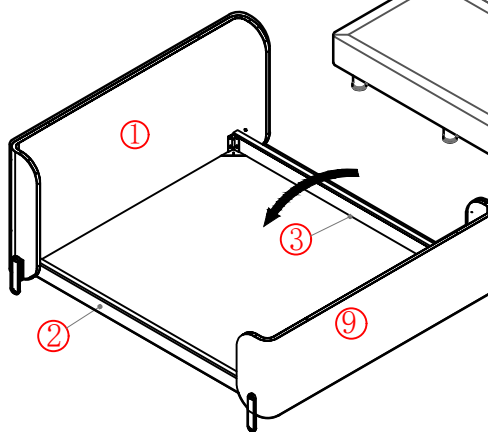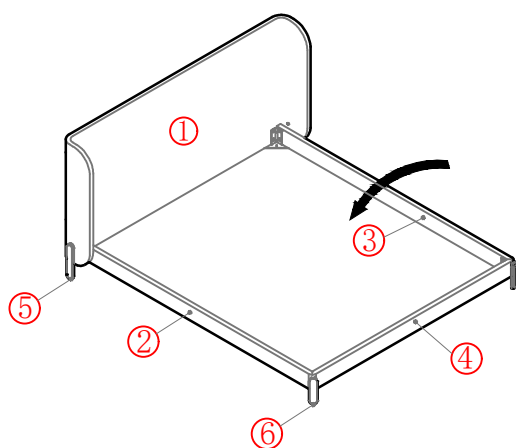

FOR BOTH OPTIONS
A AND B




BOXSPRINGS

8

OPTION A


OPTION B

⑧ OPTION 1

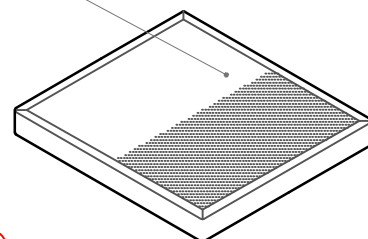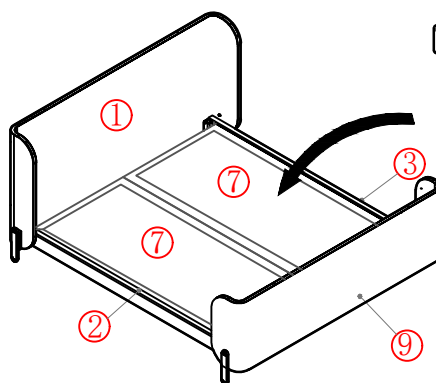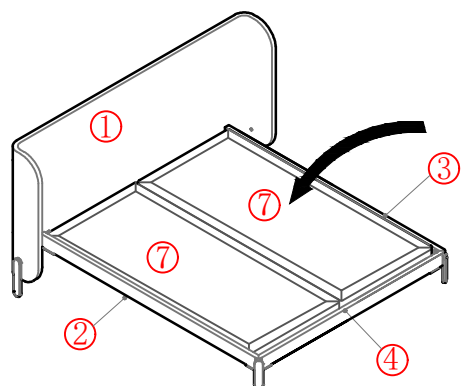

FOR BOTH OPTIONS
A AND B

⑦ OPTION 2

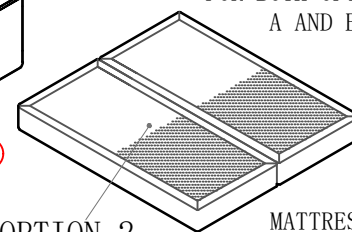

MATTRESSES